


# Service Service Service

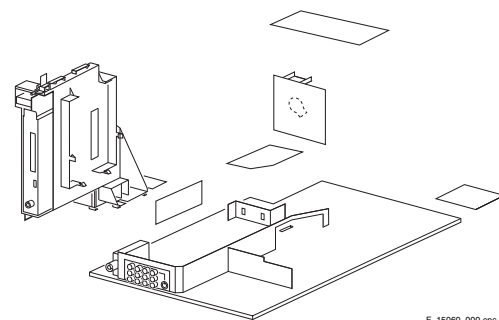

F\_15060\_000.eps  
210305

# Service Manual

Contents	Page
1. Technical Specifications, Connections, and Chassis Overview	2
2. Safety Instructions, Warnings, and Notes	4
3. Directions for Use	6
4. Mechanical Instructions	7
5. Service Modes, Error Codes, and Fault Finding	8
6. <i>Block Diagrams, Testpoint Overviews, and Waveforms</i>	
Wiring Diagram	21
Block Diagram Supply and Deflection	22
Testpoint Overview Mono Carrier	23
Block Diagram Video	24
Testpoint Overview CRT Panel (Multi Board)	25
Block Diagram Audio	26
Block Diagram Control & I2C Overview	27
Supply Lines Overview	28
7. <i>Circuit Diagrams and PWB Layouts</i>	
Mono Carrier: Power Supply	(A1) 29
Mono Carrier: Deflection	(A2) 30
Mono Carrier: Tuner IF	(A3) 31
Mono Carrier: Hercules	(A4) 32
Mono Carrier: Features & Connectivities	(A5) 33
Mono Carrier: Audio Amplifier	(A7) 34
Mono Carrier: Rear I/O Cinch	(A8) 35
Mono Carrier: Front Control	(A9) 36
Mono Carrier: Diversity Tables A2 & A4	36
Mono Carrier: AUX Power Supply	(A10) 37
CRT Panel (Multi Board)	(B1) 44
CRT Panel: RGB Amplifier (Multi Board)	(B2) 45
CRT Panel: Rot. & SCAVEM (Multi Board)	(B3) 46
Side AV + HP Panel (PV2)	(D) 48
Side AV + HP Panel (FL13)	(D) 50
Top Control Panel (PV2)	(E) 52
Top Control Panel (FL13)	(P) 52

Contents	Page
Front Interface Panel (FL13)	(J) 55
Front Interface Panel (PV2)	(J) 55
Deflection Controller - ATSC	(K1) 58
RGB Buffer- ATSC	(K2) 59
8. Alignments	61
9. Circuit Descriptions, List of Abbreviations, and IC Data Sheets	66
Abbreviation List	68
IC Data Sheets	70
10. Spare Parts List	71
11. Revision List	72

©Copyright 2005 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.  
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.



# 1. Technical Specifications, Connections, and Chassis Overview

## Index of this chapter:

- 1.1 Technical Specifications
- 1.2 Connections
- 1.3 Chassis Overview

## Notes:

- Described specifications are valid for the *whole* product range.
- Figures below can deviate slightly from the actual situation, due to different set executions.

## 1.1 Technical Specifications

### 1.1.1 Reception

Display type	: CRT-DV-SF
Screen size	: 26", 16:9
	: 27", 4:3
	: 30", 16:9
	: 32", 4:3
Tuning system	: PLL
Color systems	: NTSC
Sound systems	: BTSC
Channel selections	: 181, full cable
IF picture carrier	: 45.75 MHz
Aerial input	: 75 ohm, F-type
A/V Connections	: NTSC M (3.58 - 4.5)


### 1.1.2 Miscellaneous

Audio output:	: 2 x 10 W
Power supply:	
- Mains voltage range	: 90 - 140 V <sub>ac</sub>
- Mains frequency	: 60 Hz
Ambient conditions:	
- Temperature range	: +5 to +45 °C
- Maximum humidity	: 90% R.H.
Power consumption:	
- Normal operation	: from 119 W
	: to 133 W
- Standby	: < 1 W

## 1.2 Connections

**Note:** The following connector color abbreviations are used (acc. to DIN/IEC 757): Bk= Black, Bu= Blue, Gn= Green, Gy= Grey, Rd= Red, Wh= White, Ye= Yellow.

### 1.2.1 Top Control and Front / Side Connections

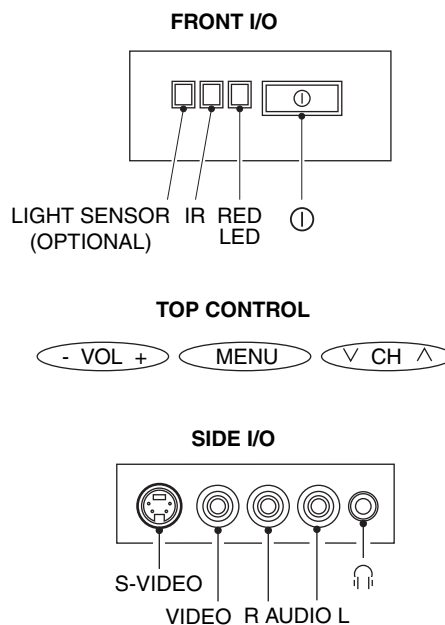

F\_15050\_005.eps  
110205

Figure 1-1 Top control and Front / Side connections

### Hosiden: SVHS - In


1 - GND	Ground	⏏
2 - GND	Ground	⏏
3 - Y	1 V <sub>pp</sub> / 75 ohm	⏏
4 - C	0.3 V <sub>pp</sub> / 75 ohm	⏏

### Audio / Video In

Ye - Video (CVBS)	1 V <sub>pp</sub> / 75 ohm	⏏
Wh - Audio - L	0.2 V <sub>rms</sub> / 10 kohm	⏏
Rd - Audio - R	0.2 V <sub>rms</sub> / 10 kohm	⏏
Bk - Headphone	8 - 600 Ohm / 4 mW	⏏



### 1.2.2 Rear Connections

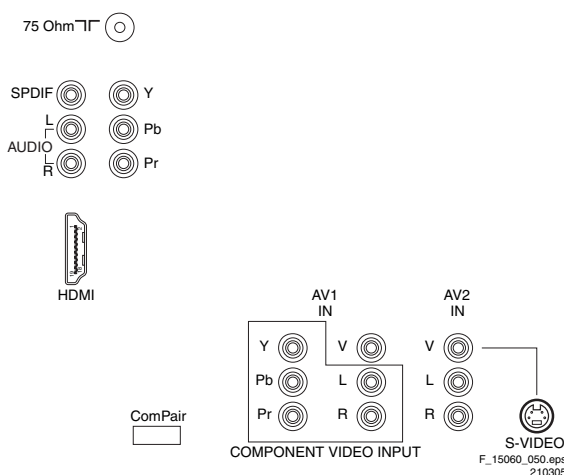


F\_15060\_050.eps  
210305

Figure 1-2 Rear connections

<b>Aerial In</b> - F-type	Coax, 75 ohm		Rd - Audio - R	0.5 V <sub>rms</sub> / 10 kohm	
<b>Monitor Out</b>			<b>AV2 In (SVHS)</b>		
Ye - Video (CVBS)	1 V <sub>pp</sub> / 75 ohm		1 - Ground	GND	
Wh - Audio - L	0.5 V <sub>rms</sub> / 1 kohm		2 - Ground	GND	
Rd - Audio - R	0.5 V <sub>rms</sub> / 1 kohm		3 - Y	1 V <sub>pp</sub> / 75 ohm	
			4 - C	0.3 V <sub>pp</sub> / 75 ohm	
<b>YUV In</b>					
Bu - U	0.7 V <sub>pp</sub> / 75 ohm				
Rd - V	0.7 V <sub>pp</sub> / 75 ohm				
Gn - Y	0.7 V <sub>pp</sub> / 75 ohm				
<b>AV1 In</b>					
Ye - Video (CVBS)	1 V <sub>pp</sub> / 75 ohm				
Wh - Audio - L	0.5 V <sub>rms</sub> / 10 kohm				
Rd - Audio - R	0.5 V <sub>rms</sub> / 10 kohm				
<b>AV2 In</b>					
Ye - Video (CVBS)	1 V <sub>pp</sub> / 75 ohm				
Wh - Audio - L	0.5 V <sub>rms</sub> / 10 kohm				

### 1.3 Chassis Overview

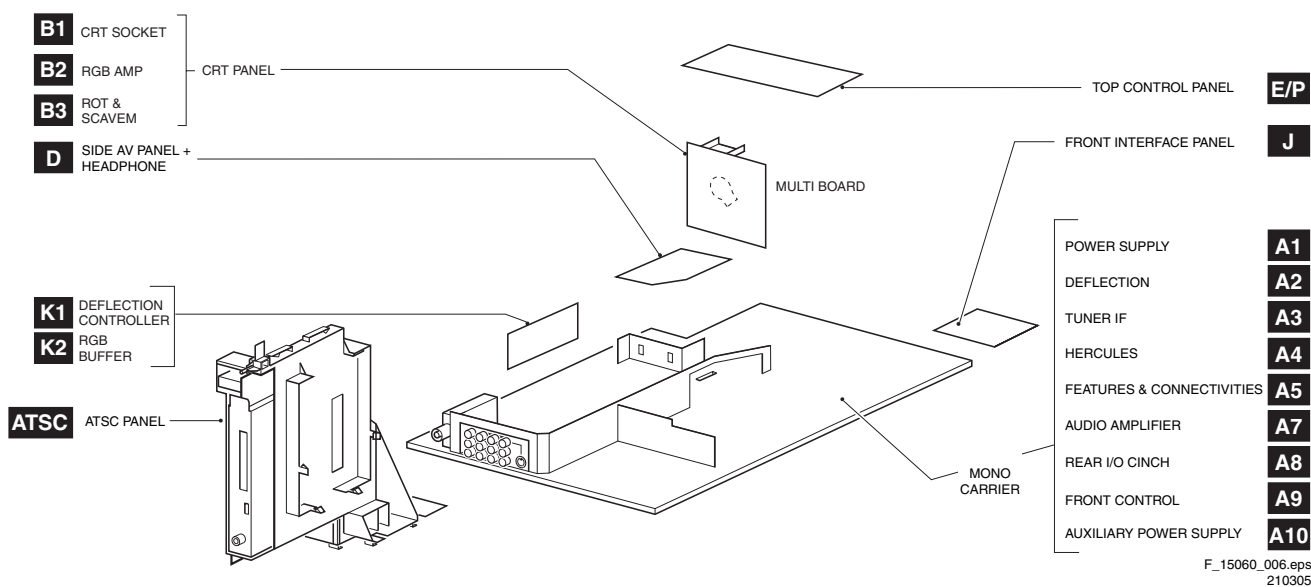

F\_15060\_006.eps  
210305

Figure 1-3 PWB location

## 2. Safety Instructions, Warnings, and Notes

### Index of this chapter:

- 2.1 Safety Instructions
- 2.2 Maintenance Instructions
- 2.3 Warnings
- 2.4 Notes

### 2.1 Safety Instructions

Safety regulations require that **during** a repair:

- Connect the set to the Mains (AC Power) via an isolation transformer (> 800 VA).
- Replace safety components, indicated by the symbol ▲, only by components identical to the original ones. Any other component substitution (other than original type) may increase risk of fire or electrical shock hazard.
- Wear safety goggles when you replace the CRT.

Safety regulations require that **after** a repair, the set must be returned in its original condition. Pay in particular attention to the following points:

- General repair instruction: as a strict precaution, we advise you to re-solder the solder connections through which the horizontal deflection current is flowing. In particular this is valid for the:
  1. Pins of the line output transformer (LOT).
  2. Fly-back capacitor(s).
  3. S-correction capacitor(s).
  4. Line output transistor.
  5. Pins of the connector with wires to the deflection coil.
  6. Other components through which the deflection current flows.

**Note:** This re-soldering is advised to prevent bad connections due to metal fatigue in solder connections, and is therefore only necessary for television sets more than two years old.

- Route the wire trees and EHT cable correctly and secure them with the mounted cable clamps.
- Check the insulation of the Mains (AC Power) lead for external damage.
- Check the strain relief of the mains (AC Power) cord for proper function, to prevent the cord from touching the CRT, hot components, or heat sinks.
- Check the electrical DC resistance between the Mains (AC Power) plug and the secondary side (only for sets which have a Mains (AC Power) isolated power supply):
  1. Unplug the Mains (AC Power) cord and connect a wire between the two pins of the Mains (AC Power) plug.
  2. Set the Mains (AC Power) switch to the "on" position (keep the Mains (AC Power) cord unplugged!).
  3. Measure the resistance value between the pins of the Mains (AC Power) plug and the metal shielding of the tuner or the aerial connection on the set. The reading should be between 4.5 Mohm and 12 Mohm.
  4. Switch "off" the set, and remove the wire between the two pins of the Mains (AC Power) plug.
- Check the cabinet for defects, to avoid touching of any inner parts by the customer.

### 2.2 Maintenance Instructions


We recommend a maintenance inspection carried out by qualified service personnel. The interval depends on the usage conditions:

- When a customer uses the set under normal circumstances, for example in a living room, the recommended interval is three to five years.
- When a customer uses the set in an environment with higher dust, grease, or moisture levels, for example in a kitchen, the recommended interval is one year.
- The maintenance inspection includes the following actions:
  1. Perform the "general repair instruction" noted above.

2. Clean the power supply and deflection circuitry on the chassis.
3. Clean the picture tube panel and the neck of the picture tube.

### 2.3 Warnings

- In order to prevent damage to ICs and transistors, avoid all high voltage flashovers. In order to prevent damage to the picture tube, use the method shown in figure "Discharge picture tube", to discharge the picture tube. Use a high voltage probe and a multi-meter (position  $V_{DC}$ ). Discharge until the meter reading is 0 V (after approx. 30 s).

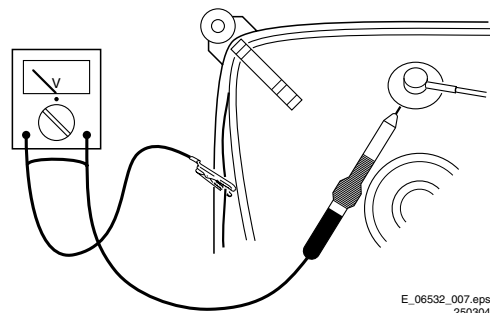

E\_06532\_007.eps  
250304

Figure 2-1 Discharge picture tube

- All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD ▲). Careless handling during repair can reduce life drastically. Make sure that, during repair, you are connected with the same potential as the mass of the set by a wristband with resistance. Keep components and tools also at this same potential. Available ESD protection equipment:
  - Complete kit ESD3 (small tablemat, wristband, connection box, extension cable and earth cable) 4822 310 10671.
  - Wristband tester 4822 344 13999.
- Be careful during measurements in the high voltage section.
- Never replace modules or other components while the unit is switched "on".
- When you align the set, use plastic rather than metal tools. This will prevent any short circuits and the danger of a circuit becoming unstable.

### 2.4 Notes

#### 2.4.1 General

- Measure the voltages and waveforms with regard to the chassis (= tuner) ground (⊥), or hot ground (⊥), depending on the tested area of circuitry. The voltages and waveforms shown in the diagrams are indicative. Measure them in the Service Default Mode (see chapter 5) with a colour bar signal and stereo sound (L: 3 kHz, R: 1 kHz unless stated otherwise) and picture carrier at 475.25 MHz for PAL, or 61.25 MHz for NTSC (channel 3).
- Where necessary, measure the waveforms and voltages with (⏏) and without (⏏) aerial signal. Measure the voltages in the power supply section both in normal operation (⏏) and in stand-by (⏏). These values are indicated by means of the appropriate symbols.
- The semiconductors indicated in the circuit diagram and in the parts lists, are interchangeable per position with the semiconductors in the unit, irrespective of the type indication on these semiconductors.



- Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the "double-D symbol", are trademarks of Dolby Laboratories.

#### 2.4.2 Schematic Notes

- All resistor values are in ohms and the value multiplier is often used to indicate the decimal point location (e.g. 2K2 indicates 2.2 kohm).
- Resistor values with no multiplier may be indicated with either an "E" or an "R" (e.g. 220E or 220R indicates 220 ohm).
- All capacitor values are given in micro-farads ( $\mu = \times 10^{-6}$ ), nano-farads ( $n = \times 10^{-9}$ ), or pico-farads ( $p = \times 10^{-12}$ ).
- Capacitor values may also use the value multiplier as the decimal point indication (e.g. 2p2 indicates 2.2 pF).
- An "asterisk" (\*) indicates component usage varies. Refer to the diversity tables for the correct values.
- The correct component values are listed in the Spare Parts List. Therefore, always check this list when there is any doubt.

#### 2.4.3 Rework on BGA (Ball Grid Array) ICs

##### General

Although (LF)BGA assembly yields are very high, there may still be a requirement for component rework. By rework, we mean the process of removing the component from the PWB and replacing it with a new component. If an (LF)BGA is removed from a PWB, the solder balls of the component are deformed drastically so the removed (LF)BGA has to be discarded.

##### Device Removal

As is the case with any component that, it is essential when removing an (LF)BGA, the board, tracks, solder lands, or surrounding components are not damaged. To remove an (LF)BGA, the board must be uniformly heated to a temperature close to the reflow soldering temperature. A uniform temperature reduces the chance of warping the PWB. To do this, we recommend that the board is heated until it is certain that all the joints are molten. Then carefully pull the component off the board with a vacuum nozzle. For the appropriate temperature profiles, see the IC data sheet.

##### Area Preparation

When the component has been removed, the vacant IC area must be cleaned before replacing the (LF)BGA.

Removing an IC often leaves varying amounts of solder on the mounting lands. This excessive solder can be removed with either a solder sucker or solder wick. The remaining flux can be removed with a brush and cleaning agent.

After the board is properly cleaned and inspected, apply flux on the solder lands and on the connection balls of the (LF)BGA.

**Note:** Do not apply solder paste, as this has shown to result in problems during re-soldering.

##### Device Replacement

The last step in the repair process is to solder the new component on the board. Ideally, the (LF)BGA should be aligned under a microscope or magnifying glass. If this is not possible, try to align the (LF)BGA with any board markers. So as not to damage neighbouring components, it may be necessary to reduce some temperatures and times.

##### More Information

For more information on how to handle BGA devices, visit this URL: [www.atyourservice.ce.philips.com](http://www.atyourservice.ce.philips.com) (needs subscription, not available for all regions). After login, select "Magazine", then go to "Workshop Information". Here you will find Information on how to deal with BGA-ICs.

#### 2.4.4 Lead Free Solder

Philips CE is producing lead-free sets (PBF) from 1.1.2005 onwards.

**Identification:** The bottom line of a type plate gives a 14-digit serial number. Digits 5 and 6 refer to the production year, digits 7 and 8 refer to production week (in example below it is 1991 week 18).



E\_06532\_024.eps  
230205

Figure 2-2 Serial number example

Regardless of the special lead-free logo (which is not always indicated), one must treat all sets from this date onwards according to the rules as described below.

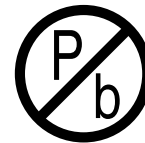


Figure 2-3 Lead-free logo

Due to lead-free technology some rules have to be respected by the workshop during a repair:

- Use only lead-free soldering tin Philips SAC305 with order code 0622 149 00106. If lead-free solder paste is required, please contact the manufacturer of your soldering equipment. In general, use of solder paste within workshops should be avoided because paste is not easy to store and to handle.
- Use only adequate solder tools applicable for lead-free soldering tin. The solder tool must be able
  - To reach at least a solder-tip temperature of 400°C.
  - To stabilise the adjusted temperature at the solder-tip.
  - To exchange solder-tips for different applications.
- Adjust your solder tool so that a temperature around 360°C - 380°C is reached and stabilised at the solder joint. Heating time of the solder-joint should not exceed ~ 4 sec. Avoid temperatures above 400°C, otherwise wear-out of tips will rise drastically and flux-fluid will be destroyed. To avoid wear-out of tips, switch "off" unused equipment or reduce heat.
- Mix of lead-free soldering tin/parts with leaded soldering tin/parts is possible but PHILIPS recommends strongly to **avoid** mixed regimes. If not to avoid, clean carefully the solder-joint from old tin and re-solder with new tin.
- Use only original spare-parts listed in the Service-Manuals. Not listed standard material (commodities) has to be purchased at external companies.
- Special information for lead-free BGA ICs: these ICs will be delivered in so-called "dry-packaging" to protect the IC against moisture. This packaging may only be opened short before it is used (soldered). Otherwise the body of the IC gets "wet" inside and during the heating time the structure of the IC will be destroyed due to high (steam-)pressure inside the body. If the packaging was opened before usage, the IC has to be heated up for some hours (around 90°C) for drying (think of ESD-protection!).  
**Do not re-use BGAs at all!**
- For sets produced before 1.1.2005, containing leaded soldering tin and components, all needed spare parts will

be available till the end of the service period. For the repair of such sets nothing changes.

In case of doubt whether the board is lead-free or not (or with mixed technologies), you can use the following method:

- Always use the highest temperature to solder, when using SAC305 (see also instructions below).
- De-solder thoroughly (clean solder joints to avoid mix of two alloys).

**Caution:** For BGA-ICs, you **must** use the correct temperature-profile, which is coupled to the 12NC. For an overview of these profiles, visit the website [www.atyourservice.ce.philips.com](http://www.atyourservice.ce.philips.com) (needs subscription, but is not available for all regions) You will find this and more technical information within the "Magazine", chapter "Workshop information".

For additional questions please contact your local repair help desk.

#### 2.4.5 Practical Service Precautions

- **It makes sense to avoid exposure to electrical shock.** While some sources are expected to have a possible dangerous impact, others of quite high potential are of limited current and are sometimes held in less regard.
- **Always respect voltages.** While some may not be dangerous in themselves, they can cause unexpected reactions that are best avoided. Before reaching into a powered TV set, it is best to test the high voltage insulation. It is easy to do, and is a good service precaution.

## 3. Directions for Use

You can download this information from the following websites:

<http://www.philips.com/support>

<http://www.p4c.philips.com>

## 4. Mechanical Instructions

### Index of this chapter:

- 4.1 Assy/Panel Removal
- 4.2 Set Re-assembly


#### Notes:

- Only the ATSC module and deflection controller panel disassembly are described. For other disassembly instructions, see the Service manual for L05U AA.
- Figures below can deviate slightly from the actual situation, due to different set executions.

### 4.1 Assy/Panel Removal

#### 4.1.1 ATSC Assy

1. Release the fixation clamp and pull the bracket backwards.

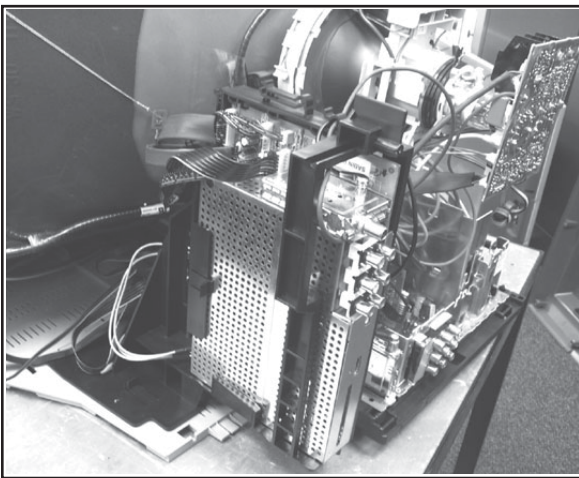


F\_15060\_041.eps  
180305

Figure 4-1 ATSC bracket

#### 4.1.2 ATSC Module Removal


1. Disconnect all cables that lead to the module.
2. Unlock the clip at the left side of the bracket and pull out the ATSC module.

#### 4.1.3 ATSC Panel Removal

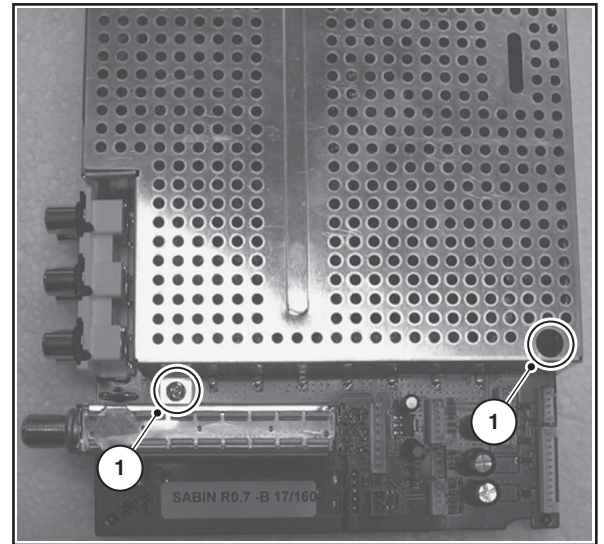

F\_15060\_042.eps  
180305

Figure 4-2 ATSC Module Top Shield Removal

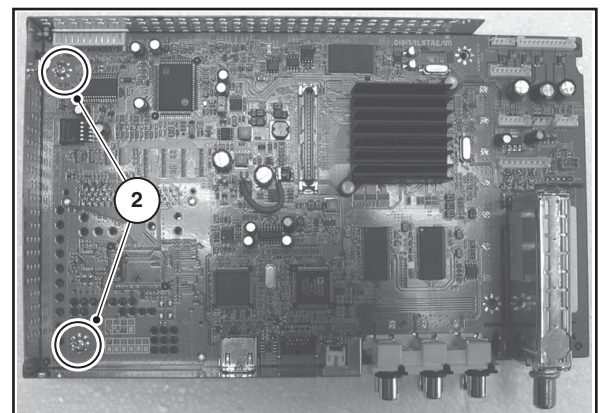

F\_15060\_043.eps  
180305

Figure 4-3 ATSC Panel Removal

1. Unscrew the shield mounting screws [1] and lift the top shield.
2. Unscrew the ATSC panel mounting screws [2] and take out the ATSC panel.

#### 4.1.4 Deflection Control Panel

1. Remove all cables.
2. Pull the panel upwards out of the connectors.

### 4.2 Set Re-assembly

To re-assemble the whole set, do all processes in reverse order.

**Note:** before you mount the rear cover, perform the following checks:

- Check whether the AC power cord is mounted correctly in its guiding brackets.
- Check whether all cables are replaced in their original position

## 5. Service Modes, Error Codes, and Fault Finding

### Index of this chapter:

- 5.1 Test Points
- 5.2 Service Modes
- 5.3 Problems and Solving Tips Related to CSM
- 5.4 ComPair
- 5.5 Error Codes
- 5.6 The Blinking LED Procedure
- 5.7 Protections
- 5.8 Fault Finding and Repair Tips

### 5.1 Test Points

This chassis is equipped with test points in the service printing. In the schematics test points are identified with a rectangle box around Fxxx or Ixxx. These test points are specifically mentioned in the "Test Point Overview" as "half moons" with a dot in the center.

**Table 5-1 Test point overview**

Test point	Circuit	Diagr.
F508, F535, F536, F537, F552, F561, F563, F573, F664, I513, I518, I519, I524, I531, I533, I546	Power supply	A1
F401, F412, F413, F414, F418, F452, F453, F455, F456, F458, F459, F460, F461, I408, I416, I417, I420, I462, I468	Line & Frame Deflection	A2
F003, F004, I001, I002	Tuner IF	A3
F201, F203, F205, F206	Hercules	A4
F240, F241, F242	Features & Connectivities	A5
F952, F955, I951, I952	Audio Amplifier	A7
F692	Front Control	A9
F331, F332, F333, F338, F339, F341, F351, F353, F354	CRT Panel	B1
F361, F362, F381, F382	ECO Scavem	B2

Perform measurements under the following conditions:

- Television set in Service Default Alignment Mode.
- Video input: Color bar signal.
- Audio input: 3 kHz left channel, 1 kHz right channel.

### 5.2 Service Modes

Service Default mode (SDM) and Service Alignment Mode (SAM) offers several features for the service technician, while the Customer Service Mode (CSM) is used for communication between the call center and the customer.

This chassis also offers the option of using ComPair, a hardware interface between a computer and the TV chassis. It offers the abilities of structured troubleshooting, error code reading, and software version readout for all chassis.

*Minimum requirements for ComPair:* a Pentium processor, a Windows OS, and a CD-ROM drive (see also paragraph "ComPair").

#### 5.2.1 Service Default Mode (SDM)

##### Purpose

- To create a predefined setting for measurements to be made.
- To override software protections.
- To start the blinking LED procedure.

##### Specifications

- Tuning frequency: 61.25 MHz (channel 3).
- Color system: NTSC M.
- All picture settings at 50% (brightness, color contrast, hue).
- Bass, treble and balance at 50 %; volume at 25 %.

- All service-unfriendly modes (if present) are disabled. The service unfriendly modes are:
  - Timer / Sleep timer.
  - Child / parental lock.
  - Blue mute.
  - Hotel / hospital mode.
  - Auto shut off (when no "IDENT" video signal is received for 15 minutes).
  - Skipping of non-favorite presets / channels.
  - Auto-storage of personal presets.
  - Auto user menu time-out.
  - Auto Volume Leveling (AVL).


##### How to enter

To enter SDM, use one of the following methods:

- Press the following key sequence on the remote control transmitter: "062596" directly followed by the MENU button (do not allow the display to time out between entries while keying the sequence).
- Short the jumper wire 9252 with a cold ground on the family board (for example the tuner casing) and apply AC power. Then press the power button (remove the short after start-up).
 

**Caution:** Entering SDM by shorting wire 9252 with ground will override the +8V-protection. Do this only for a short period. When doing this, the service-technician must know exactly what he is doing, as it could damage the television set.
- Or via ComPair.

After entering SDM, the following screen is visible, with SDM in the upper right corner of the screen to indicate that the television is in Service Default Mode.

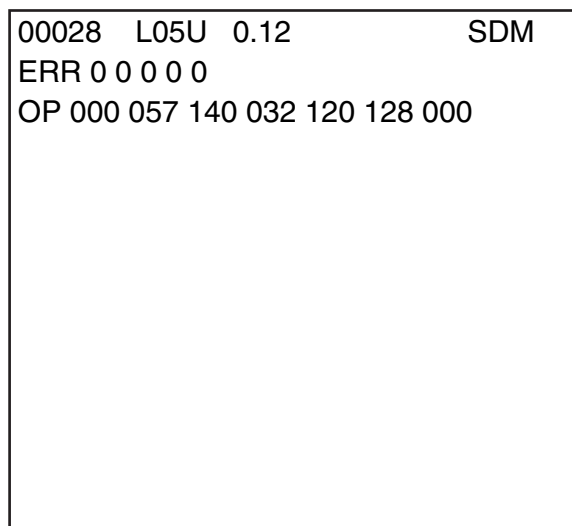

F\_15060\_044.eps  
210305

**Figure 5-1 SDM menu**



**How to navigate**

Use one of the following methods:

- When you press the MENU button on the remote control, the set will switch on the normal user menu in the SDM mode.
- On the TV, press and hold the VOLUME DOWN and press the CHANNEL DOWN for a few seconds, to switch from SDM to SAM and reverse.

**How to exit**

Switch the set to STANDBY by pressing the POWER button on the remote control transmitter or the television set.

If you turn the television set off by removing the AC power (i.e., unplugging the television) without using the POWER button, the television set will remain in SDM when AC power is re-applied, and the error buffer is not cleared.

**5.2.2 Service Alignment Mode (SAM)****Purpose**

- To change option settings.
- To display / clear the error code buffer.
- To perform alignments.

**Specifications**


- Operation hours counter (maximum five digits displayed).
- Software version, Error codes, and Option settings display.
- Error buffer clearing.
- Option settings.
- AKB switching.
- Software alignments (Tuner, White Tone, Geometry & Audio).
- NVM Editor.
- ComPair Mode switching.

**How to enter**

To enter SAM, use one of the following methods:

- Press the following key sequence on the remote control transmitter: **"062596"** directly followed by the OSD/STATUS button (do not allow the display to time out between entries while keying the sequence).
- Or via ComPair.

After entering SAM, the following screen is visible, with SAM in the upper right corner of the screen to indicate that the television is in Service Alignment Mode.

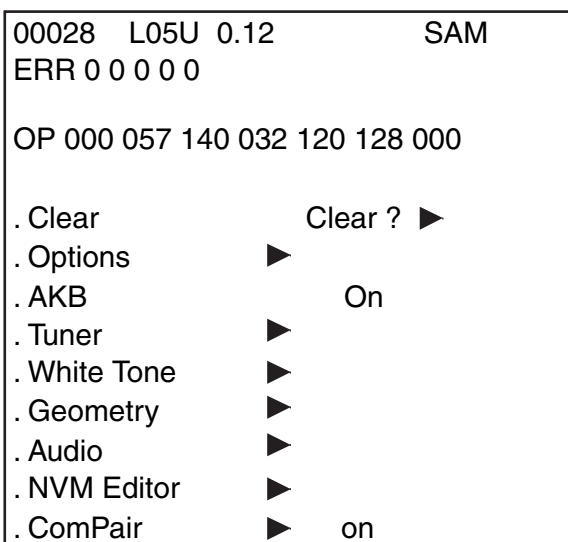

F\_15060\_045.eps  
180305

Figure 5-2 SAM menu

**Menu explanation**

1. **LLLLL**. This represents the run timer. The run timer counts normal operation hours, but does not count standby hours.
2. **AAABCD-x.y**. This is the software identification of the main microprocessor:
  - **A**= the project name (= L05).
  - **B**= the region: E= Europe, A= Asia Pacific, U= NAFTA, L= LATAM.
  - **C**= the software diversity:
    - **Europe**: T= 1 page TXT, F= Full TXT, V= Voice control.
    - **LATAM and NAFTA**: A= ATSC, N= Stereo non-dBx, S= Stereo dBx.
    - **Asian Pacific**: T= TXT, N= non-TXT, C= NTSC.
    - **ALL regions**: M= mono, D= DVD, Q= Mk2.
  - **D**= the language cluster number.
  - **x**= the main software version number (updated with a major change that is incompatible with previous versions).
  - **y**= the sub software version number (updated with a minor change that is compatible with previous versions).
3. **SAM**. Indication of the Service Alignment Mode.
4. **Error Buffer**. Shows all errors detected since the last time the buffer was erased. Five errors possible.
5. **Option Bytes**. Used to set the option bytes. See "Options" in the Alignments section for a detailed description. Seven codes are possible.
6. **Clear**. Erases the contents of the error buffer. Select the CLEAR menu item and press the MENU RIGHT key. The content of the error buffer is cleared.
7. **Options**. Used to set the option bits. See "Options" in the Alignments section for a detailed description.
8. **AKB**. Used to disable (Off) or enable (On) the "black current loop" (AKB= Auto Kine Bias).
9. **Tuner**. Used to align the tuner. See "Tuner" in the Alignments section for a detailed description.
10. **White Tone**. Used to align the white tone. See "White Tone" in the Alignments section for a detailed description.
11. **Geometry**. Used to align the geometry settings of the television. See "Geometry" in the Alignments section for a detailed description.
12. **Audio**. No audio alignment is necessary for this television set.
13. **NVM Editor**. Can be used to change the NVM data in the television set. See table "NVM data" further on.
14. **ComPair**. Can be used to switch on the television to In System Programming (ISP) mode, for software uploading via ComPair. **Caution**: When this mode is selected without ComPair connected, the TV will be blocked. Remove the AC power to reset the TV.

**How to navigate**

- In SAM, select menu items with the MENU UP/DOWN keys on the remote control transmitter. The selected item will be highlighted. When not all menu items fit on the screen, use the MENU UP/DOWN keys to display the next / previous menu items.
- With the MENU LEFT/RIGHT keys, it is possible to:
  - Activate the selected menu item.
  - Change the value of the selected menu item.
  - Activate the selected submenu.
- In SAM, when you press the MENU button twice, the set will switch to the normal user menus (with the SAM mode still active in the background). To return to the SAM menu press the MENU or STATUS/EXIT button.
- When you press the MENU key in while in a submenu, you will return to the previous menu.

**How to store SAM settings**

To store the settings changed in SAM mode, leave the top level SAM menu by using the POWER button on the remote control transmitter or the television set.

**How to exit**

Switch the set to STANDBY by pressing the POWER button on the remote control transmitter or the television set.

If you turn the television set "off" by removing the AC power (i.e., unplugging the television) without using the POWER button, the television set will remain in SAM when AC power is re-applied, and the error buffer is not cleared.

**5.2.3 Customer Service Mode (CSM)****Purpose**

The Customer Service Mode shows error codes and information on the TV's operation settings. The call center can instruct the customer (by telephone) to enter CSM in order to identify the status of the set. This helps the call center to diagnose problems and failures in the TV set before making a service call.

The CSM is a read-only mode; therefore, modifications are not possible in this mode.

**How to enter**

To enter CSM, press the following key sequence on the remote control transmitter: "123654" (do not allow the display to time out between entries while keying the sequence).

Upon entering the Customer Service Mode, the following screen will appear:

```

1 00028 L05U 0.12 CSM
2 CODES 0 0 0 0 0
3 OP 000 057 140 032 120 128 000
4 nnXXnnnn/nnX
5 P3C-1
6 NOT TUNED
7 NTSC
8 STEREO
9 CO 50 CL 50 BR 50 HU 0
0 AVL Off BS 50
  
```

F\_15060\_046.eps  
180305

**Figure 5-3 CSM menu****Menu explanation**

1. Indication of the decimal value of the operation hours counter, Software identification of the main microprocessor (see "Service Default or Alignment Mode" for an explanation), and the service mode (CSM= Customer Service Mode).
2. Displays the last five errors detected in the error code buffer.
3. Displays the option bytes.
4. Displays the type number version of the set.
5. Reserved item for P3C call centers.
6. Indicates the television is receiving an "IDENT" signal on the selected source. If no "IDENT" signal is detected, the display will read "NOT TUNED"
7. Displays the detected Color system (e.g. PAL/NTSC).
8. Displays the detected Audio (e.g. stereo/mono).
9. Displays the picture setting information.
10. Displays the sound setting information.

**How to exit**

To exit CSM, use one of the following methods:

- Press the MENU, STATUS/EXIT, or POWER button on the remote control transmitter.
- Press the POWER button on the television set.

**5.2.4 Digital Customer Service Mode (DCSM)****Purpose**


The Digital Customer Service Mode shows error codes and information on the TV's digital operation settings. The call center can instruct the customer (by telephone) to enter DCSM in order to identify the digital status of the set. This helps the call center to diagnose problems and failures with the ATSC part before making a service call.

The DCSM is a read-only mode; therefore, modifications are not possible in this mode, with exception of the digital error buffer. This error buffer can be cleared in DCSM.

**How to enter**

To enter DCSM, the set has to be in digital mode. When the set is in digital mode, press the following key sequence on the remote control transmitter: "123654" (do not allow the display to time out between entries while keying the sequence).

Upon entering the Digital Customer Service Mode, the following screen will appear:

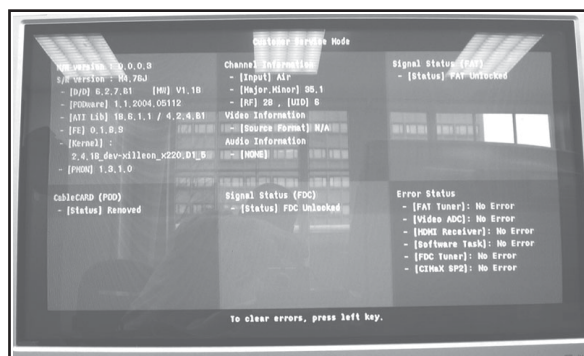

F\_15060\_047.eps  
180305

**Figure 5-4 DCSM menu****Menu explanation**

1. **H/W version:** Indication of the hardware version of the ATSC module.
2. **S/W version:**
  - **D/D:** The DST driver software version.
  - **HW:** The DST middleware version.
  - **PODware:** The CableCARD software version.
  - **ATI lib:** The ATI software version.
  - **FE:** Front End software version.
  - **Kernel:** Linux kernel software version.
3. **CableCARD (POD):** CableCard present or not.
4. **Channel Information:**
  - **Input:** Displays the input type.
  - **Major.Minor:** Displays the major and minor channel numbers.
  - **RF:** Displays the physical channel number.
  - **UID:** Displays the unique ID.
5. **Video Information:**
  - **Source Format:** Displays the format of the received signal.
6. **Audio Information:**
  - **Dolby:** Displays information on the received audio signal.
7. **Signal Status (FDC):** Not used in this version.
8. **Signal Status (FAT):** Displays the Forward Application status.
  - **Status:** Displays if the signal is locked.
  - **Type:** Displays the type of the received signal.
  - **SQL:** Signal Quality Index (0..100).
  - **Equai\_SNR:** Equaliser Signal to Noise Ratio.

- **Tre\_SNR:** Trellis Signal to Noise Ratio.
  - **RS Error Rate:** Reed-Solomon error rate.
9. **Error Status:** Displays the error status for each device.

**How to clear the error buffer**

To clear the error buffer, press the LEFT key on the remote control.

**How to exit**

To exit DCSM, press the RIGHT key on the remote control.

## 5.3 Problems and Solving Tips Related to CSM

### 5.3.1 Picture Problems

**Note:** The problems described below are all related to the TV settings. The procedures used to change the value (or status) of the different settings are described.

**Picture too dark or too bright**

*If:*

- The picture improves when you have press the AUTO PICTURE button on the remote control transmitter, or
- The picture improves when you enter the Customer Service Mode,

*Then:*

1. Press the AUTO PICTURE button on the remote control transmitter repeatedly (if necessary) to choose PERSONAL picture mode.
2. Press the MENU button on the remote control transmitter. This brings up the normal user menu.
3. In the normal user menu, use the MENU UP/DOWN keys to highlight the PICTURE sub menu.
4. Press the MENU LEFT/RIGHT keys to enter the PICTURE sub menu.
5. Use the MENU UP/DOWN keys (if necessary) to select BRIGHTNESS.
6. Press the MENU LEFT/RIGHT keys to increase or decrease the BRIGHTNESS value.
7. Use the MENU UP/DOWN keys to select PICTURE.
8. Press the MENU LEFT/RIGHT keys to increase or decrease the PICTURE value.
9. Press the MENU button on the remote control transmitter twice to exit the user menu.
10. The new PERSONAL preference values are automatically stored.

**White line around picture elements and text**

*If:*

The picture improves after you have pressed the AUTO PICTURE button on the remote control transmitter,

*Then:*

1. Press the AUTO PICTURE button on the remote control transmitter repeatedly (if necessary) to choose PERSONAL picture mode.
2. Press the MENU button on the remote control transmitter. This brings up the normal user menu.
3. In the normal user menu, use the MENU UP/DOWN keys to highlight the PICTURE sub menu.
4. Press the MENU LEFT/RIGHT keys to enter the PICTURE sub menu.
5. Use the MENU UP/DOWN keys to select SHARPNESS.
6. Press the MENU LEFT key to decrease the SHARPNESS value.
7. Press the MENU button on the remote control transmitter twice to exit the user menu.
8. The new PERSONAL preference value is automatically stored.

**Snowy picture**

Check CSM line 6. If this line reads "Not Tuned", check the following:

- Antenna not connected. Connect the antenna.
- No antenna signal or bad antenna signal. Connect a proper antenna signal.
- The tuner is faulty (in this case line 2, the Error Buffer line, will contain error number 10). Check the tuner and replace/repair the tuner if necessary.

**Black and white picture**

*If:*

- The picture improves after you have pressed the AUTO PICTURE button on the remote control transmitter,

*Then:*

1. Press the AUTO PICTURE button on the remote control transmitter repeatedly (if necessary) to choose PERSONAL picture mode.
2. Press the MENU button on the remote control transmitter. This brings up the normal user menu.
3. In the normal user menu, use the MENU UP/DOWN keys to highlight the PICTURE sub menu.
4. Press the MENU LEFT/RIGHT keys to enter the PICTURE sub menu.
5. Use the MENU UP/DOWN keys to select COLOR.
6. Press the MENU RIGHT key to increase the COLOR value.
7. Press the MENU button on the remote control transmitter twice to exit the user menu.
8. The new PERSONAL preference value is automatically stored.

**Menu text not sharp enough**

*If:*

- The picture improves after you have pressed the AUTO PICTURE button on the remote control transmitter,

*Then:*

1. Press the AUTO PICTURE button on the remote control transmitter repeatedly (if necessary) to choose PERSONAL picture mode.
2. Press the MENU button on the remote control transmitter. This brings up the normal user menu.
3. In the normal user menu, use the MENU UP/DOWN keys to highlight the PICTURE sub menu.
4. Press the MENU LEFT/RIGHT keys to enter the PICTURE sub menu.
5. Use the MENU UP/DOWN keys to select PICTURE.
6. Press the MENU LEFT key to decrease the PICTURE value.
7. Press the MENU button on the remote control transmitter twice to exit the user menu.
8. The new PERSONAL preference value is automatically stored.

## 5.4 ComPair

### 5.4.1 Introduction

ComPair (Computer Aided Repair) is a service tool for Philips Consumer Electronics products. ComPair is a further development on the European DST (service remote control), which allows faster and more accurate diagnostics. ComPair has three big advantages:

- ComPair helps you to quickly get an understanding on how to repair the chassis in a short time by guiding you systematically through the repair procedures.
- ComPair allows very detailed diagnostics (on I2C level) and is therefore capable of accurately indicating problem areas. You do not have to know anything about I2C commands yourself because ComPair takes care of this.

- ComPair speeds up the repair time since it can automatically communicate with the chassis (when the microprocessor is working) and all repair information is directly available. When ComPair is installed together with the Force/SearchMan electronic manual of the defective chassis, schematics and PWBs are only a mouse click away.

#### 5.4.2 Specifications

ComPair consists of a Windows based fault finding program and an interface box between PC and the (defective) product. The ComPair interface box is connected to the PC via a serial (or RS232) cable.

For this chassis, the ComPair interface box and the TV communicate via a bi-directional service cable via the service connector(s).

The ComPair fault finding program is able to determine the problem of the defective television. ComPair can gather diagnostic information in two ways:

- Automatic (by communication with the television): ComPair can automatically read out the contents of the entire error buffer. Diagnosis is done on I2C/UART level. ComPair can access the I2C/UART bus of the television. ComPair can send and receive I2C/UART commands to the micro controller of the television. In this way, it is possible for ComPair to communicate (read and write) to devices on the I2C/UART buses of the TV-set.
- Manually (by asking questions to you): Automatic diagnosis is only possible if the micro controller of the television is working correctly and only to a certain extend. When this is not the case, ComPair will guide you through the fault finding tree by asking you questions (e.g. *Does the screen give a picture? Click on the correct answer: YES / NO*) and showing you examples (e.g. *Measure test-point 17 and click on the correct oscillogram you see on the oscilloscope*). You can answer by clicking on a link (e.g. text or a waveform picture) that will bring you to the next step in the fault finding process.

By a combination of automatic diagnostics and an interactive question / answer procedure, ComPair will enable you to find most problems in a fast and effective way.

Beside fault finding, ComPair provides some **additional features** like:

- Up- or downloading of pre-sets.
- Managing of pre-set lists.
- Emulation of the (European) Dealer Service Tool (DST).
- If both ComPair and Force/SearchMan (Electronic Service Manual) are installed, all the schematics and the PWBs of the set are available by clicking on the appropriate hyperlink.

**Example:** *Measure the DC-voltage on capacitor C2568 (Schematic/Panel) at the Mono-carrier.*

- Click on the "Panel" hyperlink to automatically show the PWB with a highlighted capacitor C2568.
- Click on the "Schematic" hyperlink to automatically show the position of the highlighted capacitor.

#### 5.4.3 How To Connect

This is described in the chassis fault finding database in ComPair.

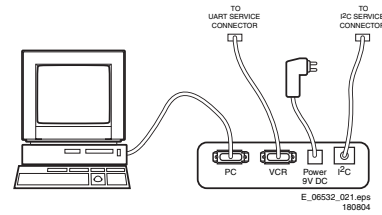


Figure 5-5 ComPair interface connection

#### 5.4.4 How To Order

ComPair order codes (US):

- ComPair Software: ST4191.
- ComPair Interface Box: 4822 727 21631.
- AC Adapter: T405-ND.
- ComPair Quick Start Guide: ST4190.
- ComPair interface extension cable: 3139 131 03791.
- ComPair UART interface cable: 3122 785 90630

**Note:** If you encounter any problems, contact your local support desk.

### 5.5 Error Codes

The error code buffer contains all errors detected since the last time the buffer was erased. The buffer is written from left to right. When an error occurs that is not yet in the error code buffer, it is displayed at the left side and all other errors shift one position to the right.

#### 5.5.1 How To Read The Error Buffer

You can read the error buffer in 3 ways:

- On screen via the SAM (if you have a picture). **Examples:**
  - ERROR: 0 0 0 0 0 : No errors detected
  - ERROR: 6 0 0 0 0 : Error code 6 is the last and only detected error
  - ERROR: 9 6 0 0 0 : Error code 6 was detected first and error code 9 is the last detected (newest) error
- Via the blinking LED procedure (when you have no picture). See "The Blinking LED Procedure".
- Via ComPair.



### 5.5.2 How To Clear The Error Buffer

The error code buffer is cleared in the following cases:

- By using the CLEAR command in the SAM menu:
  - To enter SAM, press the following key sequence on the remote control transmitter: "062596" directly followed by the OSD/STATUS button (do not allow the display to time out between entries while keying the sequence).
  - Make sure the menu item CLEAR is highlighted. Use the MENU UP/DOWN buttons, if necessary.
  - Press the MENU RIGHT button to clear the error buffer. The text on the right side of the "CLEAR" line will change from "CLEAR?" to "CLEARED"

- If the contents of the error buffer have not changed for 50 hours, the error buffer resets automatically.

**Note:** If you exit SAM by disconnecting the AC power from the television set, the error buffer is not reset.

### 5.5.3 Error Codes

In case of non-intermittent faults, write down the errors present in the error buffer and clear the error buffer before you begin the repair. This ensures that old error codes are no longer present.

If possible, check the entire contents of the error buffer. In some situations, an error code is only the result of another error

**Table 5-2 Error code overview**

Error	Device	Error description	Check item	Diagram
0	Not applicable	No Error		
1	Not applicable	X-Ray/Over-voltage protection (US only)	2411, 2412, 2413, 6404, 6411, 6412	A2
2	Not applicable	High beam (BCI) protection	3412, 7405	A2
3	Not applicable	Vertical guard protection	3466, 7451	A2
4	Not applicable	-	-	-
5	Not applicable	+5v protection	7604, 7605	A5
6	I2C bus	General I2C error	7200, 3207, 3214	A4
7	Not applicable	-	-	-
8	Not applicable	-	-	-
9	24C16	I2C error while communicating with the EEPROM	7601, 3604, 3605	A5
10	Tuner	I2C error while communicating with the PLL tuner	1000, 5001	A3
11	TDA6107/A	Black current loop instability protection	7330, 3351, CRT	B1
19	TDA1200x	I2C error while communicating with sound decoder in Hercules IC	7200	A4
20	TDA1200x	I2C error while communicating with video cosmic in Hercules IC	7200	A4
33	TA1360AFG	I2C error while communicating with the ATSC PQ	-	ATSC module
34	TA1317AFG	I2C error while communicating with the ATSC deflection controller	-	ATSC module
35	SAA5565	I2C error while communicating with the ATSC uProcessor	-	ATSC module

## 5.6 The Blinking LED Procedure

Using this procedure, you can make the contents of the error buffer visible via the front LED. This is especially useful when there is no picture.

When the SDM is entered, the front LED will blink the contents of the error-buffer:

- When all the error-codes are displayed, the sequence finishes with a LED blink of 1.5 seconds,
- The sequence starts again.

**Example** of error buffer: **12 9 6 0 0**

After entering SDM, the following occurs:

- 1 long blink of 5 seconds to start the sequence,
- 12 short blinks followed by a pause of 1.5 seconds,
- 9 short blinks followed by a pause of 1.5 seconds,
- 6 short blinks followed by a pause of 1.5 seconds,
- 1 long blink of 1.5 seconds to finish the sequence,
- The sequence starts again at 12 short blinks.

## 5.7 Protections

If a fault situation is detected, an error code will be generated; and, if necessary, the television set will go into protection mode. Blinking of the red LED at a frequency of 3 Hz indicates the protection mode. In some error cases, the microprocessor does not put the set in protection mode. The error codes of the error buffer and the blinking LED procedure can be read via the Service Default Menu (SDM), or via ComPair.

To get a quick diagnosis the chassis has three service modes implemented:

- The Customer Service Mode (CSM).
- The Service Default Mode (SDM).
- The Service Alignment Mode (SAM).

- The Digital Customer Service Mode (DCSM).

For a detailed mode description, see the relevant sections.

## 5.8 Fault Finding and Repair Tips

### Notes:

- It is assumed that the components are mounted correctly with correct values and no bad solder joints.
- Before any fault finding actions, check if the correct options are set.

### 5.8.1 NVM Editor

In some cases, it can be handy if one directly can change the NVM contents. This can be done with the "NVM Editor" in SAM mode. In the next table, the default NVM values are given.

Table 5-3 NVM default values for NAFTA-region

Item	Address (dec)	Default values (hex)			
		26PW21718	30PW21709	27PT21714	32PT21705
NVM Table Version	19	15	15	15	15
Option Table Version	20	70	70	70	70
EW (EW Width)	56	3C	66	3D	3C
PW (EW Parabola Width)	57	0E	14	17	28
HS (Horizontal Shift)	58	58	56	5A	5E
HP (Horizontal Parallelogram)	59	08	08	08	07
HB (Horizontal Bow)	60	08	0A	09	05
UCP (EW Upper Corner Parabola)	61	10	16	10	10
LCP (EW Lower Corner Parabola)	62	0F	07	11	11
TC (EW Trapezium)	63	40	54	44	43
VS (Vertical Slope)	64	00	00	00	00
VA (Vertical Amplitude)	65	40	2F	33	3D
VSC (S-Correction)	66	2C	23	32	35
VSH (Vertical Shift)	67	40	41	3F	42
VX (Vertical Zoom)	68	00	00	00	0F
VSL (Vertical Scroll)	69	79	74	78	72
VL (Vertical Linearity)	70	10	12	11	12
EWS (EW S Correction)	71	10	00	10	10
EWC (EW Corner)	72	10	0C	12	16
AGC (AGC Takeover)	163	1D	1D	1D	1D
OIF (IF-PLL Offset)	164	26	26	26	26
IFAGC, SBO	166	20	20	20	20
Hercules Default SOC & Brightness	211	1F	1F	1F	1F
Hercules Default Color	212	10	10	10	10
Hercules Default Contrast	213	1F	1F	1F	1F
Hercules Default Sharpness	214	0D	0D	0D	0D
Hercules Default Hue	215	20	20	20	20
Hercules Default Base-Band Tint	216	20	20	20	20
Hercules Default White Point Red	217	20	20	20	20
Hercules Default White Point Green	218	20	20	20	20
Hercules Default White Point Blue	219	20	20	20	20
Hercules Default CL & PWL	220	DF	DF	DF	DF
Hercules Default RF & AV Y Delay	221	77	77	77	77
Hercules Default BLOR	222	20	20	20	20
Hercules Default BLOG	223	20	20	20	20
Last Brightness (VID PP others)	264	1E	1E	1E	1E
Last Color (VID PP others)	265	44	44	44	44
Last Contrast (VID PP others)	266	64	64	64	64
Last Sharpness (VID PP others)	267	44	44	44	44
Last Hue (VID PP others)	268	32	32	32	32
Last Color Temperature (VID PP others)	269	01	01	01	01
White-D Cool Red	356	FA	FA	FA	FA
White-D Cool Blue	357	12	12	12	12
White-D Normal Red	358	52	52	52	52
White-D Normal Blue	359	4C	4C	4C	4C
White-D Warm Red	360	0A	0A	0A	0A
White-D Warm Blue	361	E8	E8	E8	E8

## 5.8.2 Power Supply

## Set Not Working

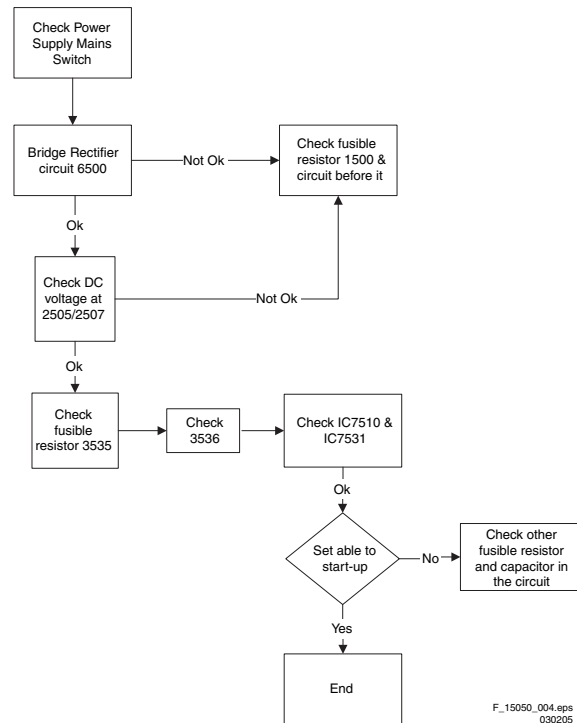


Figure 5-6 Fault finding tree “Set not working”

## Set Does Not Start Up

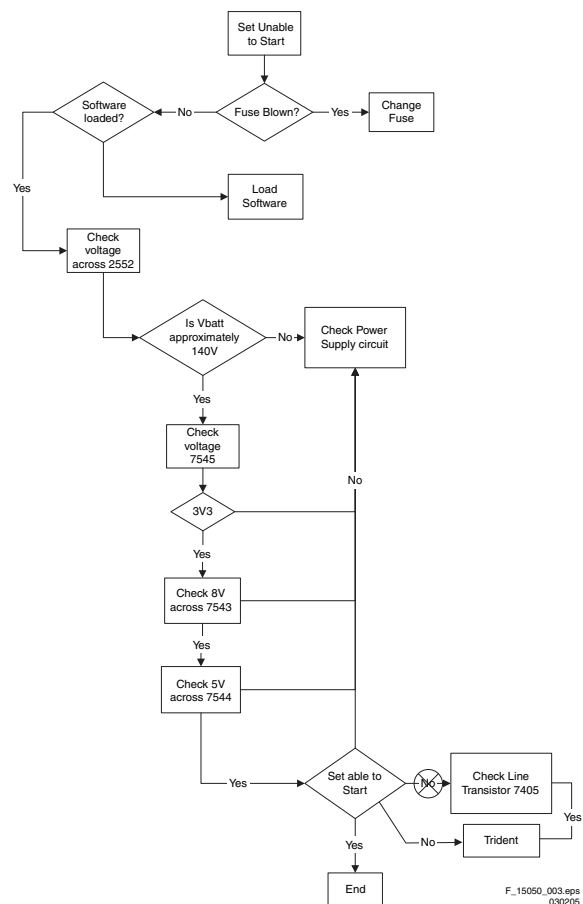


Figure 5-7 Fault finding tree “Set does not start up”

## 5.8.3 Deflection

**One Thin Vertical Line**

Quick check:

- Set in protection mode.
- LED blinking with error “3”.

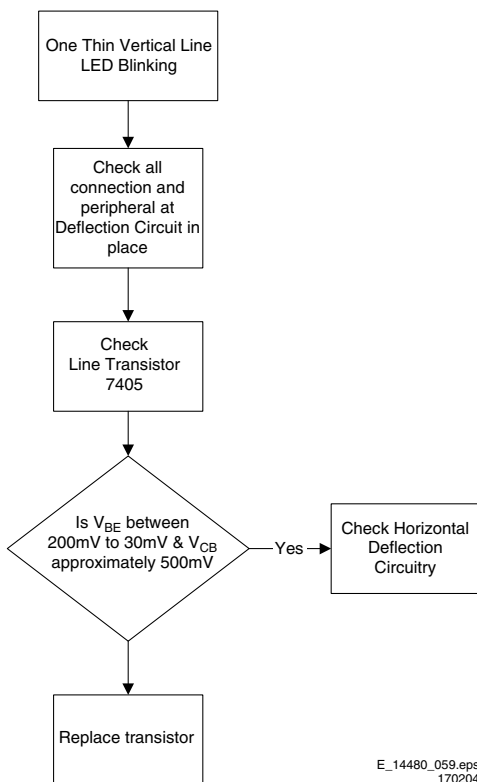


Figure 5-8 Fault finding tree “One thin vertical line”

**One Thin Horizontal Line**

Quick check:

- Set in protection mode.
- LED blinking with error “2”.

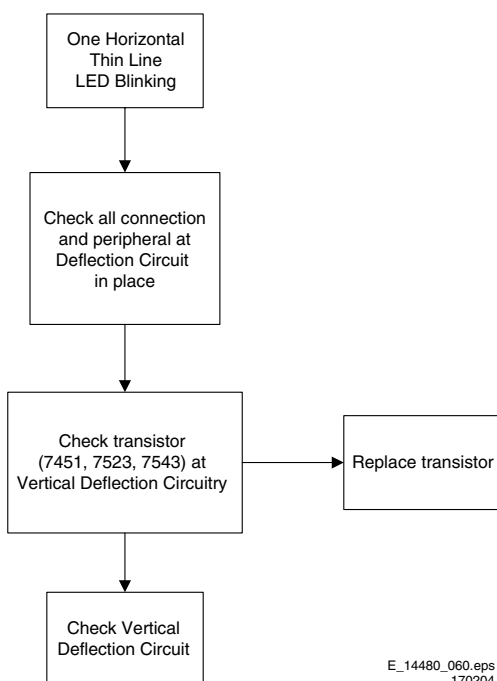


Figure 5-9 Fault finding tree “One thin horizontal line”

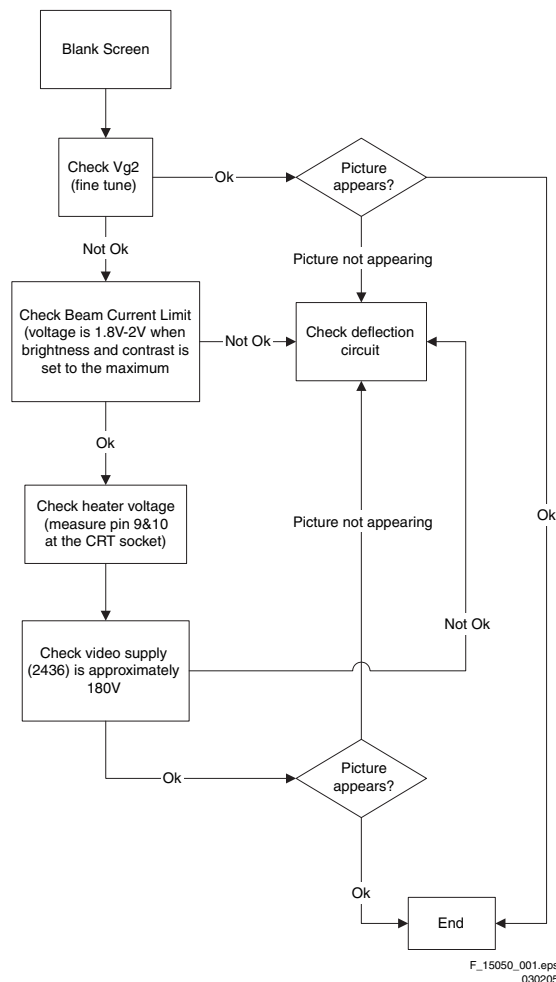
**Blank Screen**

Figure 5-10 Fault finding tree “Blank screen”

## 5.8.4 Source Selection

**Set is not able to go into AV or any missing AV is encountered**

E.g. AV1 is available but not able to enter to AV1: Check if the option setting is correct.

**Set is able to go to AV, but no audio is heard.**

1. Check that continuity of signal is there from the SCART/ Cinch input to the input of the Hercules.
2. If continuity is there and still no audio, check that option settings are correct.
3. If logic setting is correct and still no audio, proceed to Audio Decoder/Processor troubleshooting section.

**Set is able to go into AV but no video is available:**

1. Check continuity from AV input to HERCULES depending on the input.
2. If continuity is available and yet no video, proceed to Video Processor troubleshooting section.

## 5.8.5 Tuner and IF

**No Picture**

1. Check that the Option settings are correct.
2. If correct, check that supply voltages are there.
3. If supply voltages are present, check whether picture is present in AV.
4. If picture is present in AV, check with the scope the Tuner IF output signal by manual storage to a known channel.
5. If IF output is present, Tuner is working fine. If no IF output, I2C data lines may be open, check continuity of I2C lines. If I2C lines are ok, Tuner may be defect, replaced Tuner.
6. If Tuner IF is present and yet still no picture in RF mode, go to Video Processing troubleshooting section.

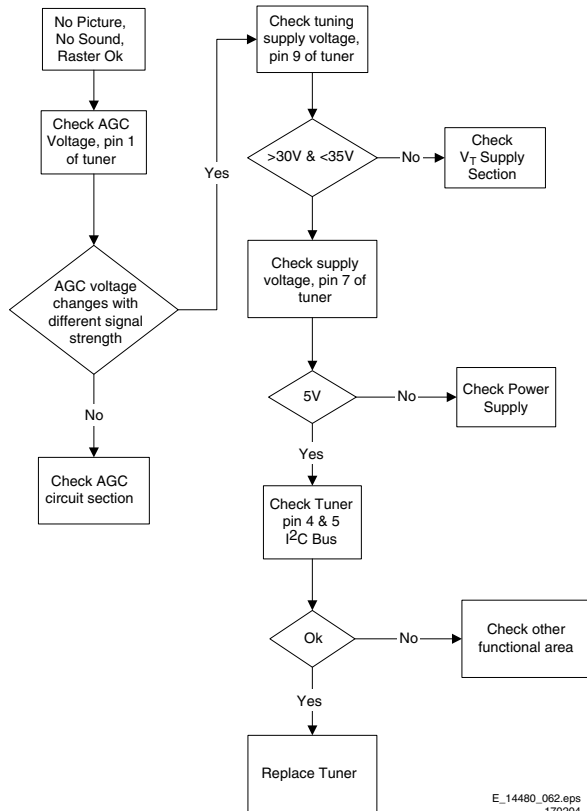
**No Picture, No Sound**

Figure 5-11 Fault finding tree “No picture, no sound”

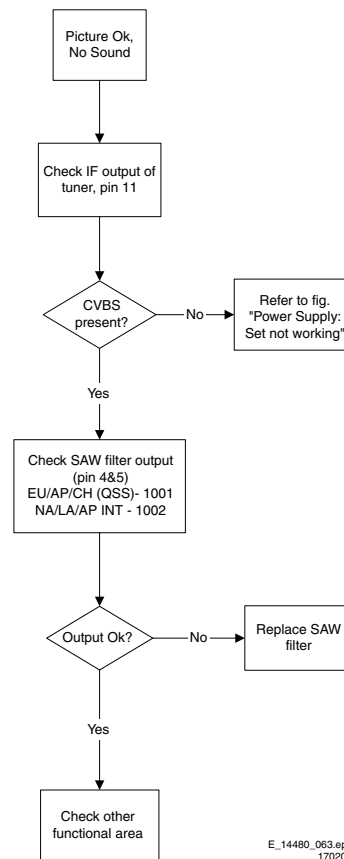
**Picture Ok, No Sound**

Figure 5-12 Fault finding tree “Picture ok, no sound”

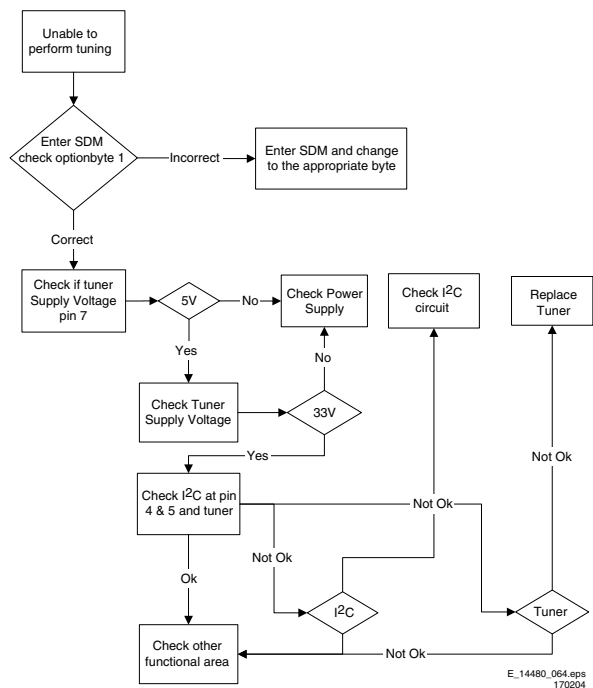
**Unable To Perform Tuning**

Figure 5-13 Fault finding tree “Unable to perform tuning”

### 5.8.6 Controller

Below are some guidelines for troubleshooting of the Micro Controller function. Normally Micro Controller should be checked when there is a problem of startup.

1. Check that both +3.3 V<sub>dc</sub> and +1.8 V<sub>dc</sub> are present.
2. Check that crystal oscillator is working.
3. Check that Power Good signal is at "high" logic, normal operation.
4. Check that HERCULES is not in standby mode. Pin 15 of HERCULES should be 0 V<sub>dc</sub>.
5. Make sure H-drive pulse is there. This can be checked at resistor R3239. If H-drive does not exist, remove resistor R3239 to check if there is loading.

**Note:** When the set shuts down after a few second after power "on", the main cause is that Vg2 not aligned properly, try adjusting Vg2 during the few seconds of power "on".

### 5.8.7 Video Processing

#### No Picture

When "no picture in RF", first check if the microprocessor is functioning ok in section "Controller". If that is ok, follow the next steps.

When "no picture in AV", first check if the video source selection is functioning ok in section "Source Selection". If that is ok, follow the next steps.

1. Check that normal operating conditions are met.
2. Check that there is video signal at pin 81. If no video, demodulator part of the HERCULES is faulty, replace with new HERCULES.
3. If video signal is available at pin 81, check pin 56, 57, and 58 for the RGB signal.
4. If signal is not available, try checking the BRIGHTNESS and/or CONTRAST control, and make sure it is not at zero.
5. If still with the correct settings and no video is available, proceed to the CRT/RGB amplifier diagram.

For sets with TDA9178, follow steps below:

1. Put Option Byte 2 bit 4 to "0"; if video signal is not available, then check fault finding section "Controller", Section "Source Selection", and steps above.
2. If video is available but not correct, put Option Byte 2 bit 4 to "1", then check if LTI panel is present. If not, put LTI panel in the main chassis (connector 1221).
3. If LTI panel is in main chassis, check cable between LTI panel and main chassis (position is 1206). If it is connected, then the LTI panel is faulty, replace it.

For sets with Scavem, and Scavem does not work, follow steps below:


1. Check Scavem coil connector (position is 1361) if connected; if not, connect it.
2. If connected, check NVM "bit storage" byte 1 bit 7; if it is not "1", set it to "1".
3. If it is "1", then check the data of the NVM addresses as in the next table. If the data is not correct, then set these addresses to diagram values.
4. If it still not works, track Scavem output from pin64 of HERCULES to CRT panel.

**Table 5-4 NVM default values for Scavem**

Description	Address (dec)	Address (hex)	Value (hex)
SPR, WS	140	8C	00
VMA, SVM	141	8D	32
NVM_SOC_SMD	142	8E	03

### 5.8.8 Audio Processing

#### No Sound

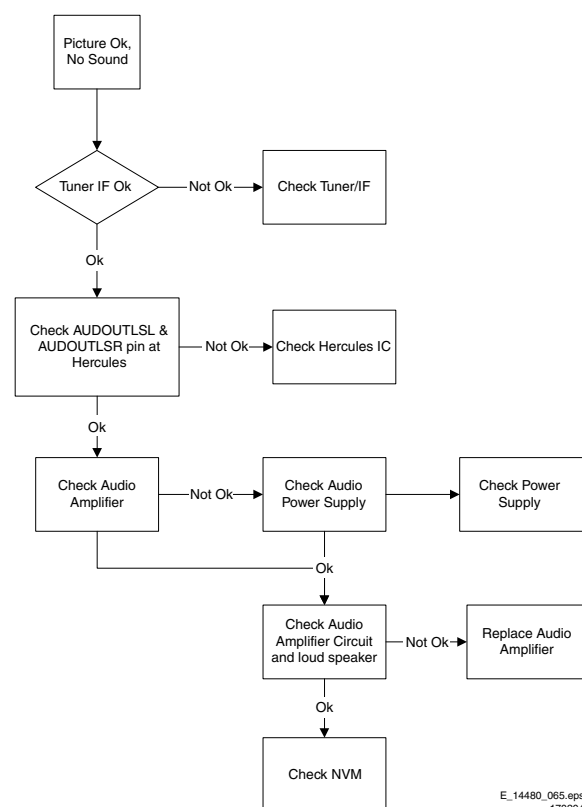

E\_14480\_065.eps  
170204

**Figure 5-14 Fault finding tree "No sound"**

#### No RF audio for QSS/Inter-Carrier stereo sets.

1. Check pin 99 and 100 for SIF signal (for QSS) or pin 104 and 105 for video with SIF (for Inter-Carrier)
2. If signal is not present, check for the QSS/FMI bit settings. Check also the NVM data.
3. If signals are present and still no audio, check the audio supply voltage +8V are present.
4. If still no audio signal at Hercules output, Hercules is faulty.

#### No AV audio.

1. Check troubleshooting methods in section "Source Selection".
2. Check the output of the Hercules to see if there is signal available. If no, check the normal operating condition and also the NVM data.
3. If still no audio signal at Hercules output, Hercules is faulty.

**Note:** If there is audio signal at Hercules output and no audio at loudspeaker, proceed to Audio Amplifier troubleshooting methods.

### 5.8.9 Audio Amplifier

#### No RF as well as AV audio at the loudspeaker:

1. Check that the normal operation condition of the amplifier is met.
2. If normal operation conditions are met, check the continuity from Hercules output to input of the amplifier.
3. If continuity is there and still no audio, check speaker wire connections. If still no audio, amplifier IC might be faulty.

## 5.8.10 ATSC

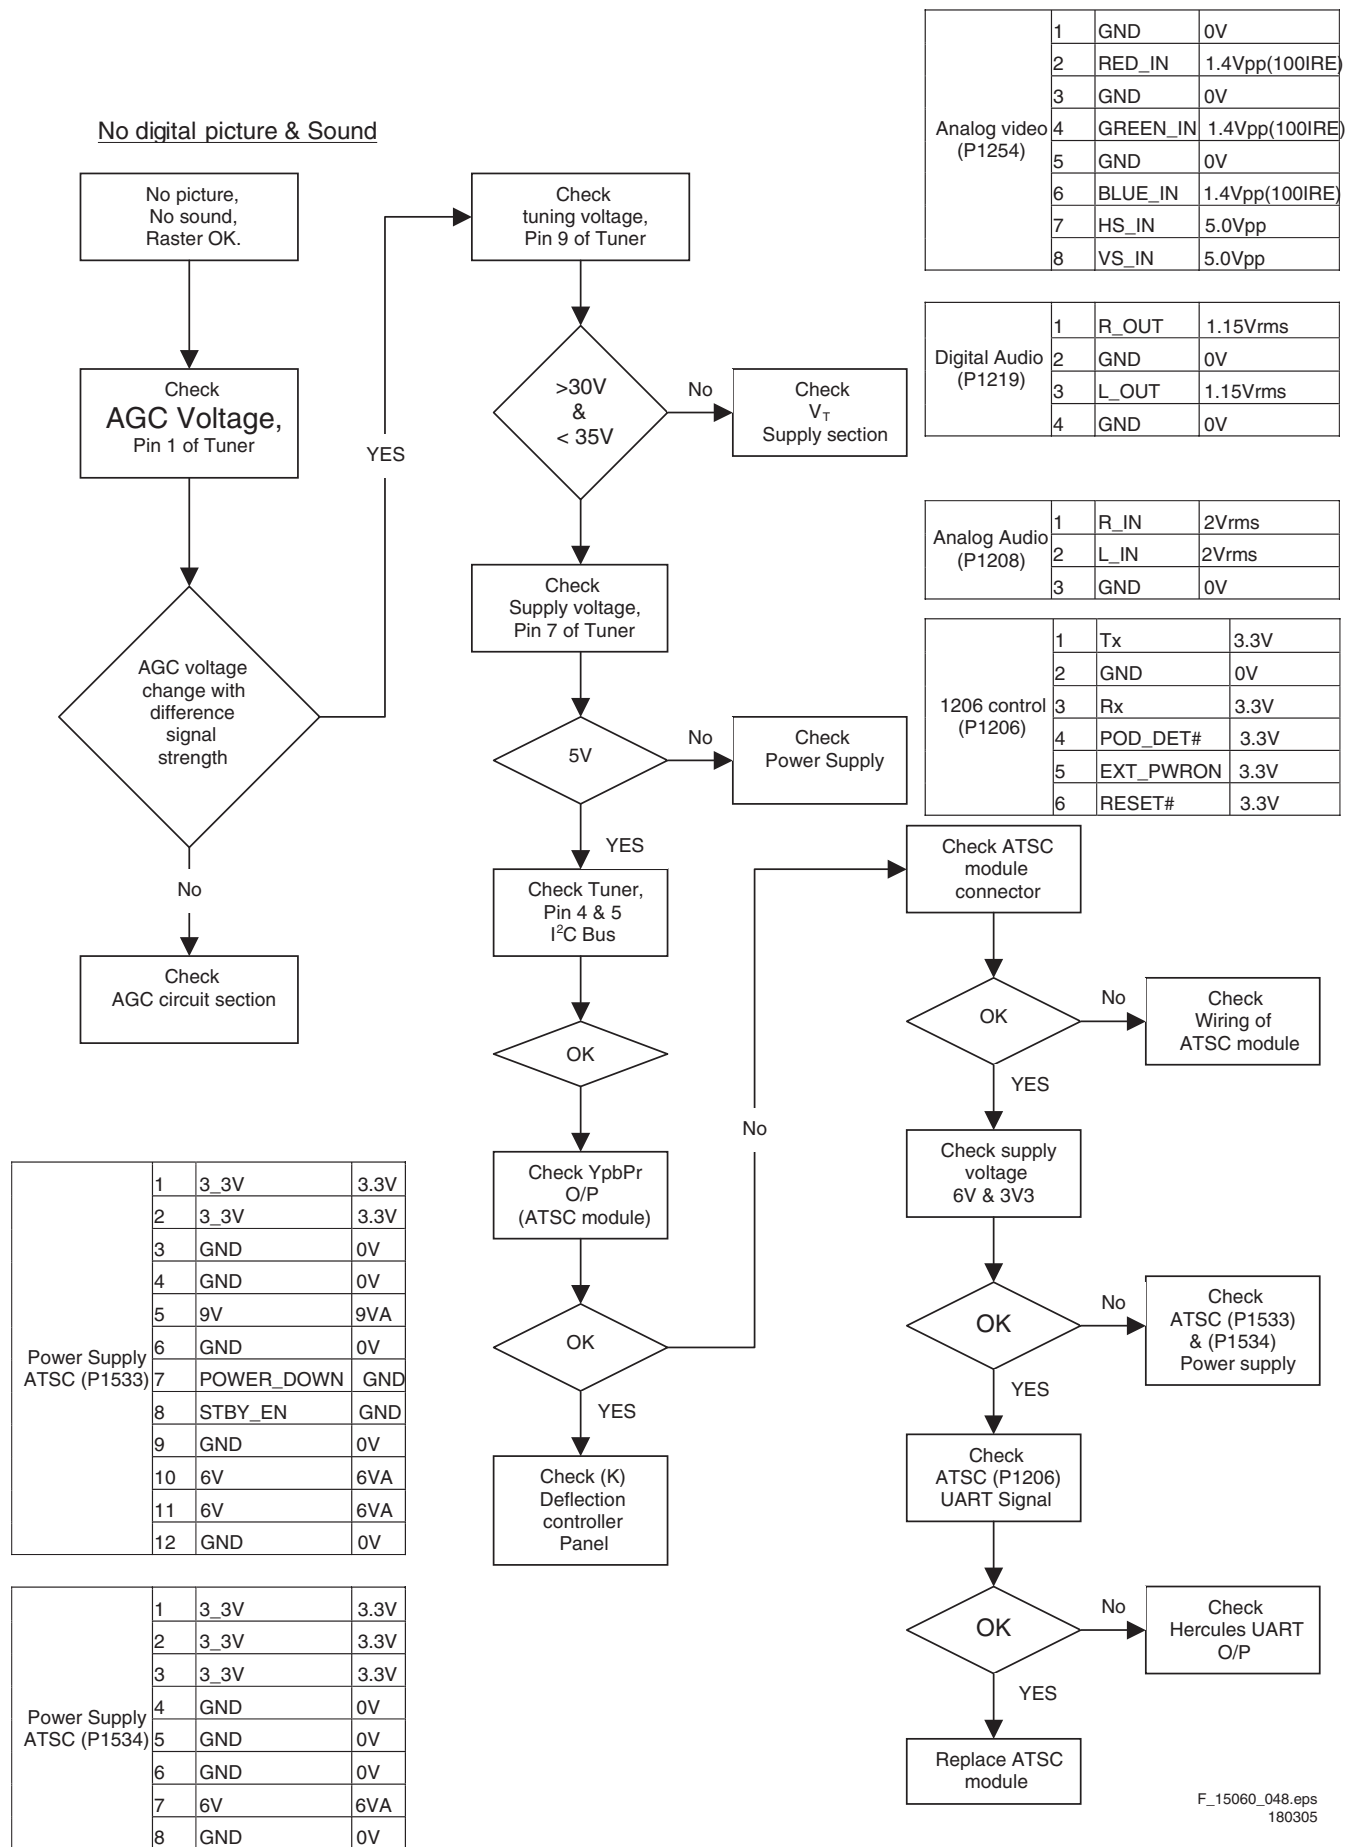


Figure 5-15 Fault finding tree "ATSC part"

## 5.8.11 Deflection Controller

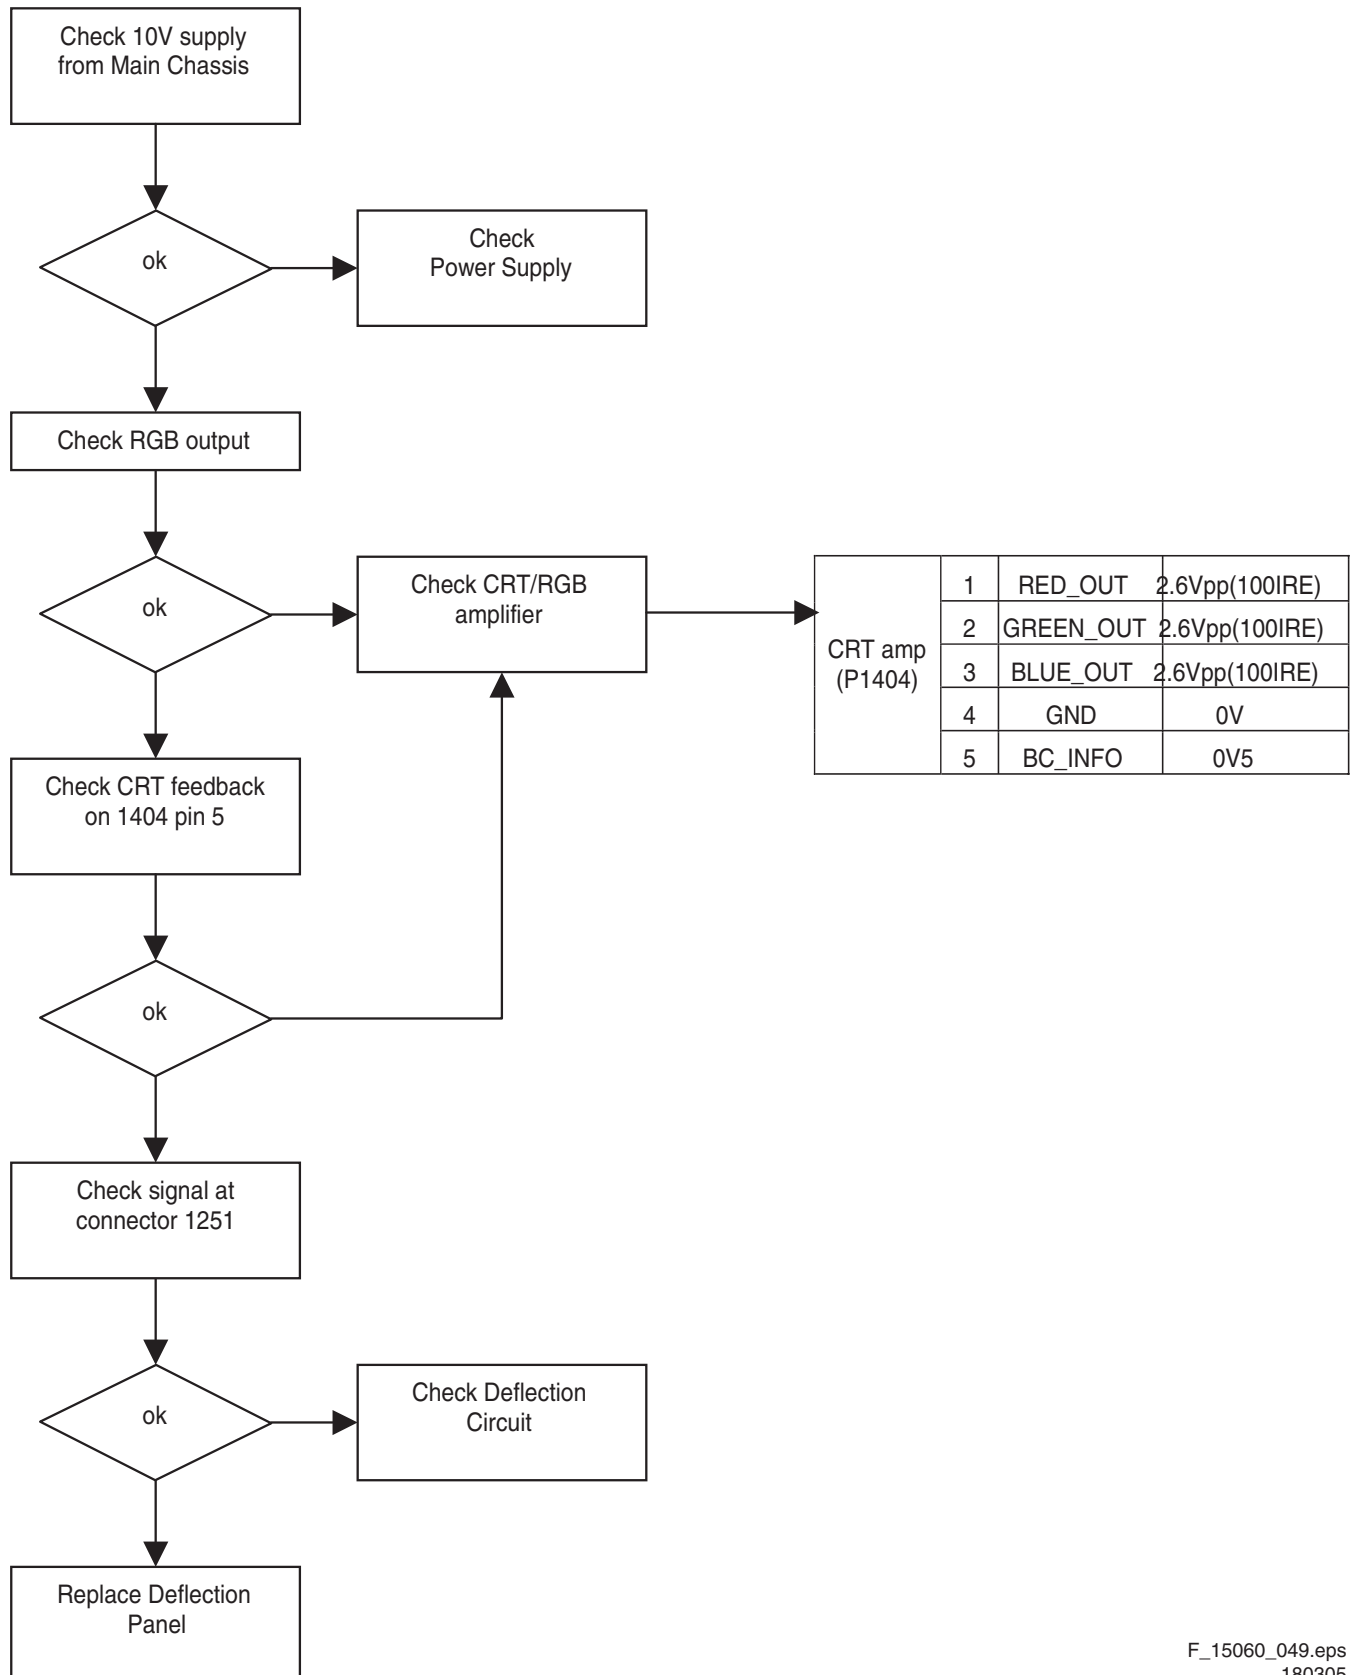
Check Deflection Controller Panel (ATSC set only)F\_15060\_049.eps  
180305

Figure 5-16 Fault finding tree "Deflection Controller"

***Personal Notes:***






Block Diagram Supply and Deflection


SUPPLY AND DEFLECTION

SUPPLY


J FRONT INTERFACE

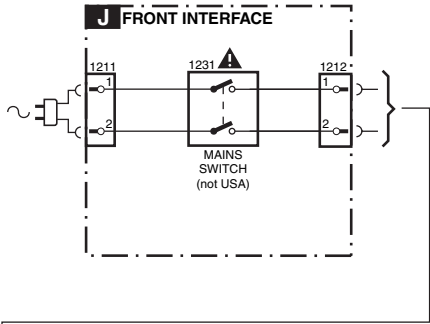


A1 POWER SUPPLY

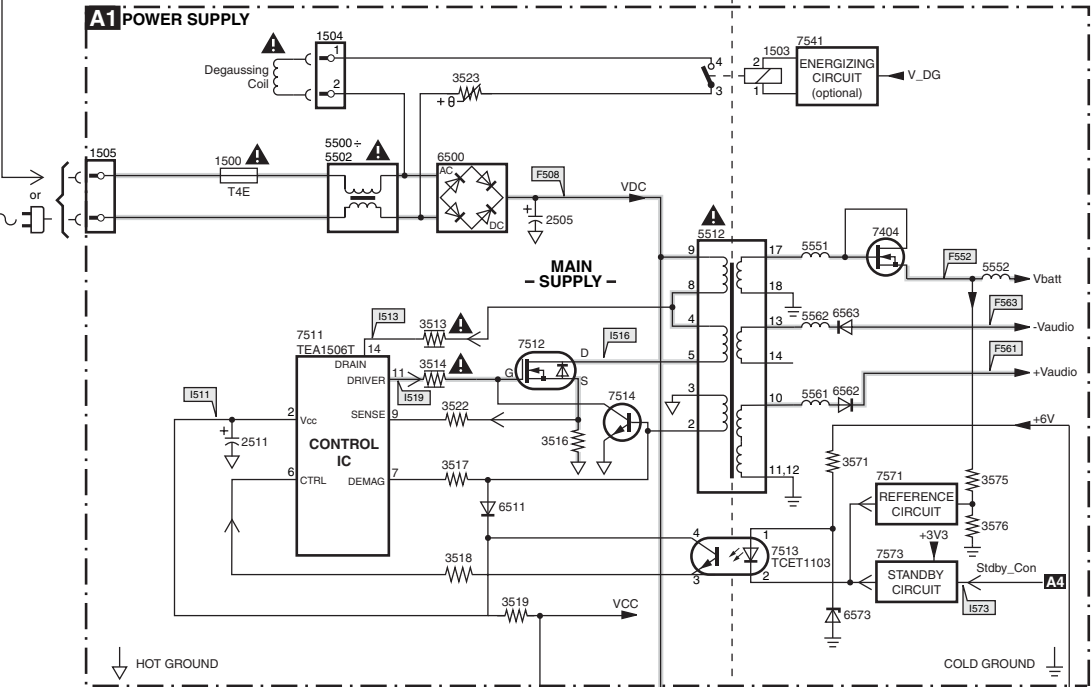


A10 AUXILIARY POWER SUPPLY

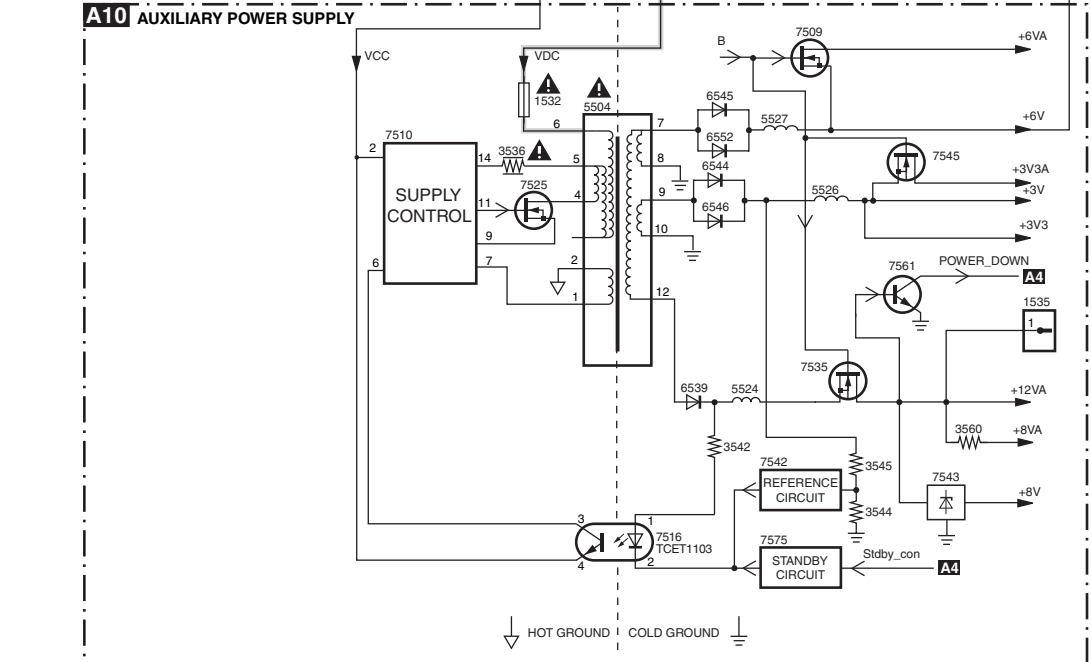


K2 RGB BUFFER - ATSC

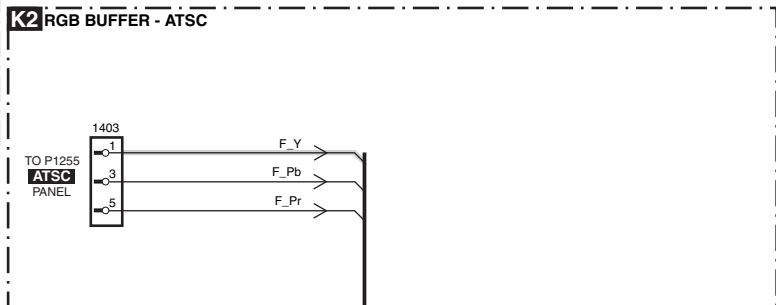


K1 DEFLECTION CONTROLLERS

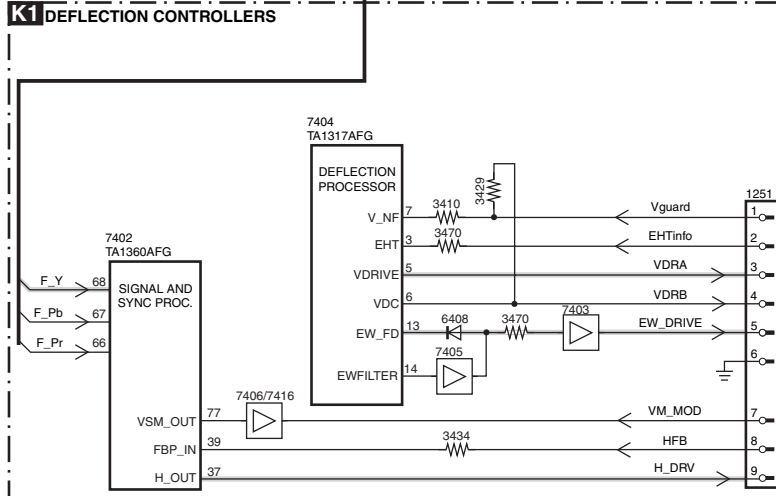


A2 LINE + FRAME DEFLECTION

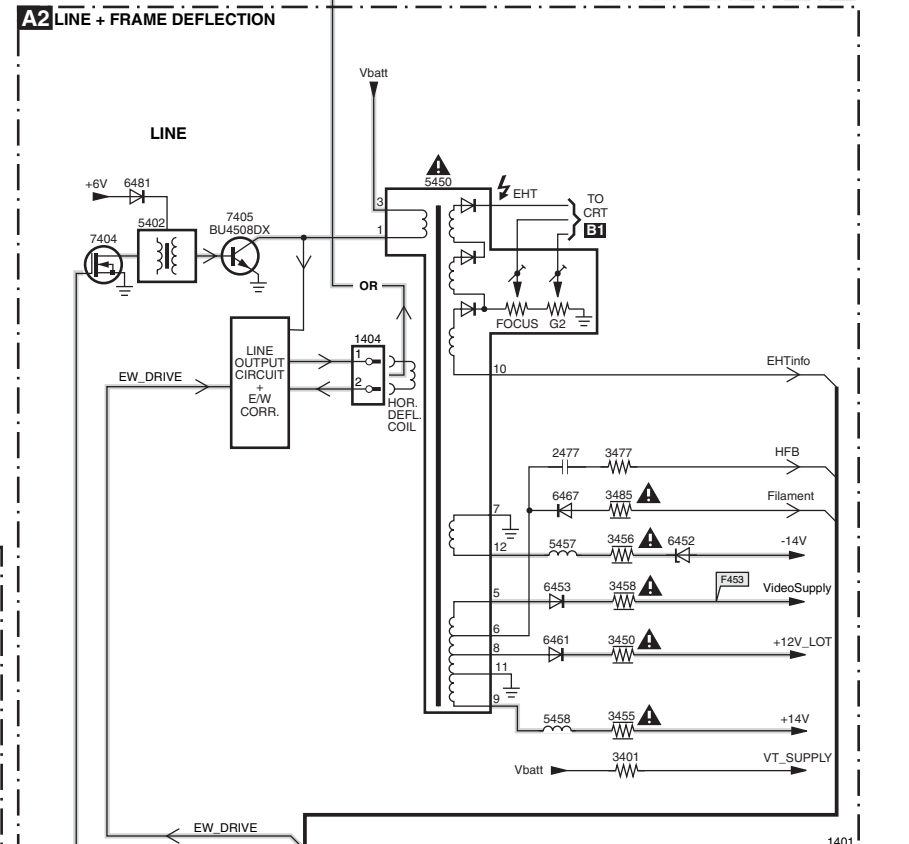


A5 FEATURES & CONNECTIVITIES

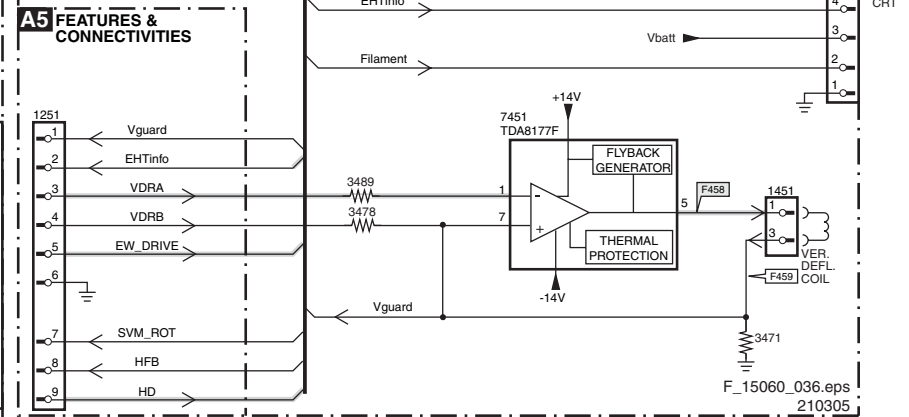


G LINEARITY & PANORAMA

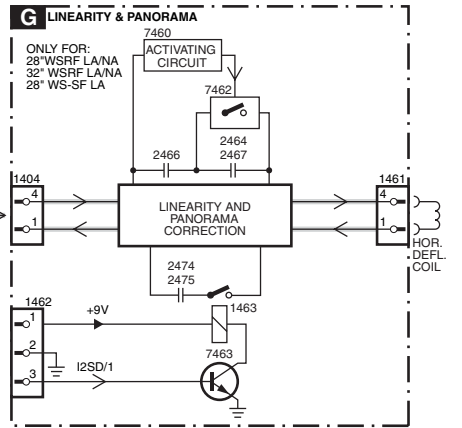

Testpoint Overview Mono Carrier

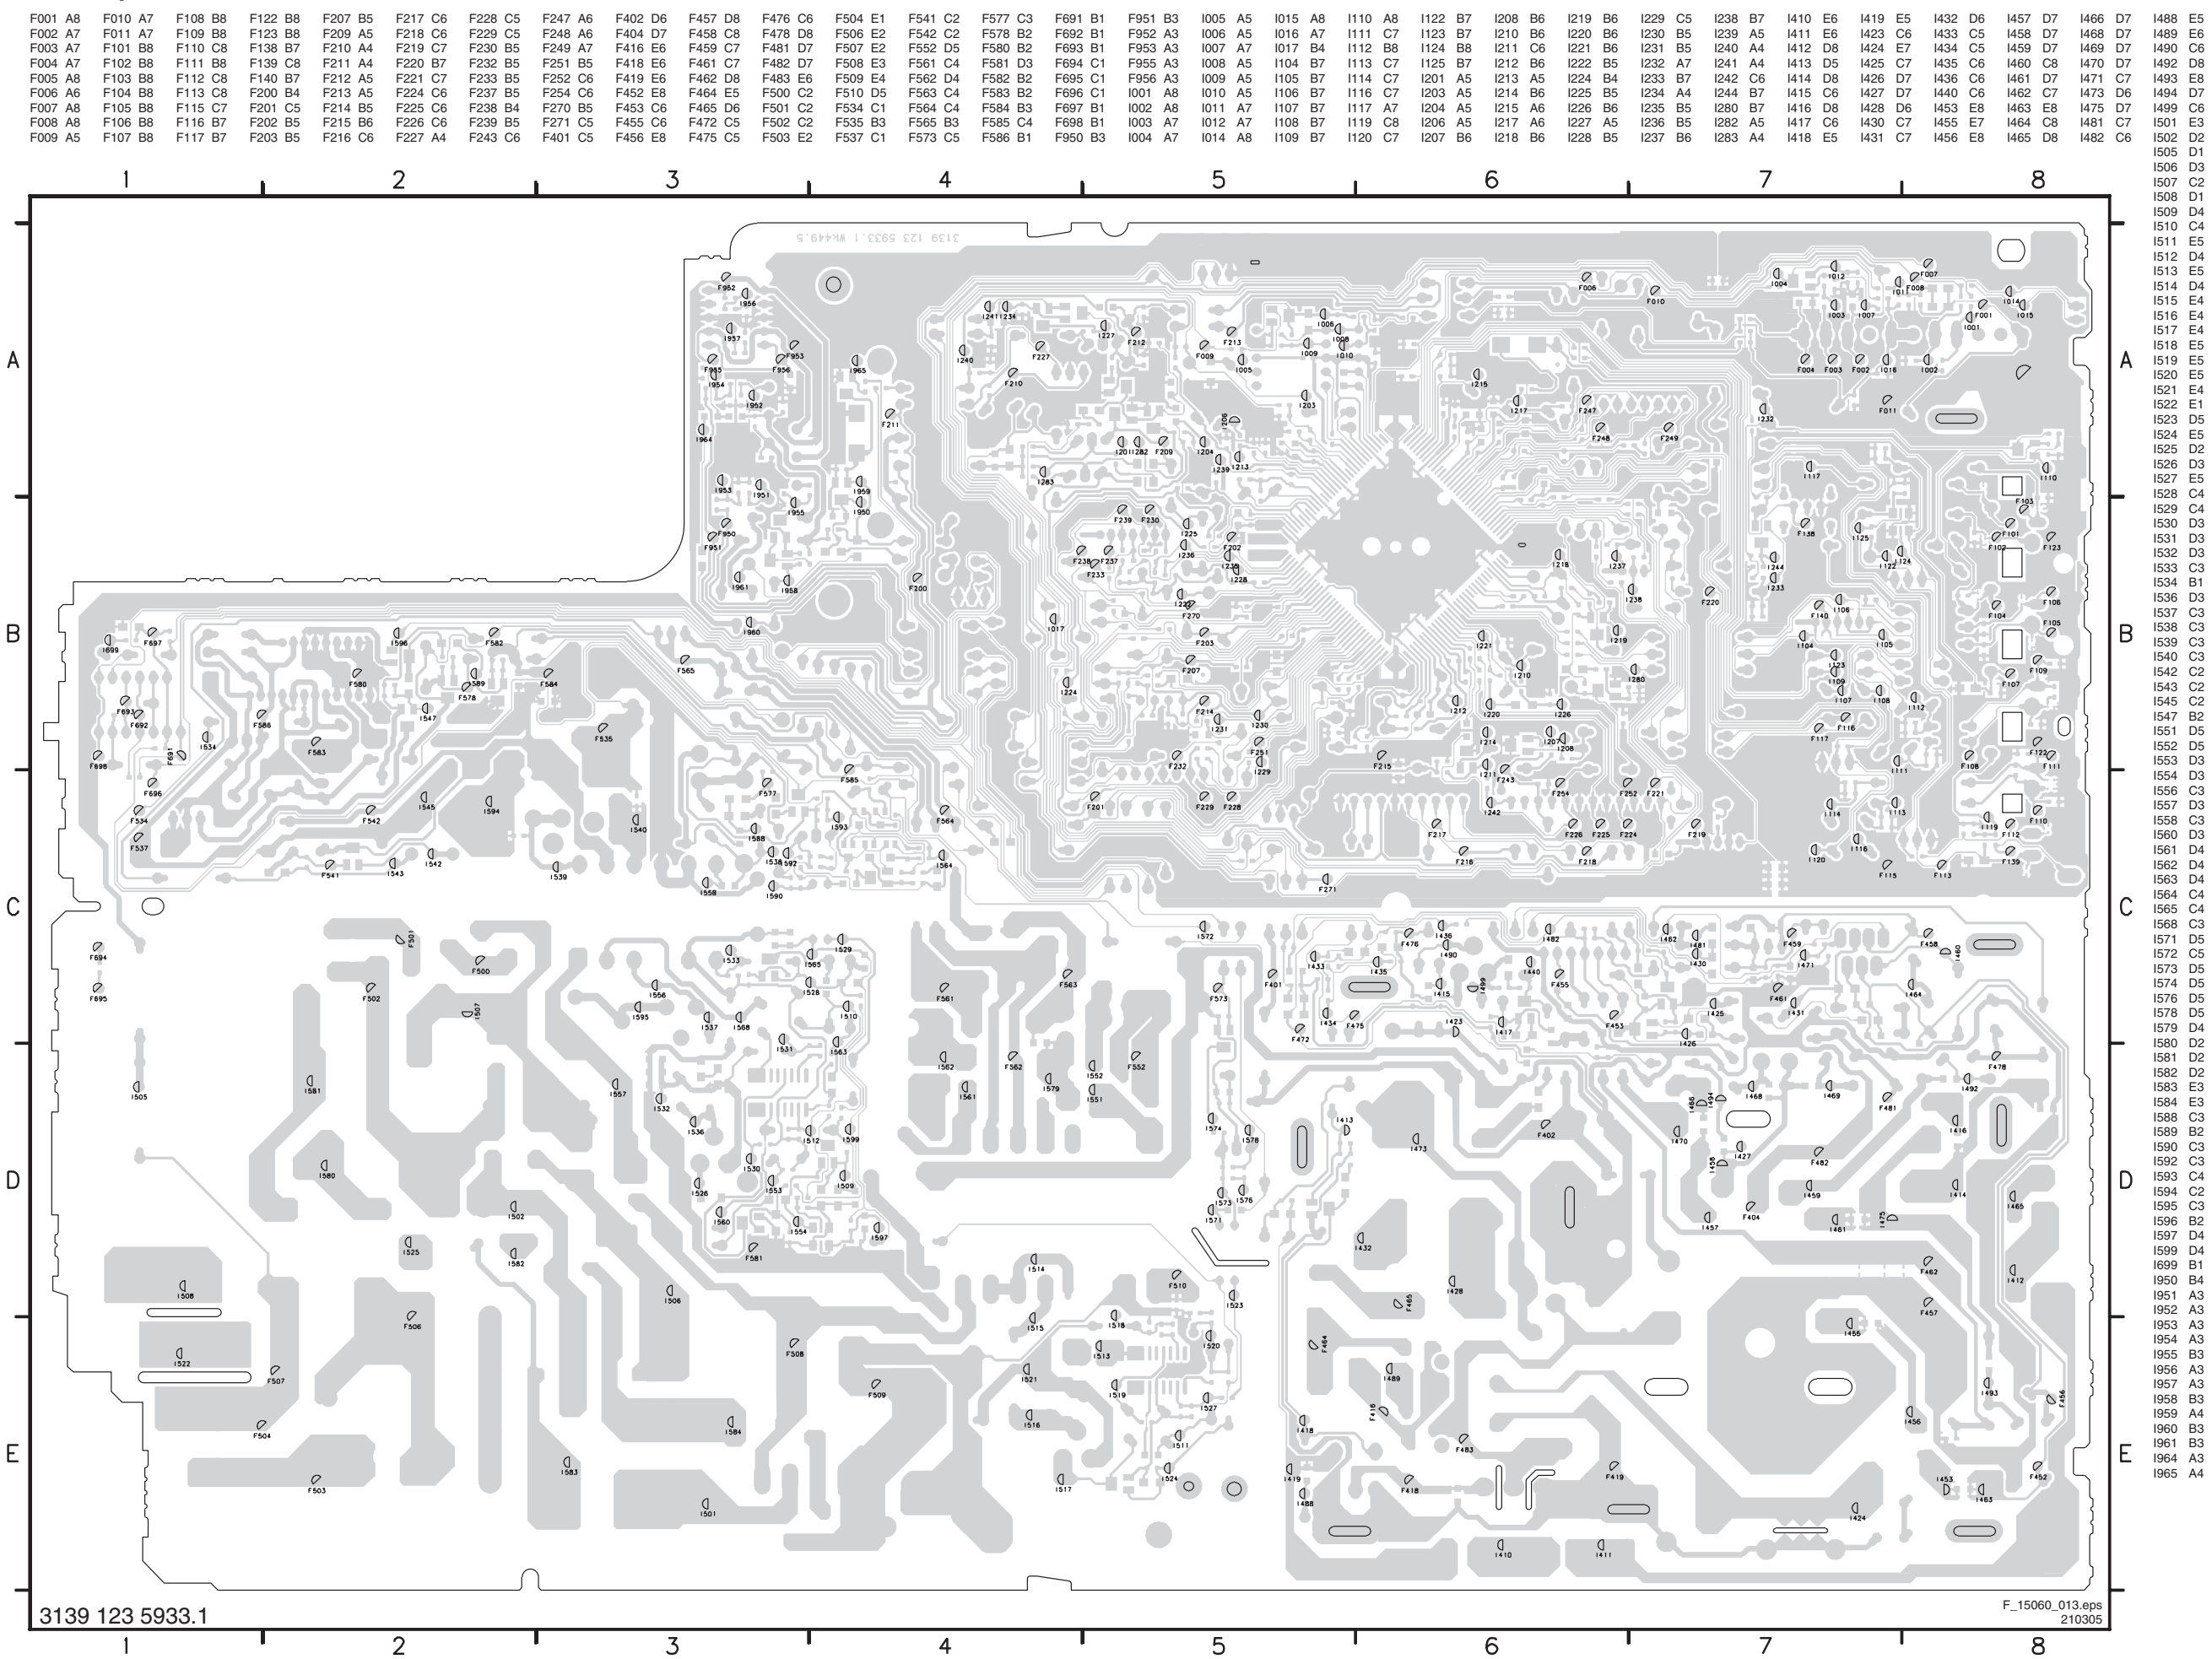


Block Diagram Video  
VIDEO

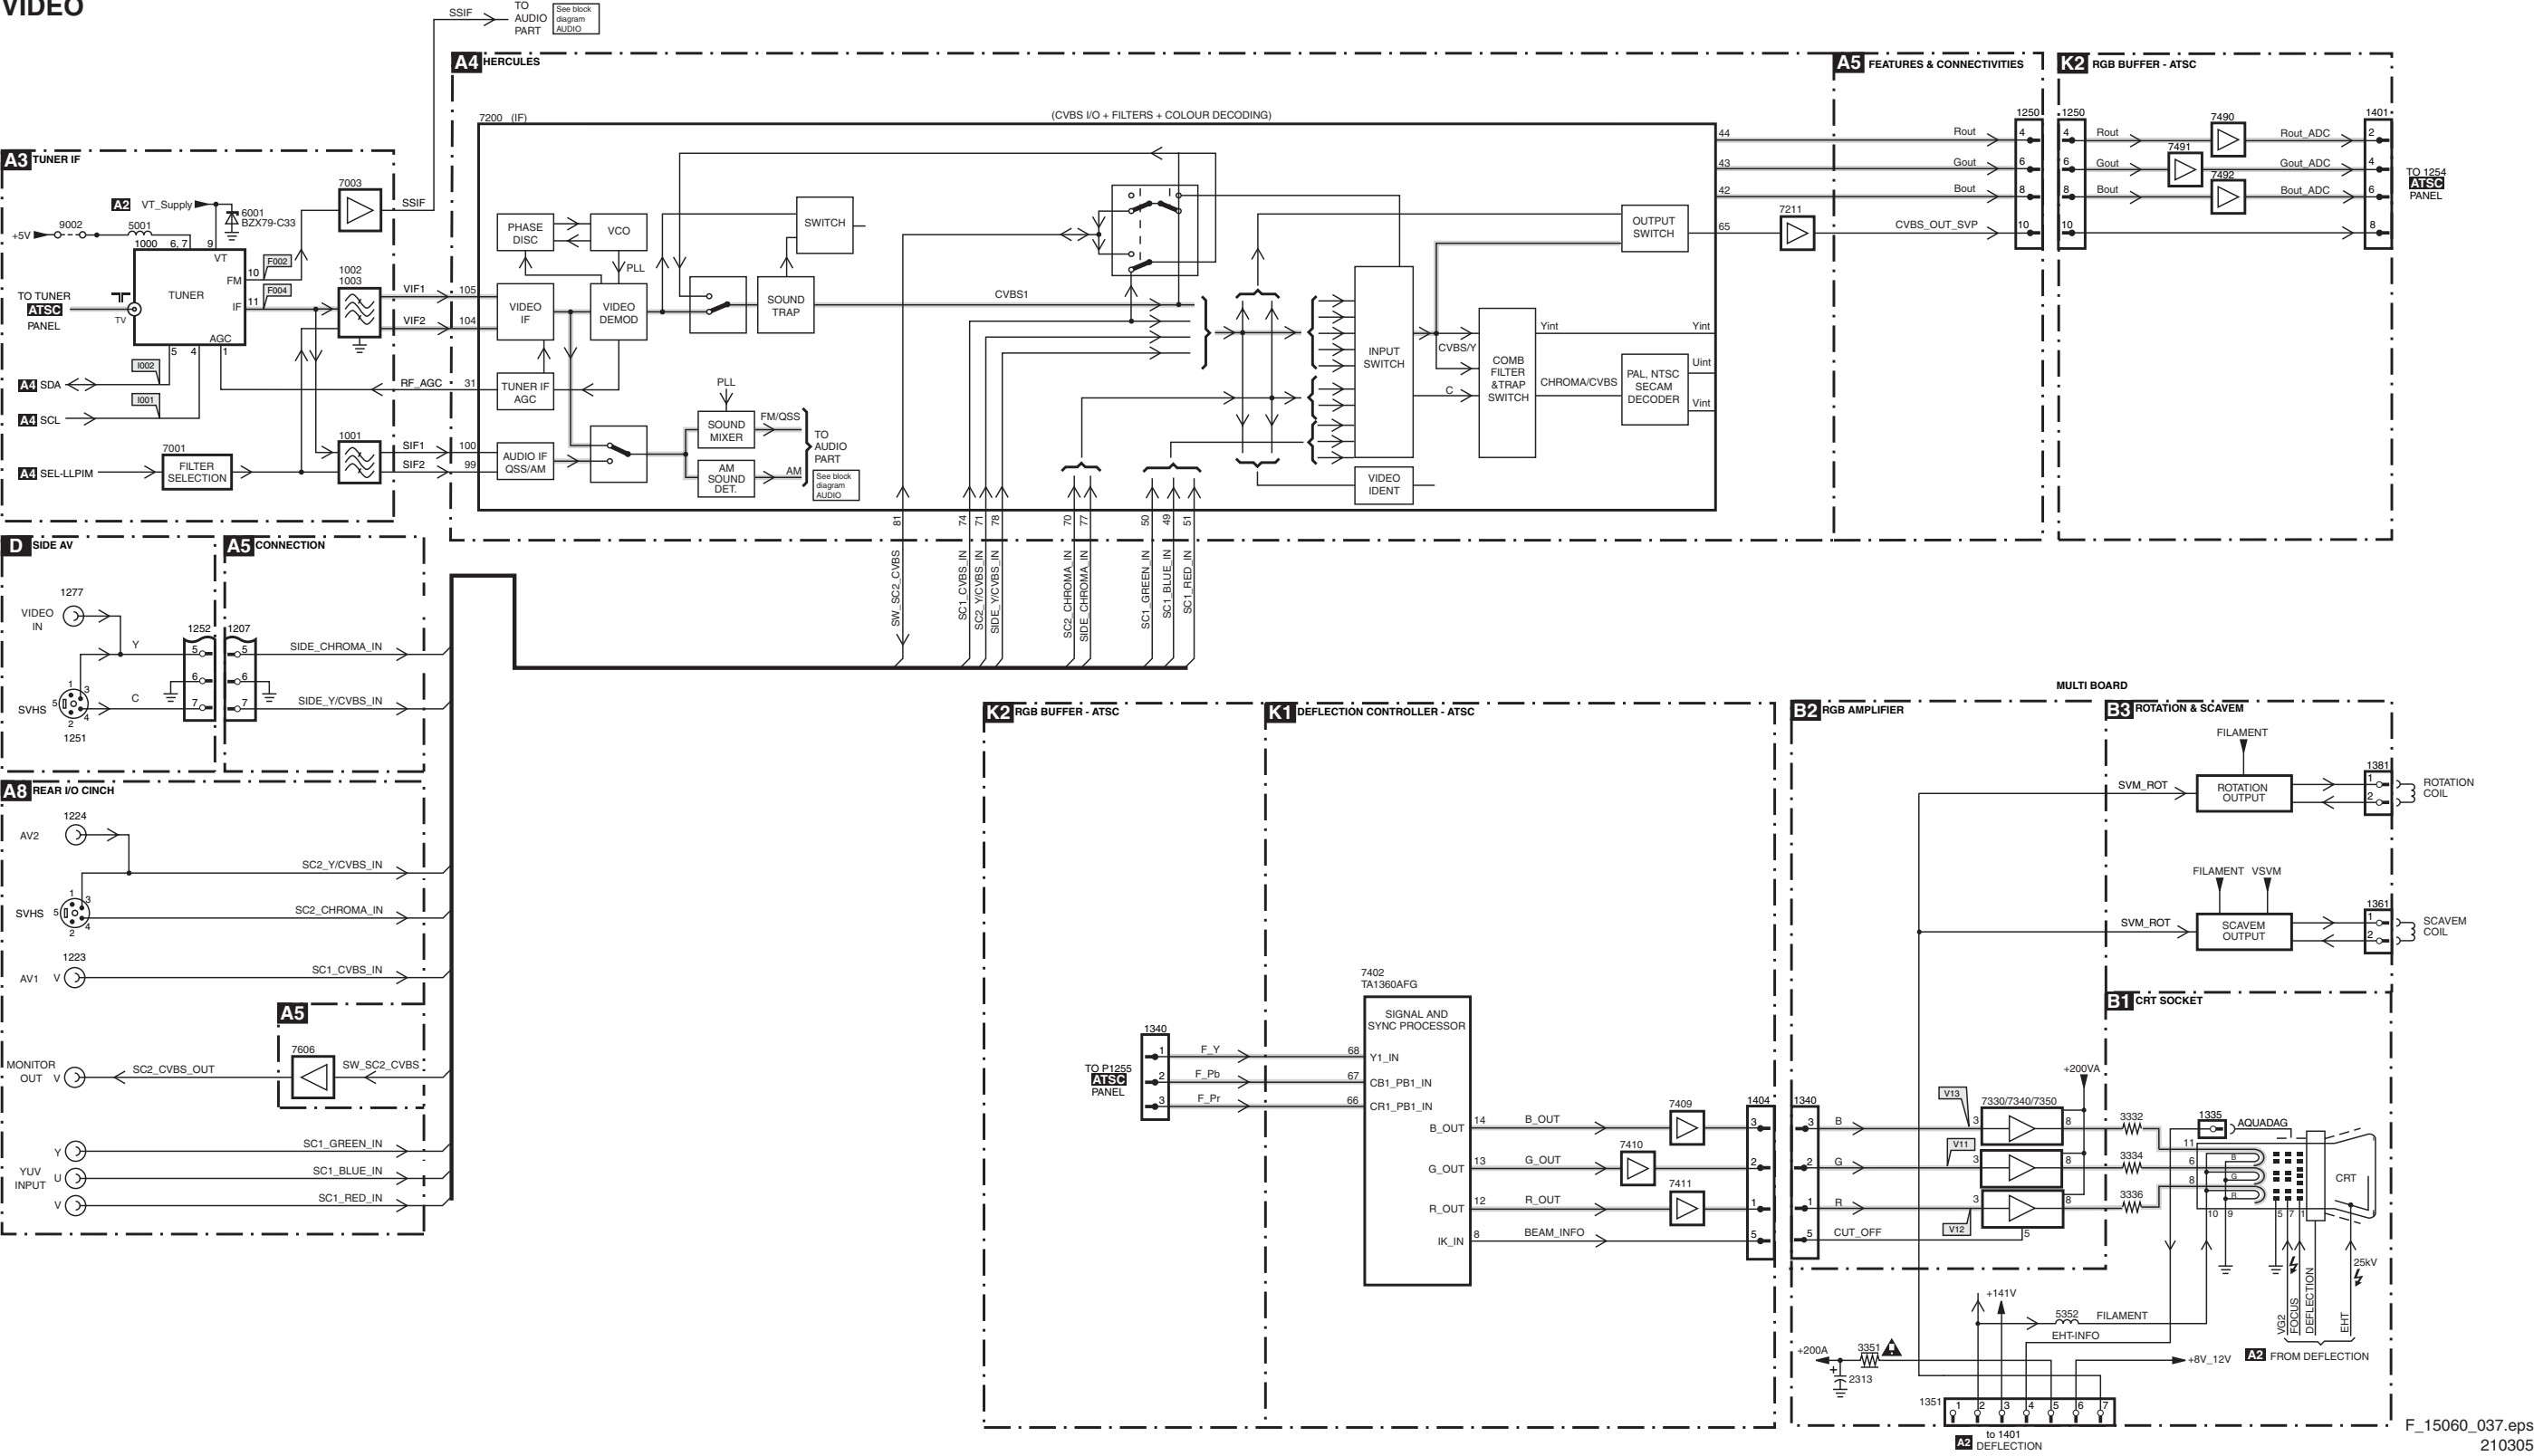




## AUDIO






Block Diagram Control & I2C Overview  
CONTROL

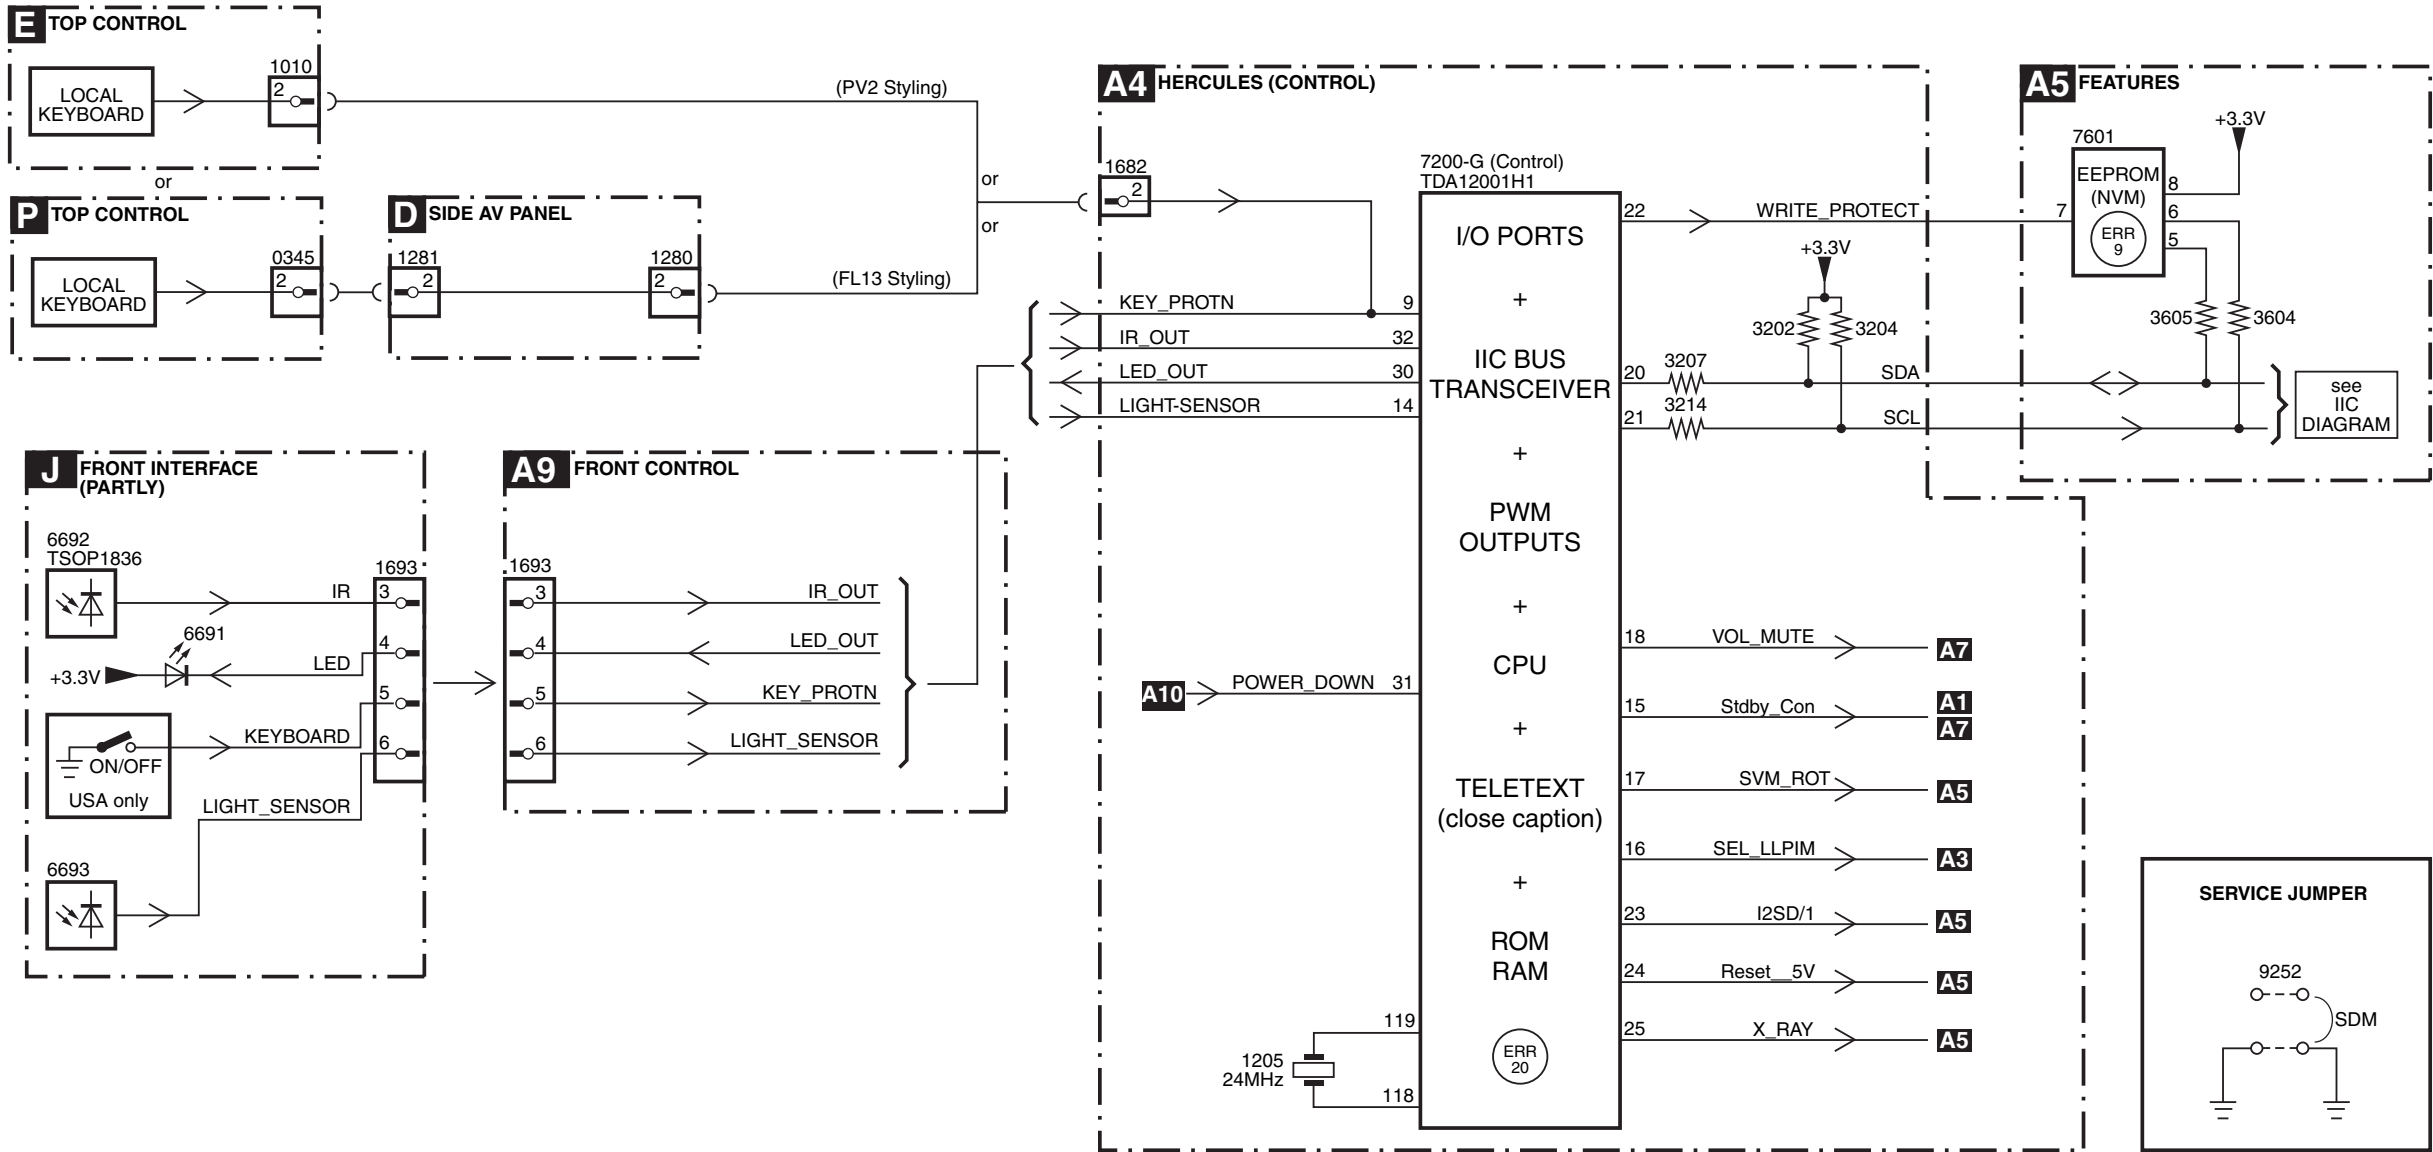


I2C BUS INTERCONNECTION DIAGRAM

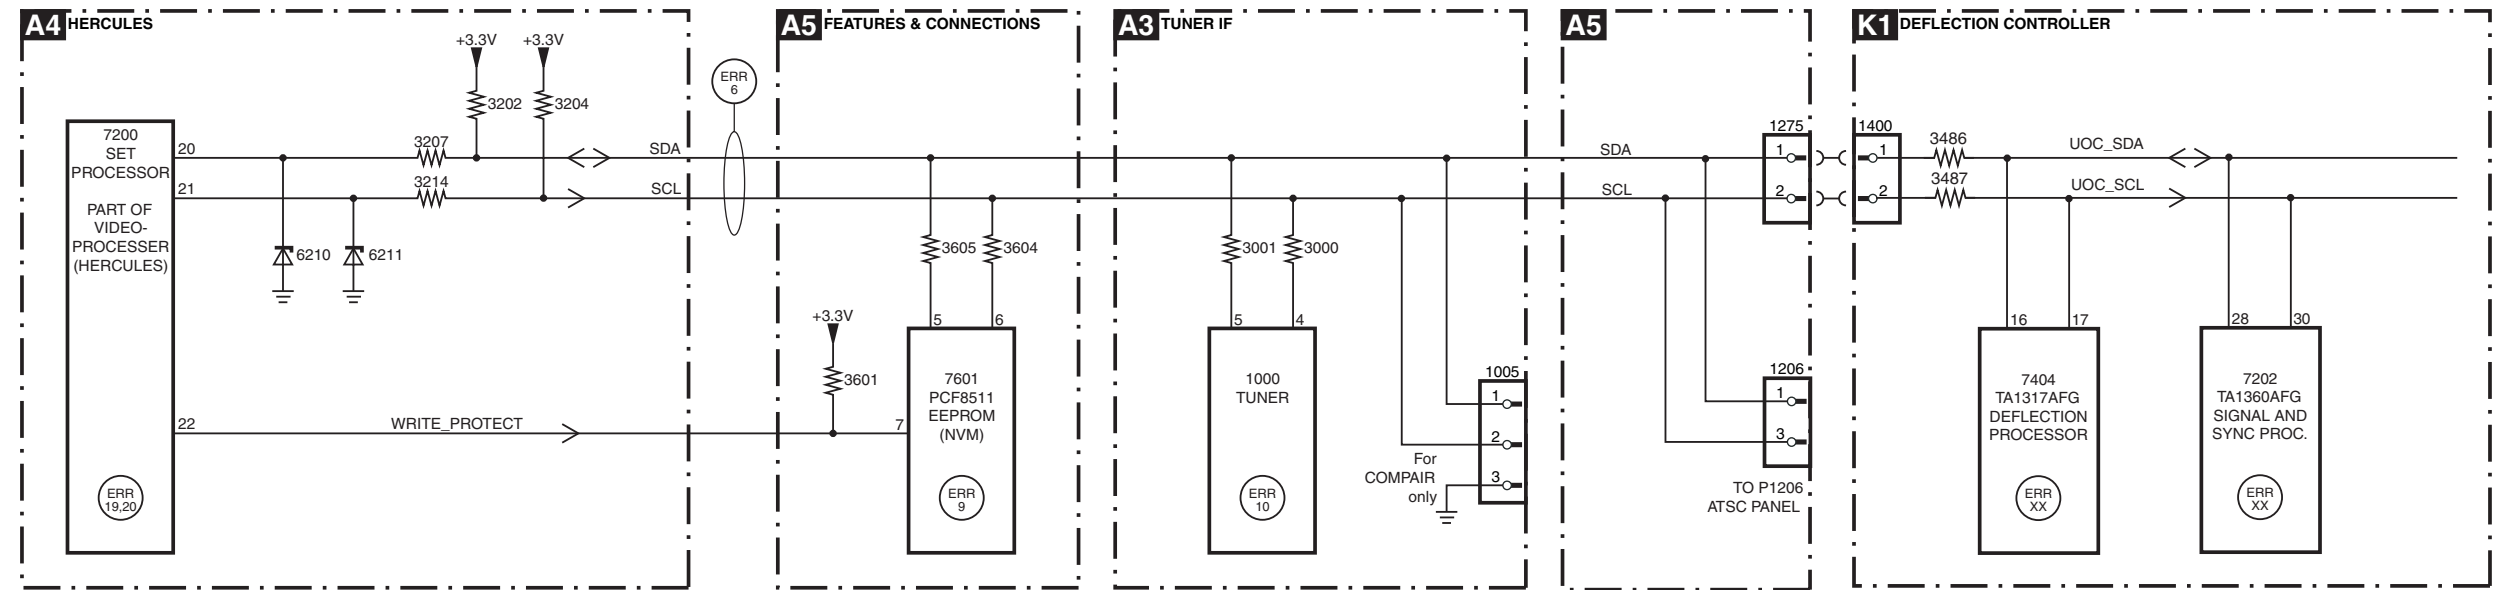

Supply Lines Overview


SUPPLY LINES DIAGRAM

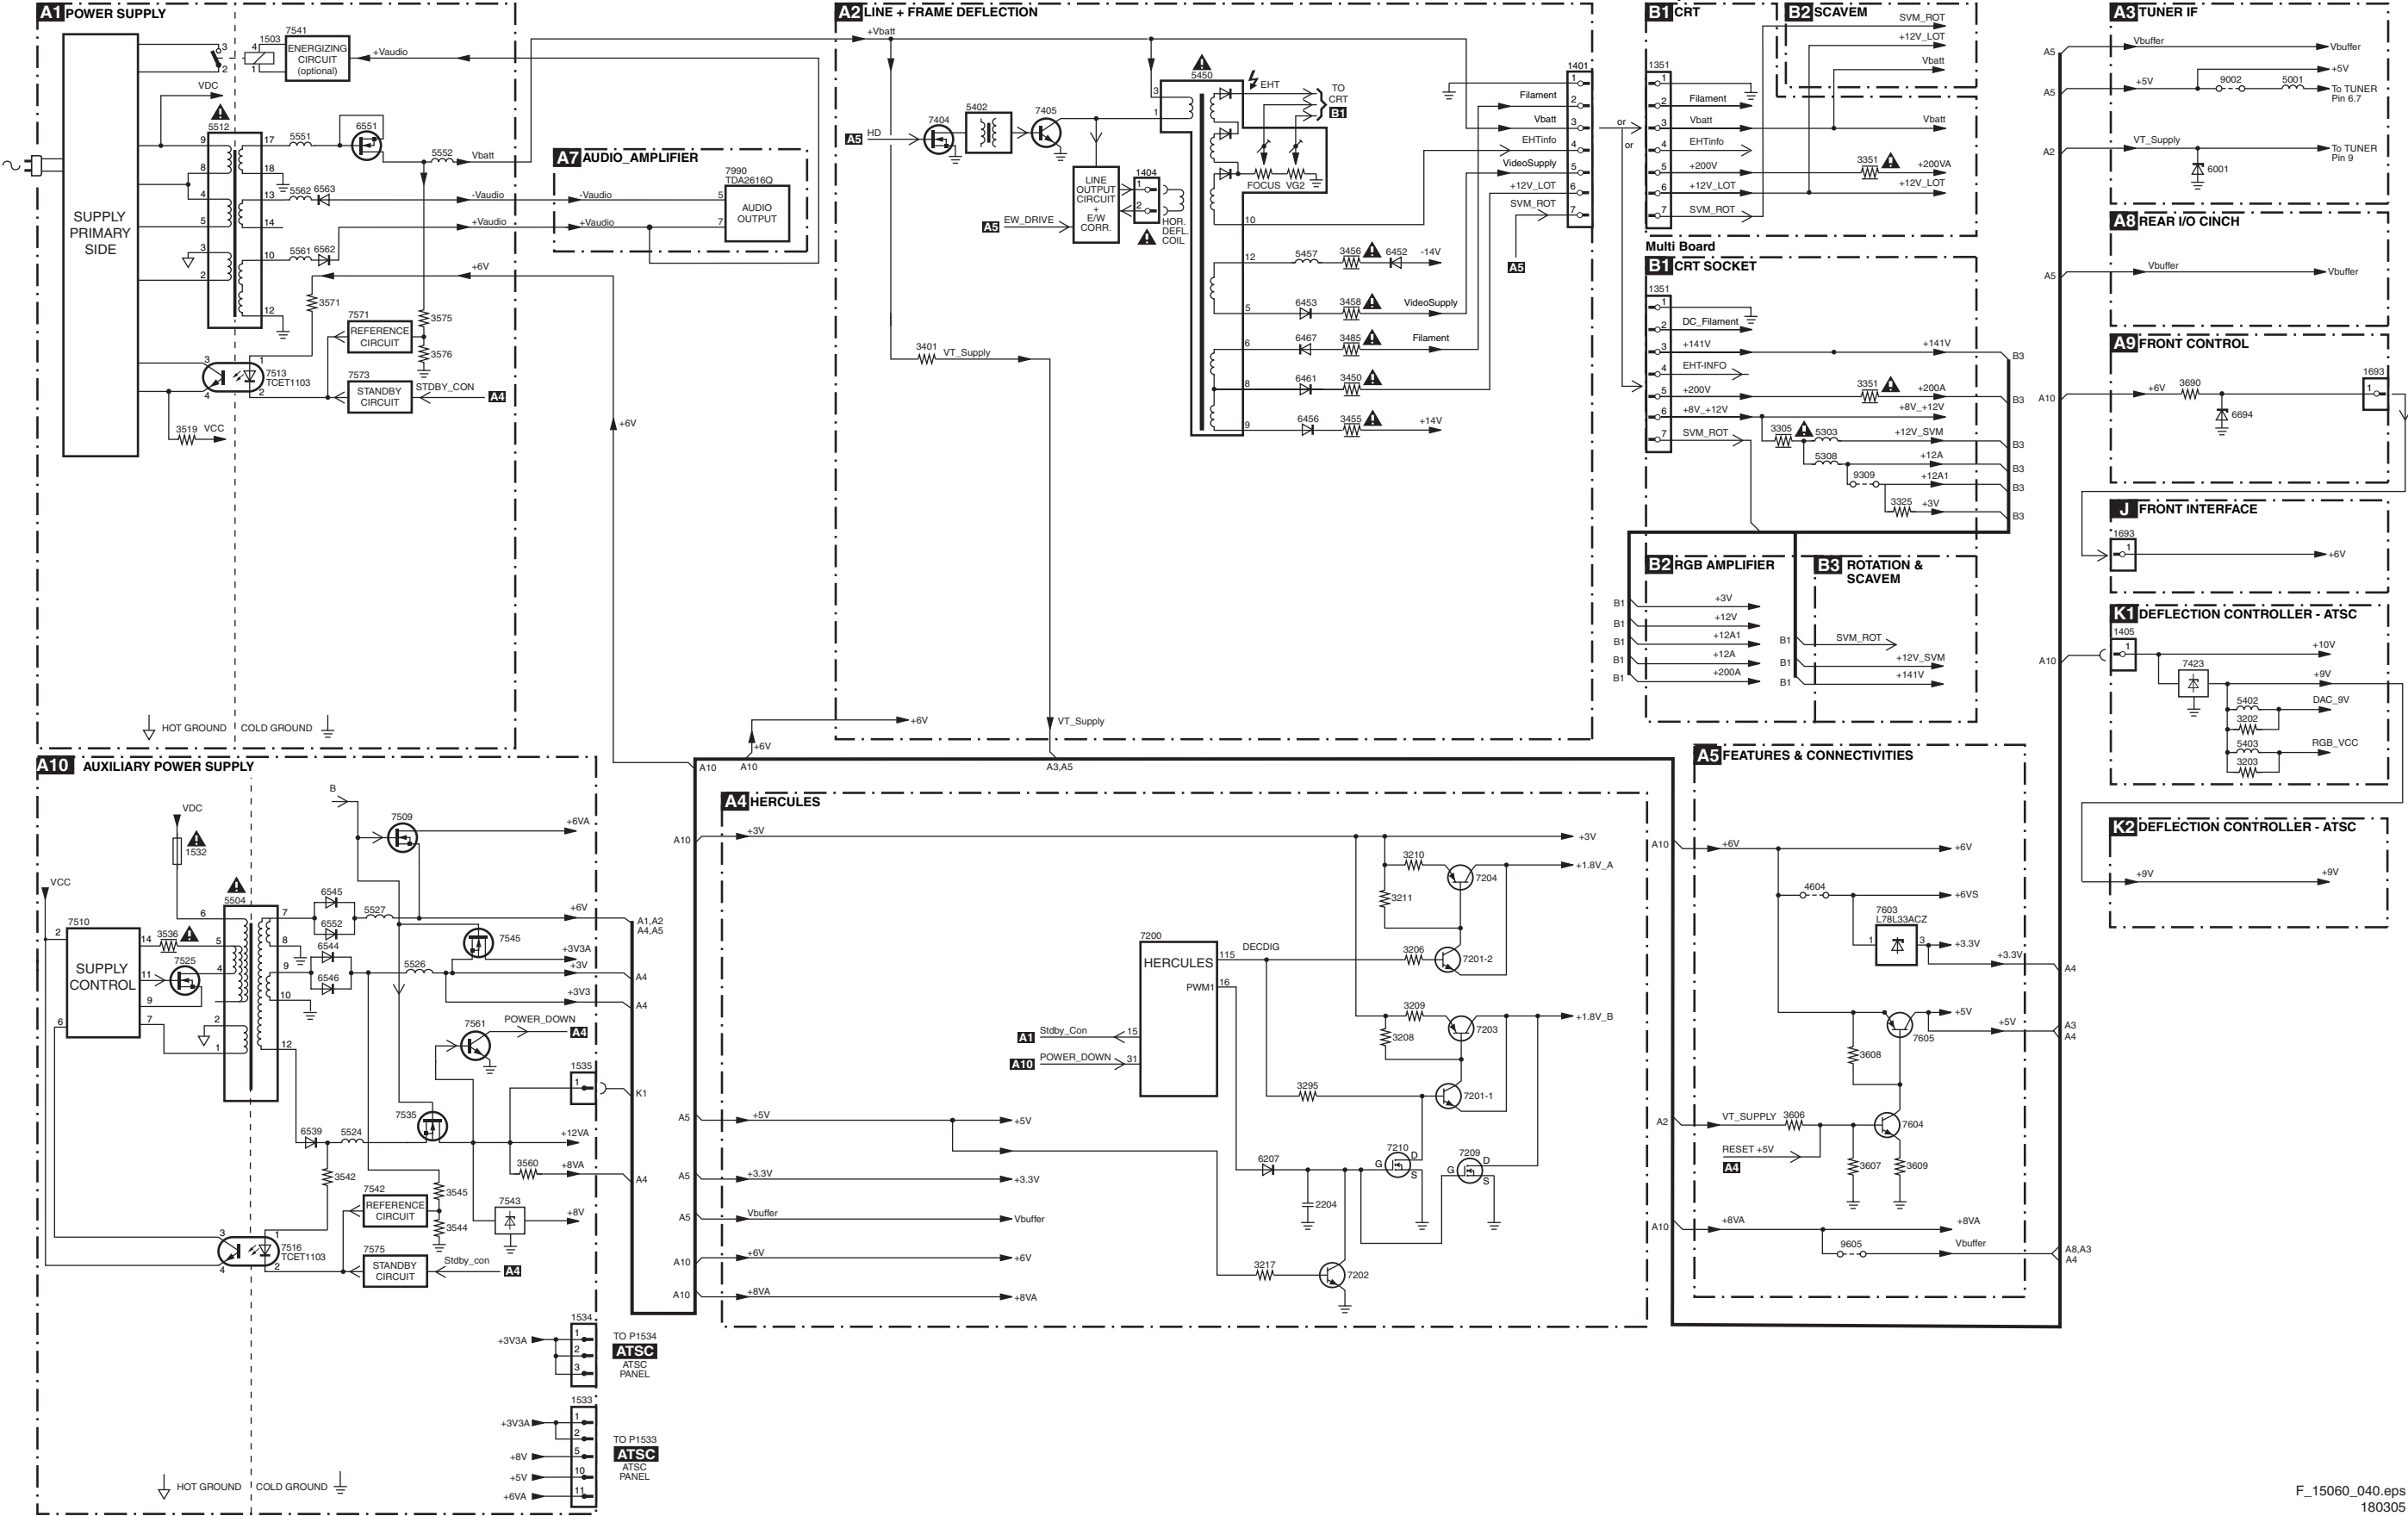



7. Circuit Diagrams and PWB Layouts


Mono Carrier: Power Supply

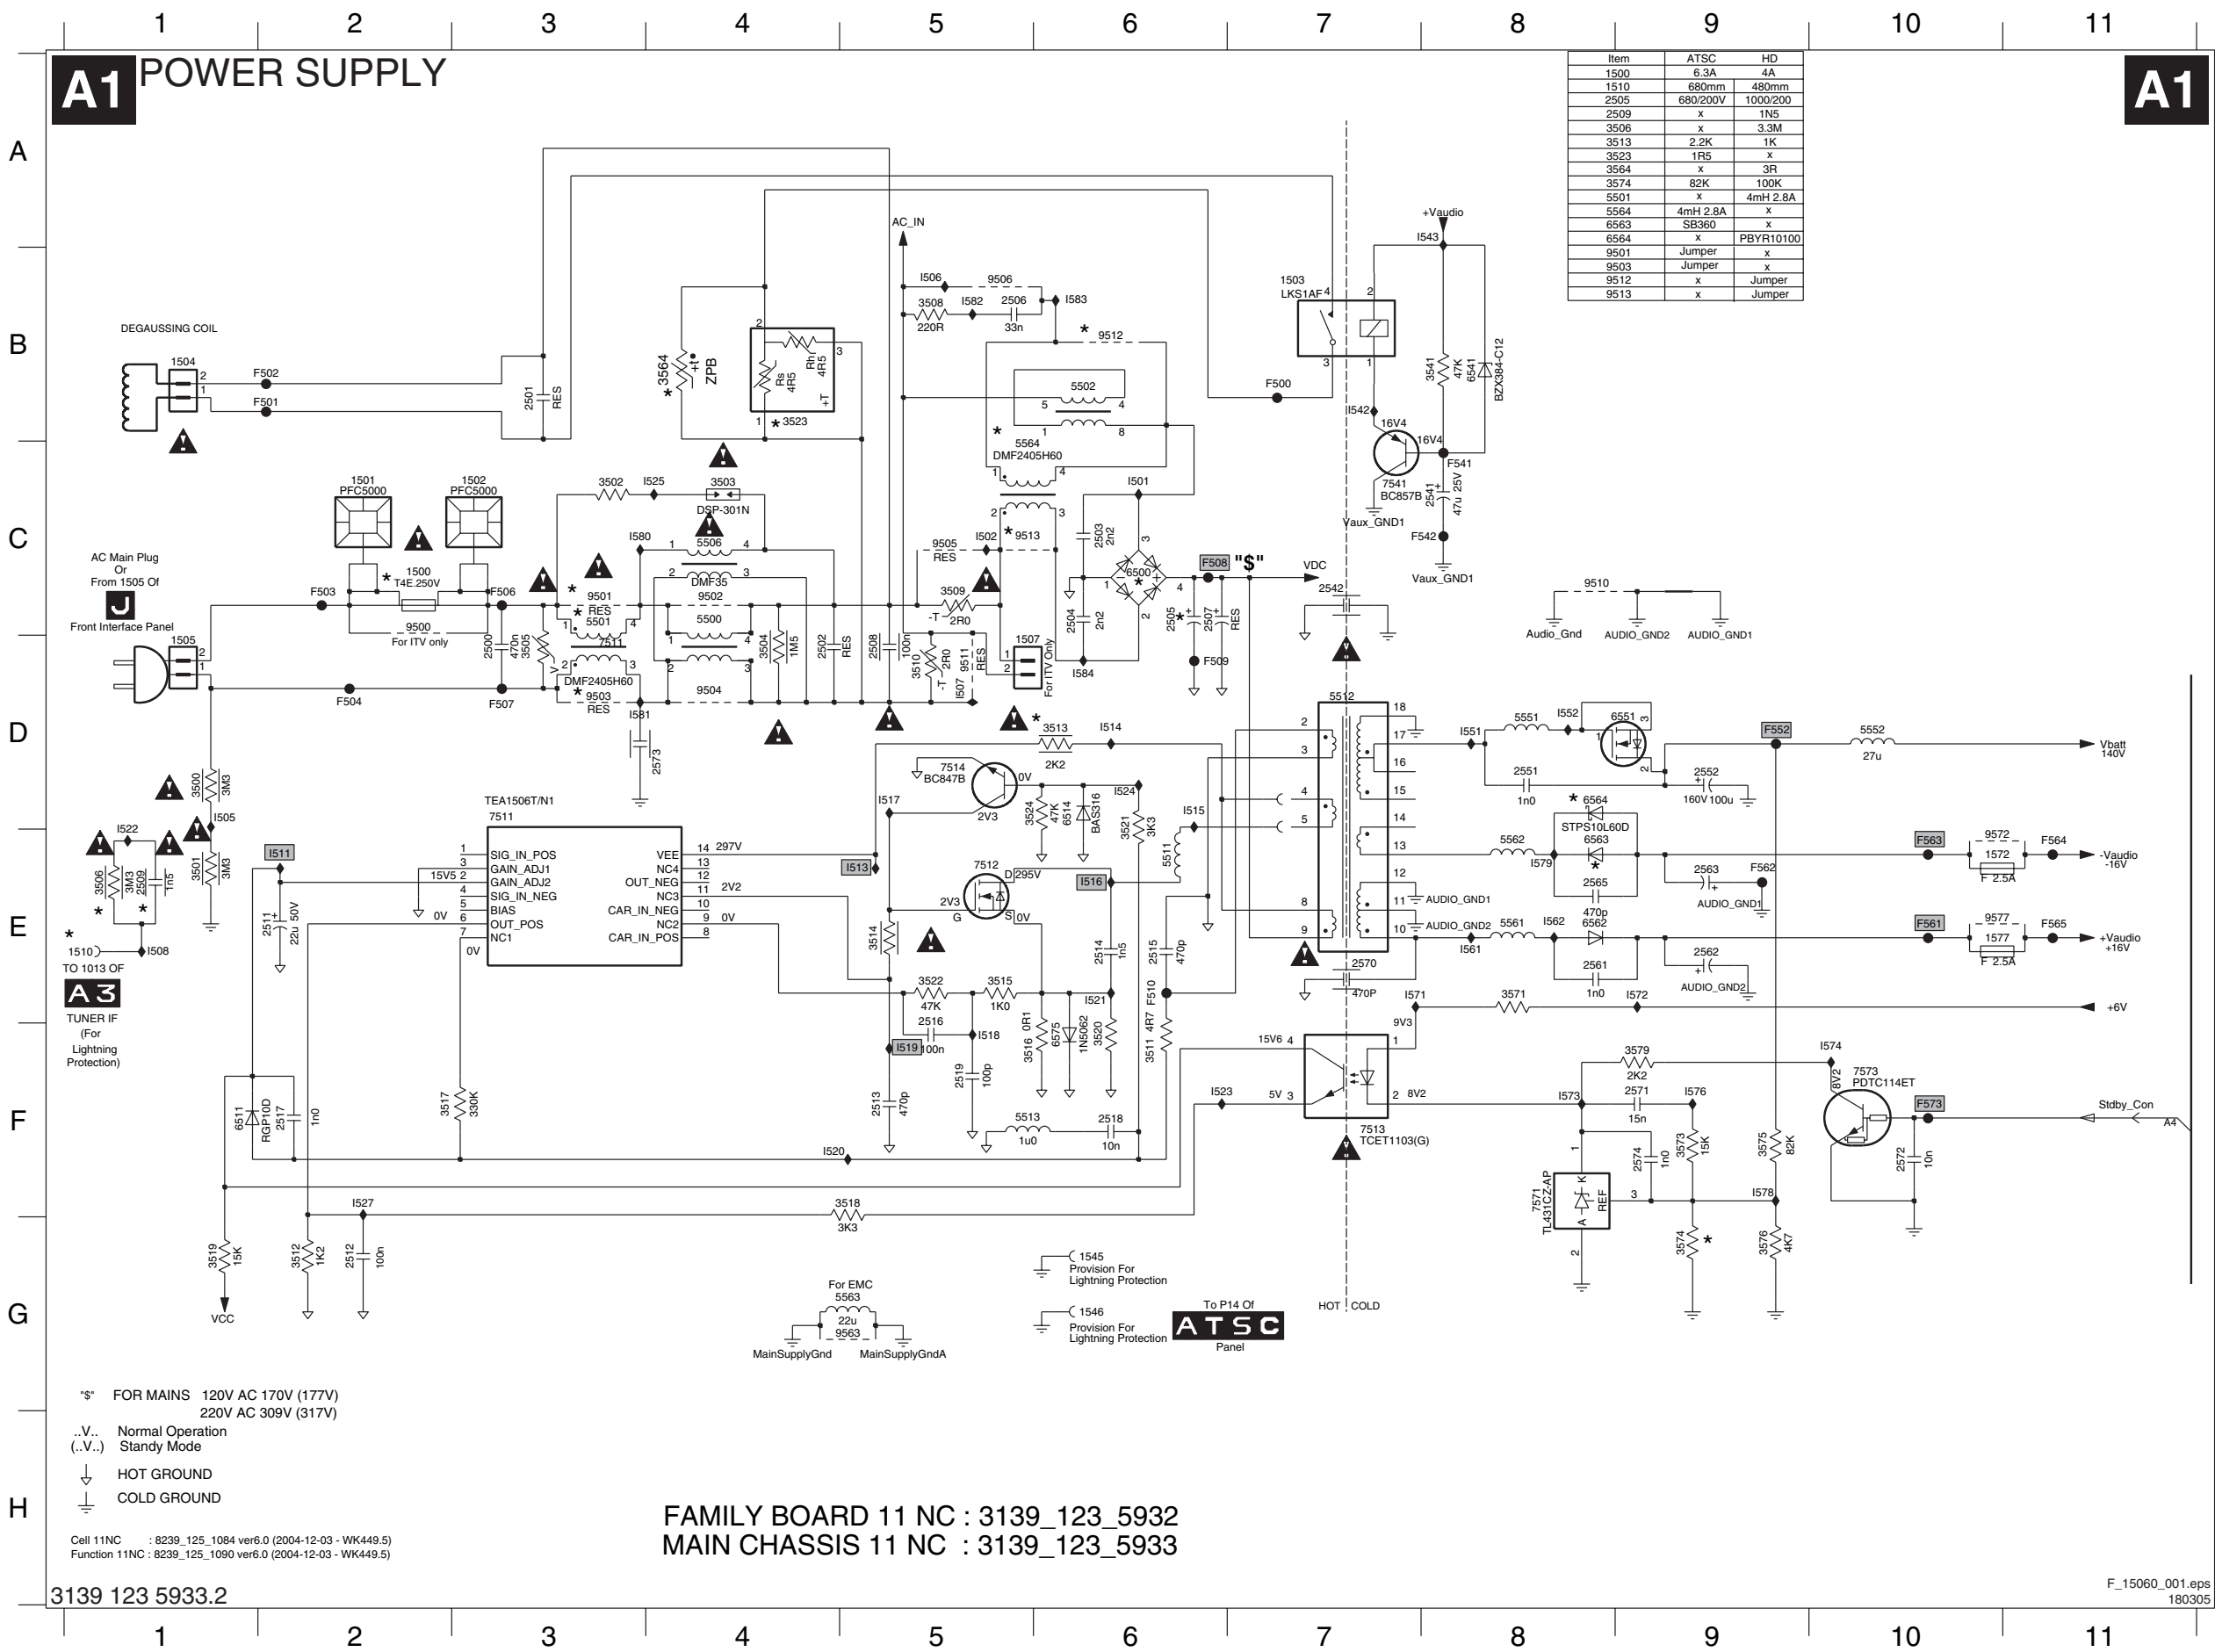

Mono Carrier: Deflection


A2 LINE + FRAME DEFLECTION

A2

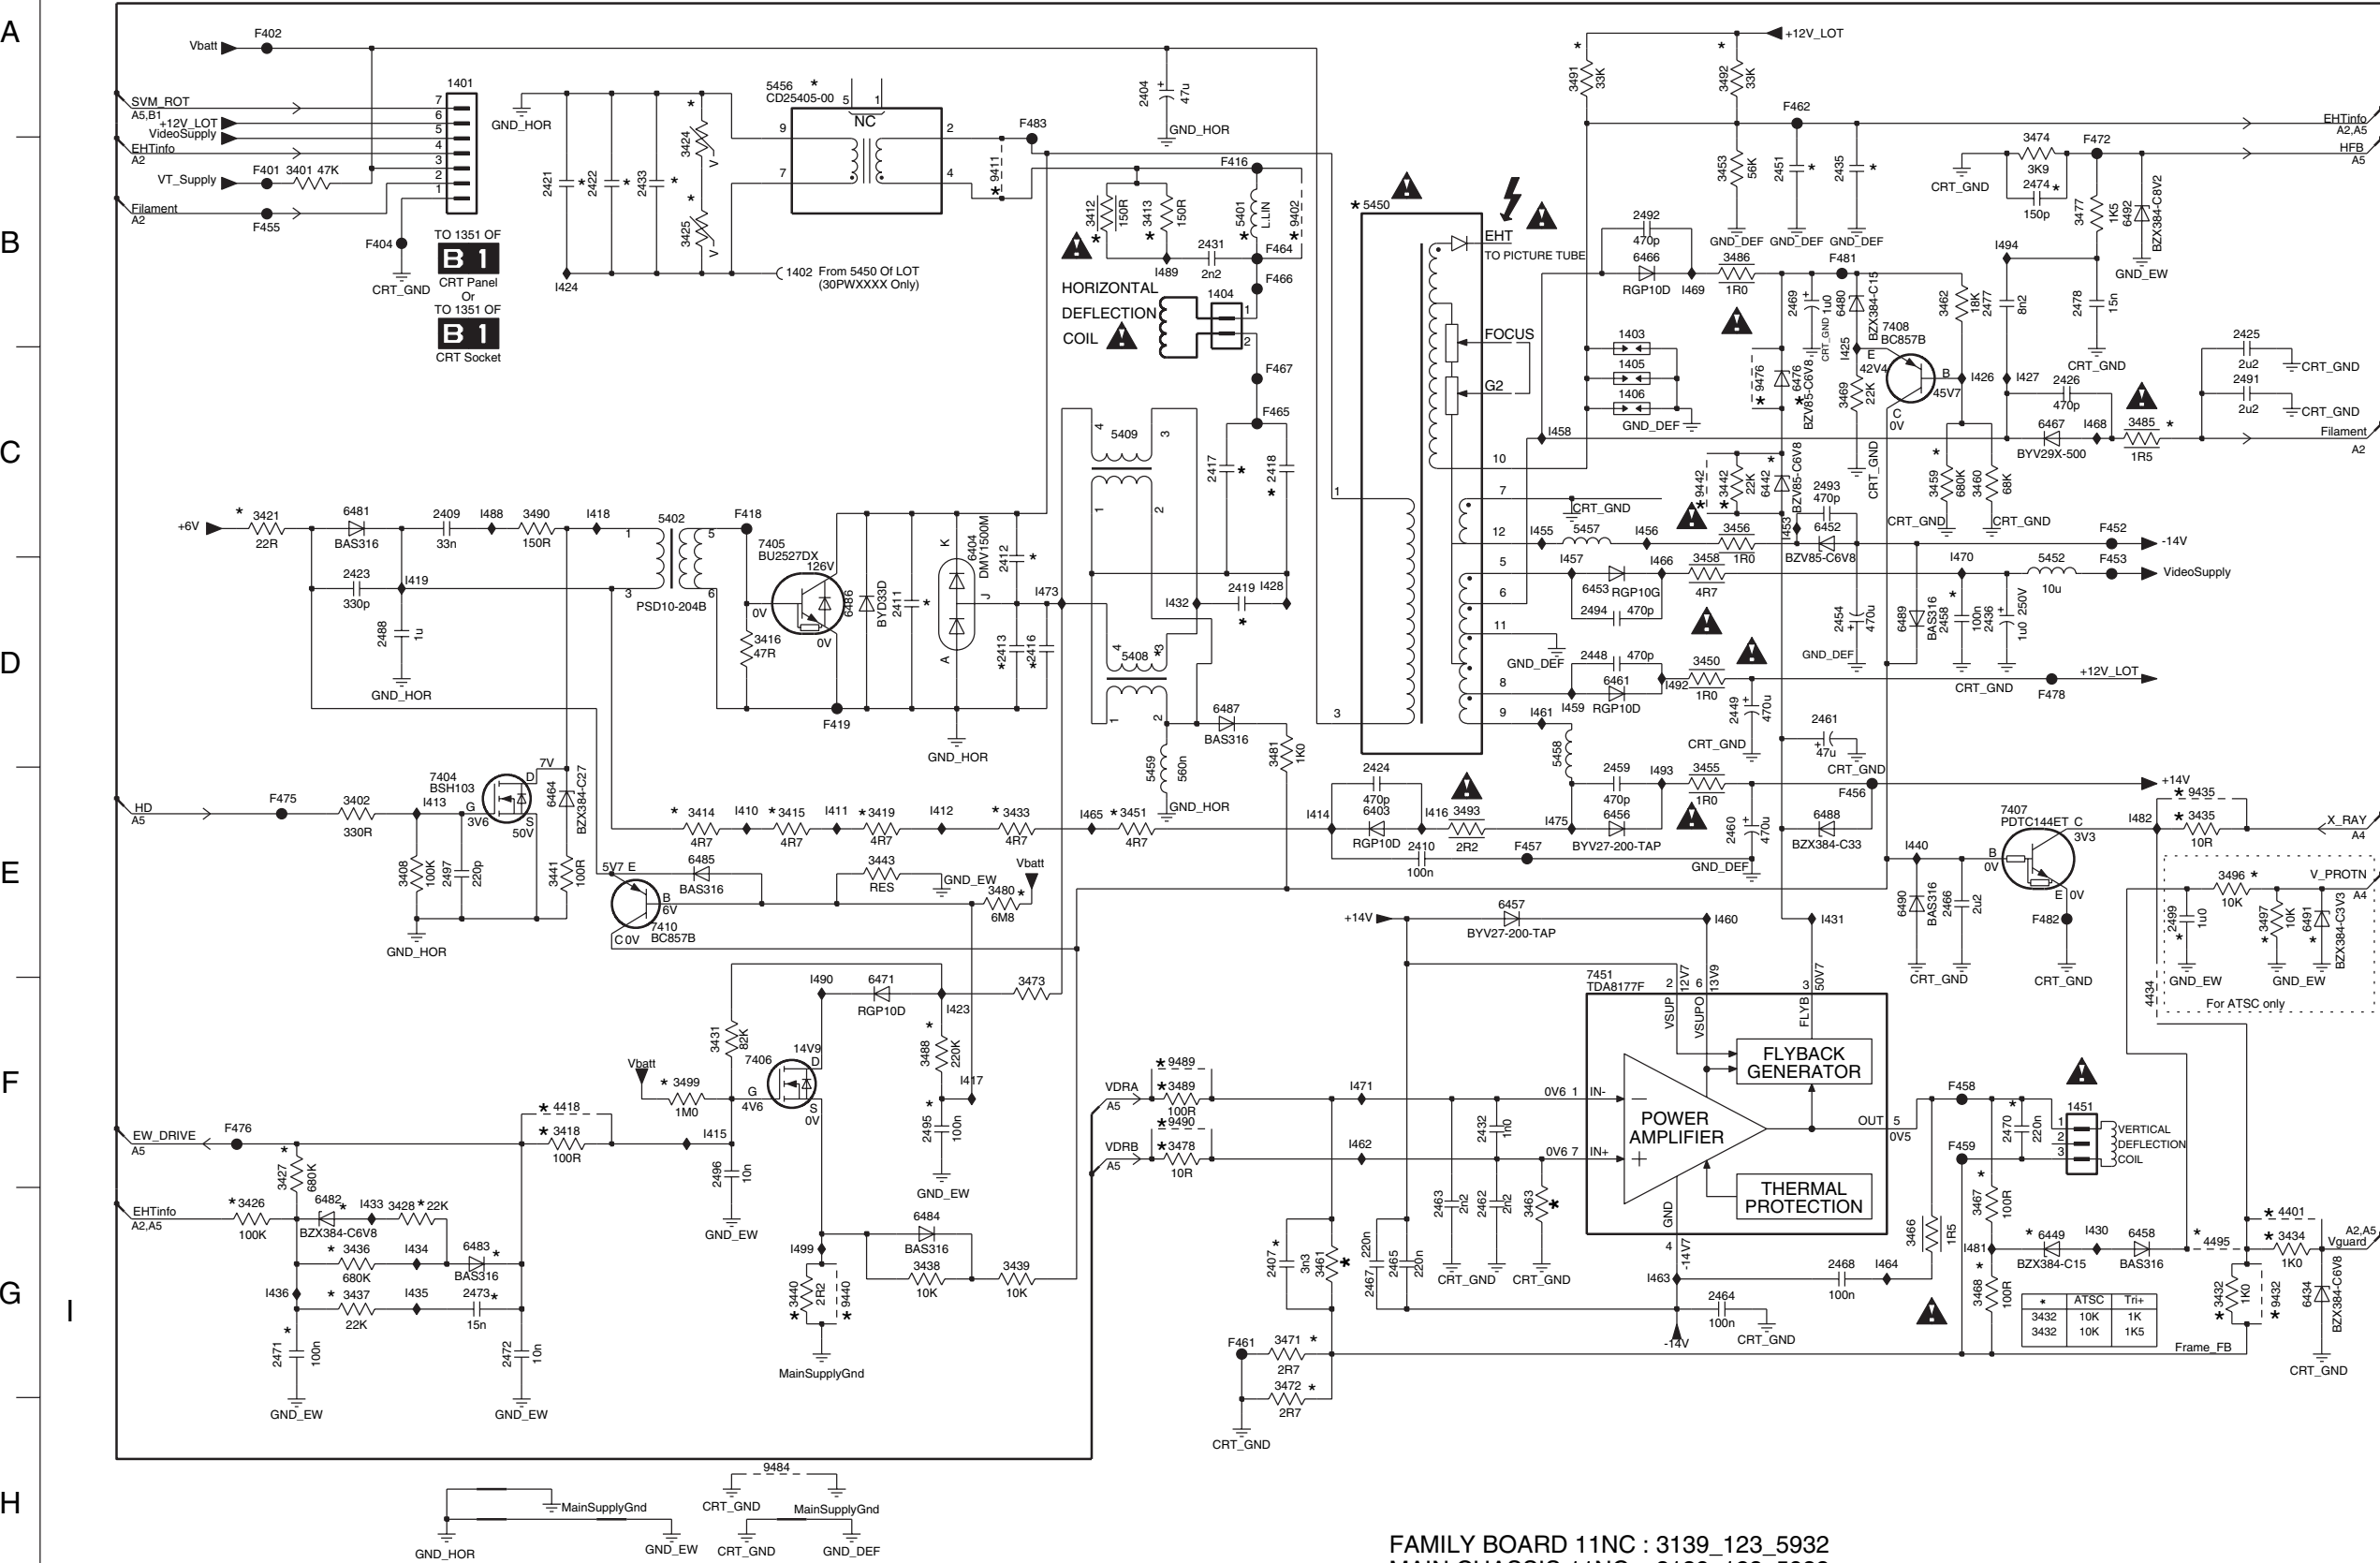


1401 A2	6481 C2
1402 B4	6482 G2
1403 B6	6483 G2
1404 B6	6484 G5
1405 C8	6485 E3
1406 C8	6486 D4
1407 F10	6487 D6
2404 A6	6488 E9
2407 G6	6489 D9
2409 C2	6490 E9
2410 E7	6491 E11
2411 D4	6492 B10
2412 D5	7404 E2
2413 D5	7405 C4
2416 D5	7406 F4
2417 C6	7407 E10
2418 C6	7408 B9
2419 D6	7410 E3
2421 B3	7451 F8
2422 B3	9402 B6
2423 D2	9411 B5
2424 E7	9432 G11
2425 B11	9435 E11
2426 C10	9440 G4
2431 B6	9442 C8
2432 F7	9476 C9
2433 B3	9484 H4
2435 B9	9489 F6
2436 D10	9490 F6
2448 D8	F401 B1
2449 D8	F402 A1
2451 B9	F404 B2
2454 D9	F416 B6
2458 D9	F416 C4
2459 E8	F418 D4
2460 E8	F452 C10
2461 D9	F453 D10
2462 G7	F455 B1
2463 G7	F456 E9
2464 G8	F457 E7
2465 G7	F458 F9
2466 E9	F459 F9
2467 G7	F461 G6
2468 G9	F462 A9
2469 B9	F464 B6
2470 F10	F465 C6
2471 G1	F466 B6
2472 G3	F467 C6
2473 G2	F472 B10
2474 B10	F475 E1
2477 B10	F476 F1
2478 B10	F478 D10
2488 D2	F481 B9
2491 C11	F482 E10
2492 B8	F483 A5
2493 C9	H10 E4
2494 D8	H11 E4
2495 F5	H12 E5
2496 F4	H13 E2
2497 E2	H14 E6
2499 E10	H15 F4
3401 B2	H16 E7
3402 E2	H17 F5
3408 E2	H18 C3
3412 B5	H19 D2
3413 B6	H23 F5
3414 E3	H24 B3
3415 E4	H25 C9
3416 D4	H26 C10
3418 F3	H27 C10
3419 E4	H28 D6
3421 C1	H30 G10
3424 A3	H31 E9
3425 B3	H32 D6
3426 G1	H33 G2
3427 G1	H34 G2
3428 G2	H35 G2
3431 F3	H36 G1
3432 G11	H40 E9
3433 E5	H43 C9
3434 G11	H45 C7
3435 E11	H46 C8
3436 G2	H47 D8
3437 G2	H48 C8
3438 G5	H49 D8
3439 G5	H49 D8
3440 G4	H49 D8
3441 E3	H49 D8
3442 C8	H49 D8
3443 E4	H49 D8
3444 D8	H49 D8
3445 D8	H49 D8
3446 D8	H49 D8
3447 D8	H49 D8
3448 D8	H49 D8
3449 D8	H49 D8
3450 D8	H49 D8
3451 E5	H49 D8
3452 B8	H49 D8
3453 B8	H49 D8
3454 B8	H49 D8
3455 B8	H49 D8
3456 B8	H49 D8
3457 B8	H49 D8
3458 D8	H49 D8
3459 C9	H49 D8
3460 C10	H49 D8
3461 G6	H49 D8
3462 B9	H49 D8
3463 G7	H49 D8
3464 G8	H49 D8
3465 G8	H49 D8
3466 G8	H49 D8
3467 G10	H49 D8
3468 G10	H49 D8
3469 C9	H49 D8
3470 G6	H49 D8
3471 G6	H49 D8
3472 G6	H49 D8
3473 F5	H49 D8
3474 B10	H49 D8
3475 B10	H49 D8
3476 F6	H49 D8
3477 B6	H49 D8
3478 E5	H49 D8
3479 D6	H49 D8
3480 C10	H49 D8
3481 D6	H49 D8
3482 C10	H49 D8
3483 B8	H49 D8
3484 F4	H49 D8
3485 F6	H49 D8
3486 C3	H49 D8
3487 A8	H49 D8
3488 E7	H49 D8
3489 E11	H49 D8
3490 F3	H49 D8
3491 G11	H49 D8
3492 F3	H49 D8
3493 F3	H49 D8
3494 F3	H49 D8
3495 F3	H49 D8
3496 F3	H49 D8
3497 F3	H49 D8
3498 F3	H49 D8
3499 F3	H49 D8
3500 F3	H49 D8

Mono Carrier: Tuner IF

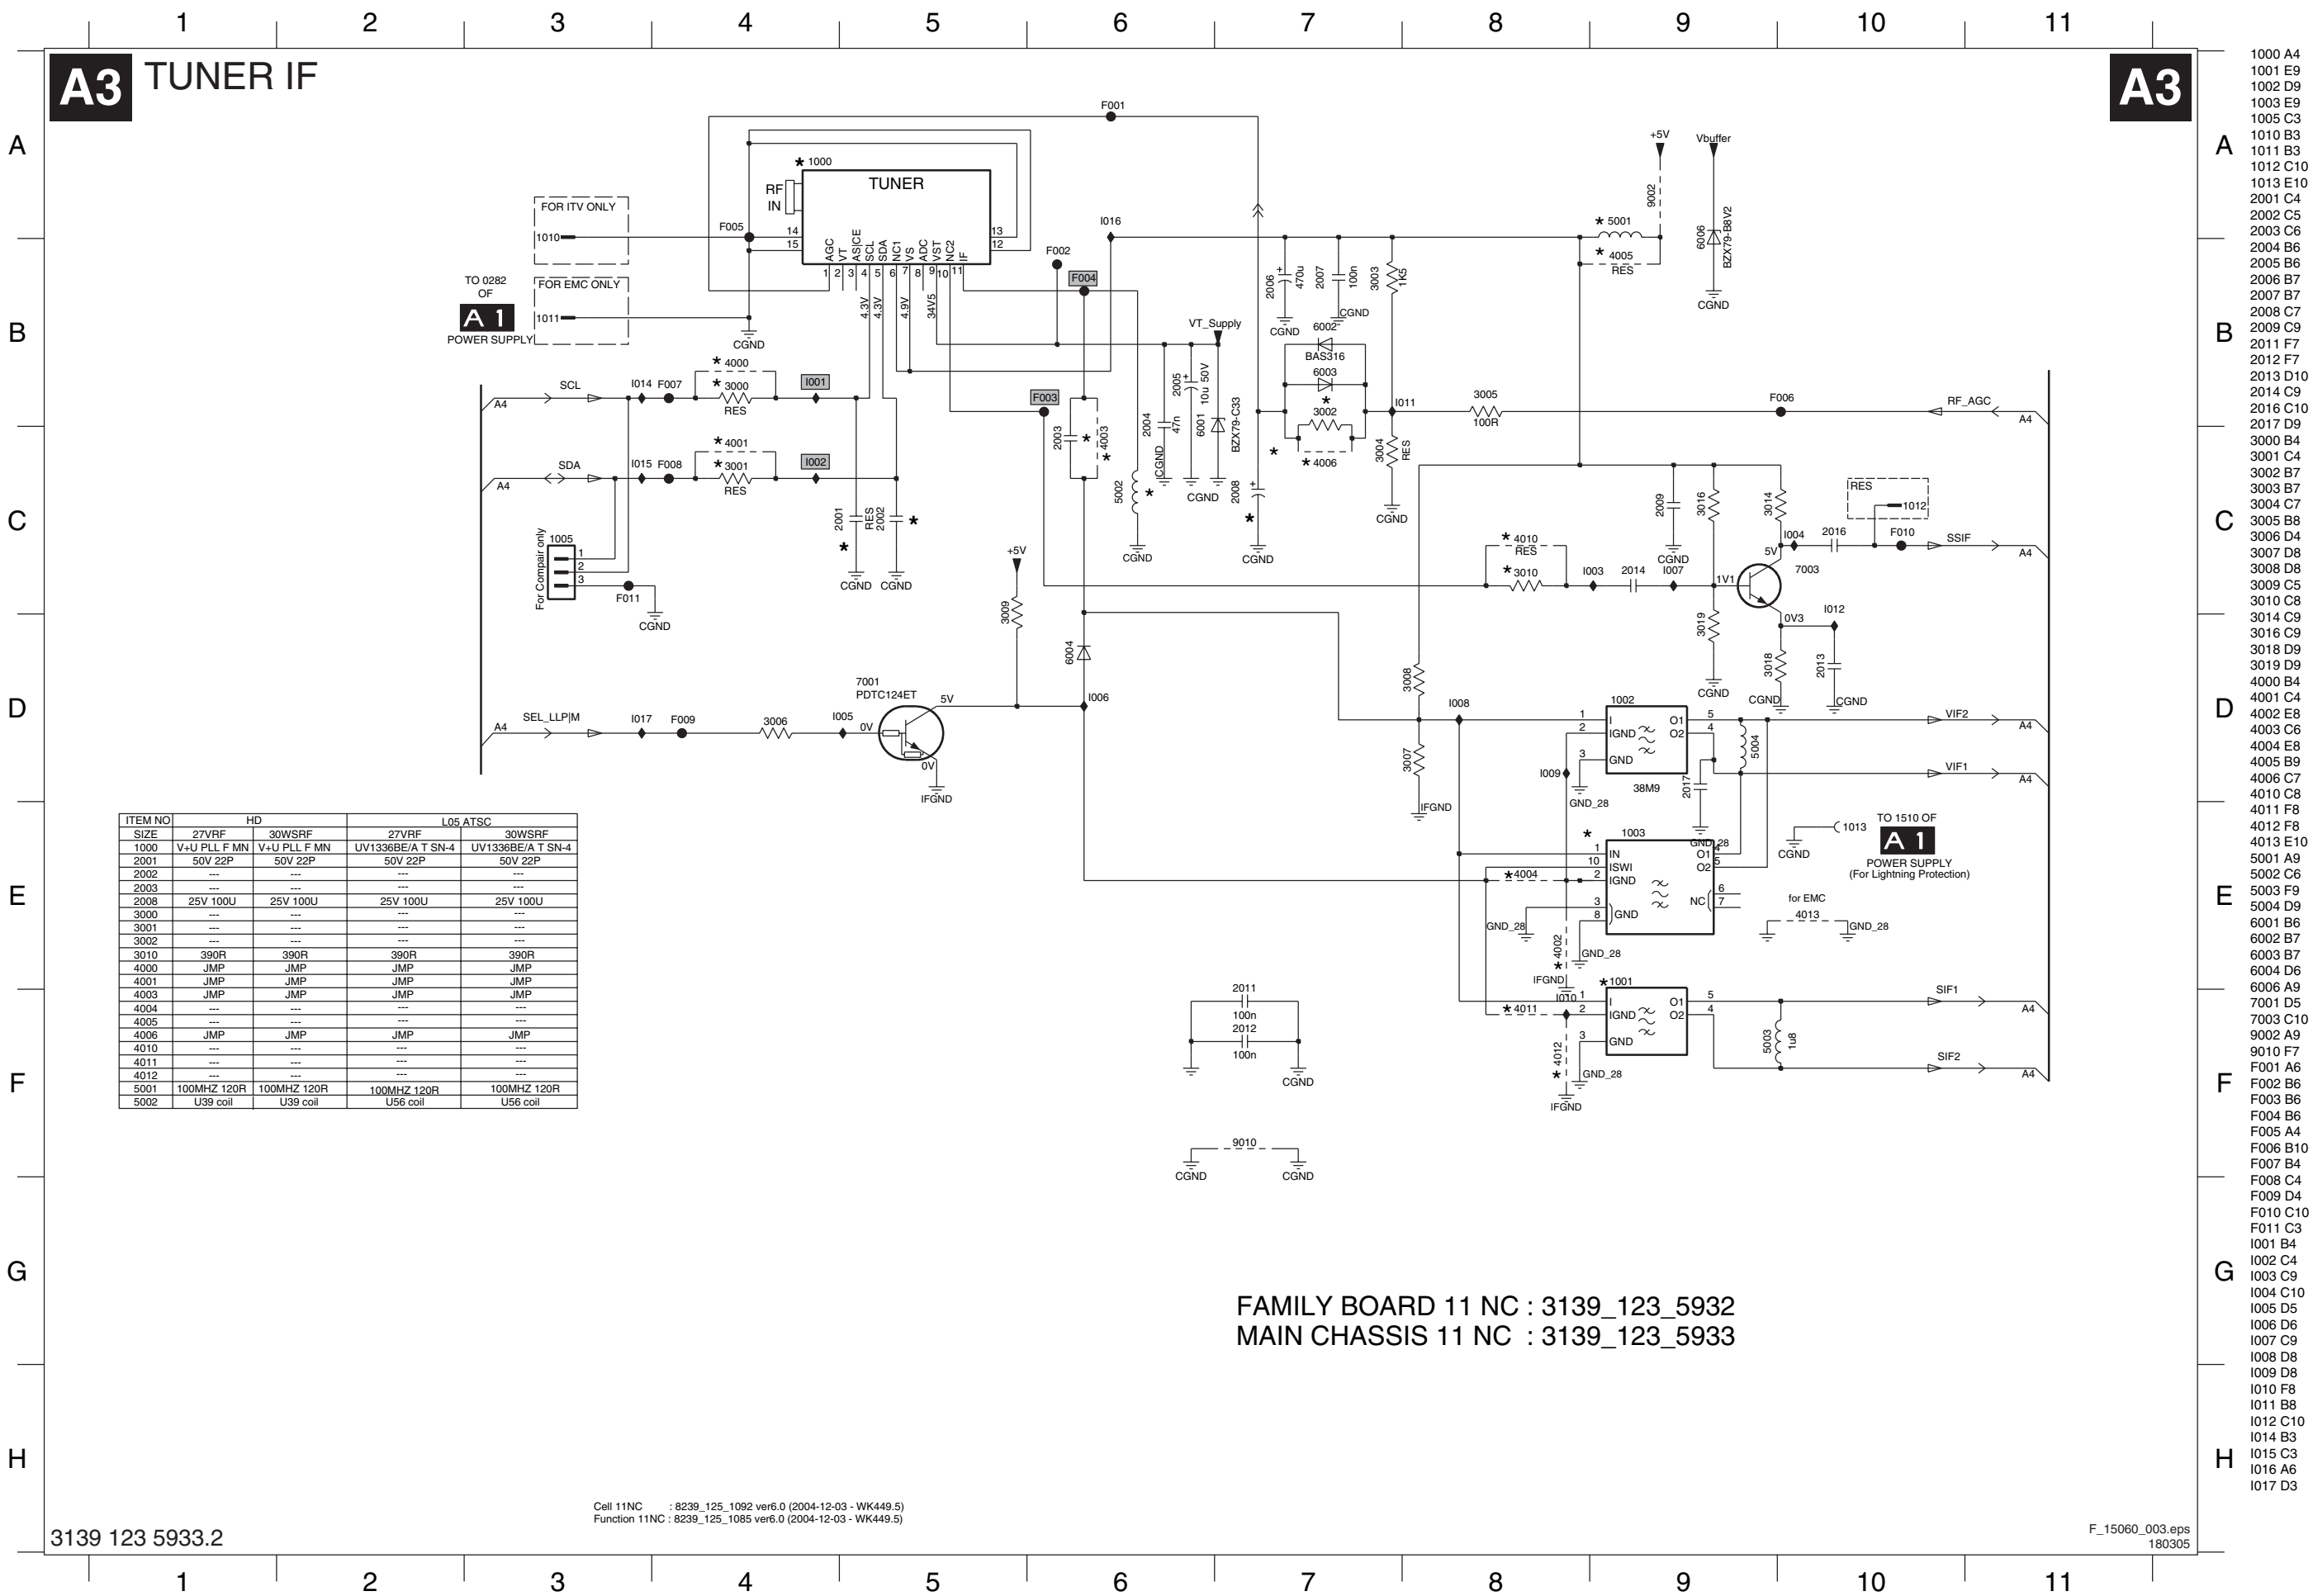

Mono Carrier: Hercules

















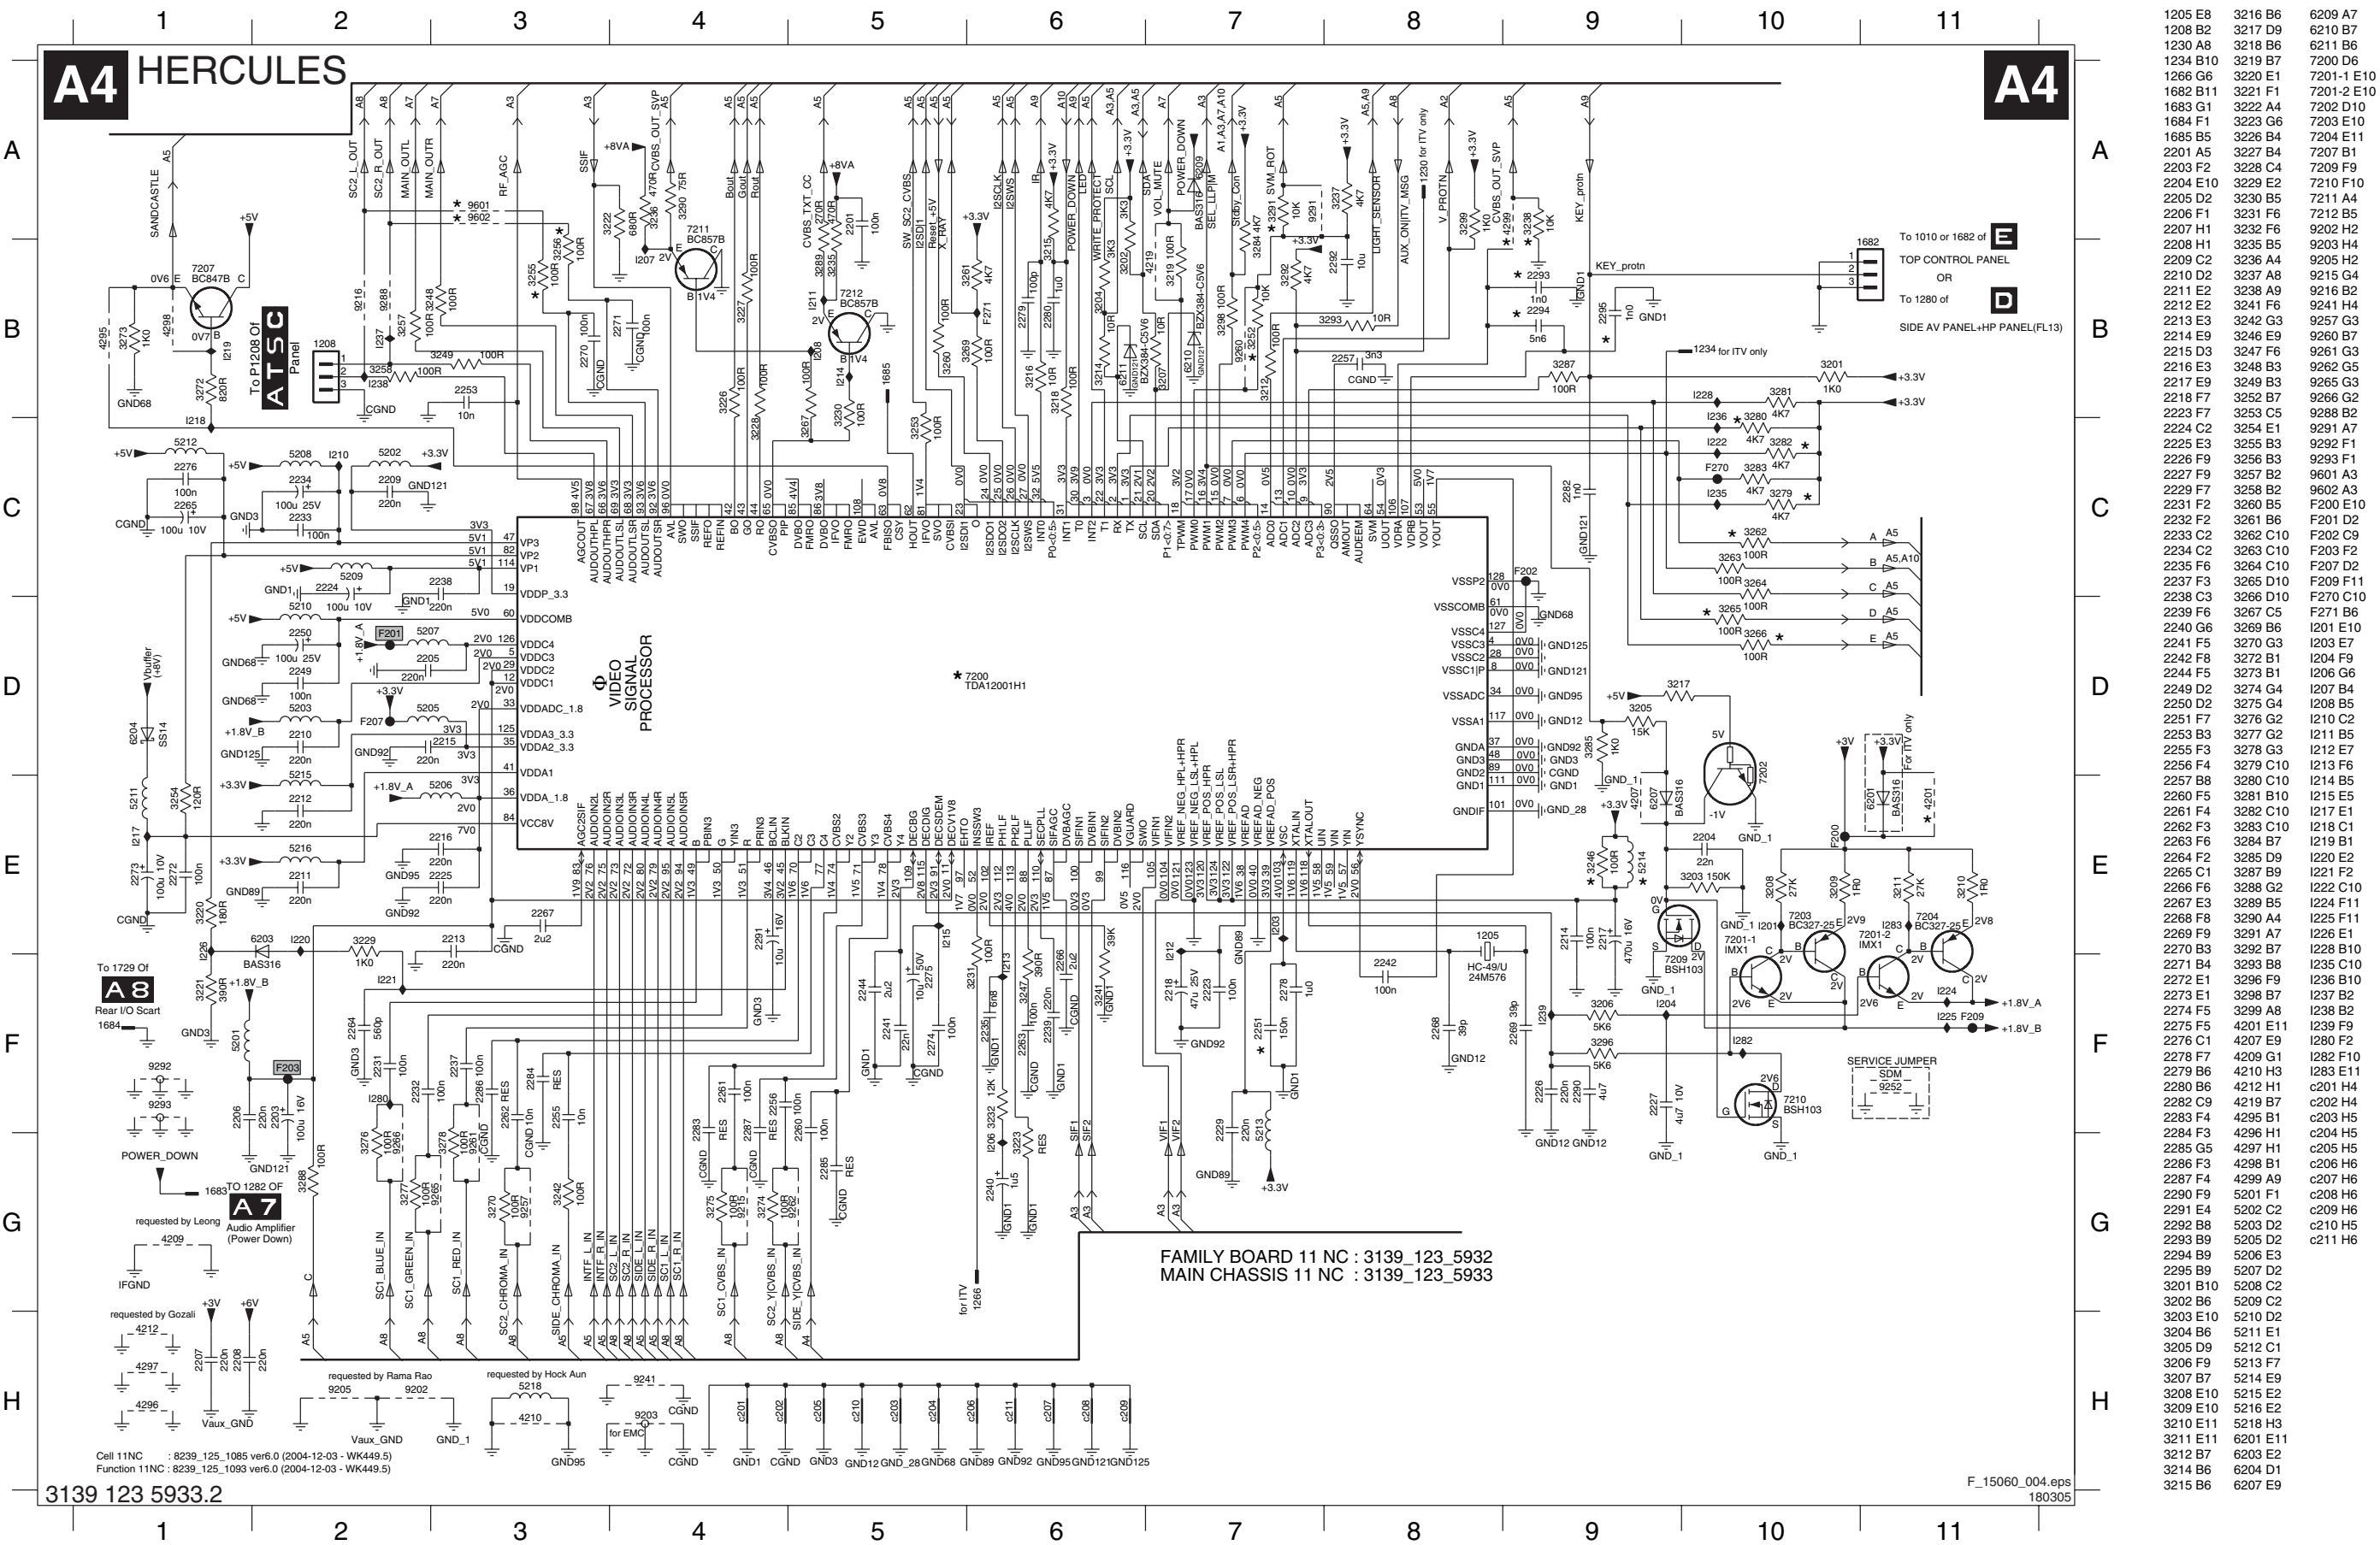




Mono Carrier: Features & Connectivities

A5 FEATURES & CONNECTIVITIES

A5

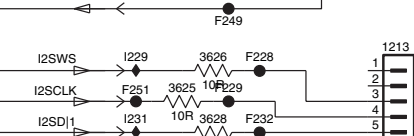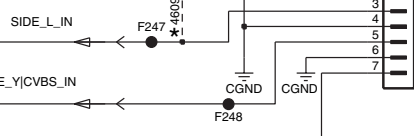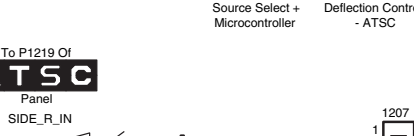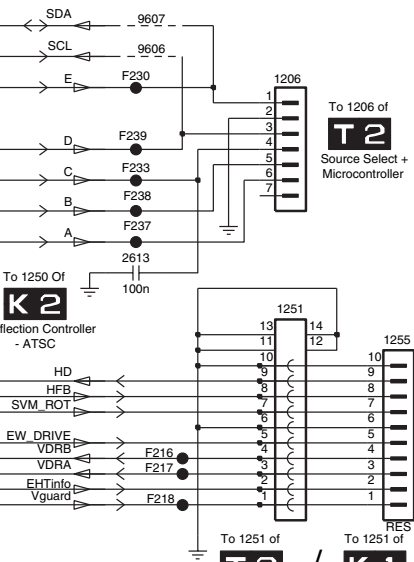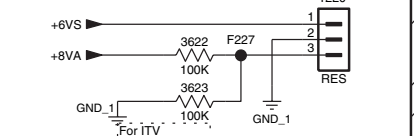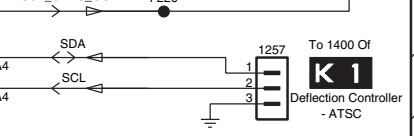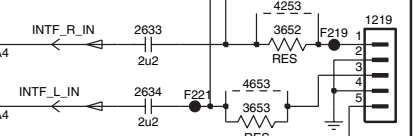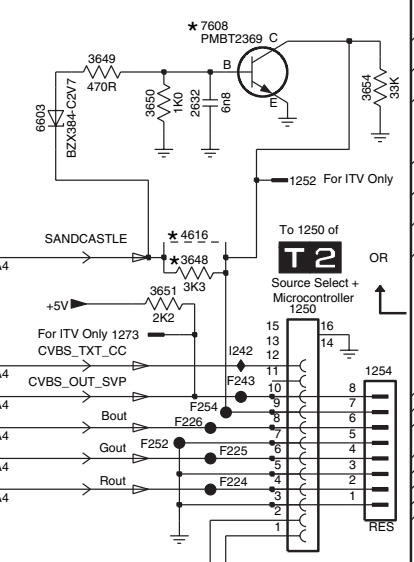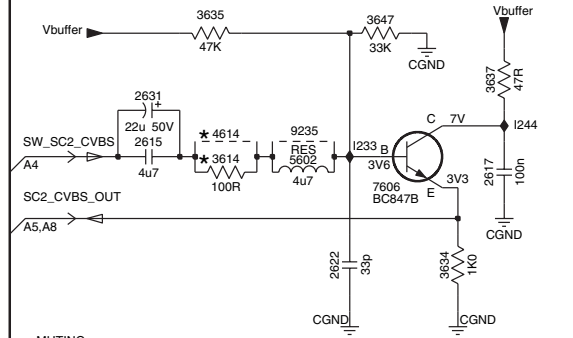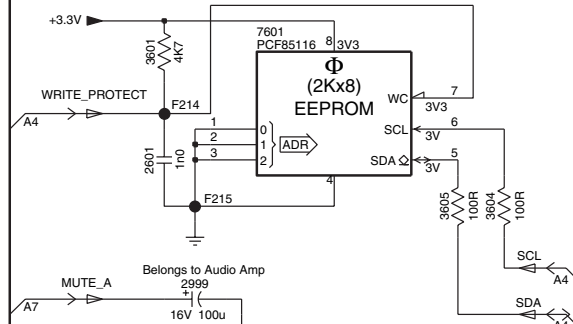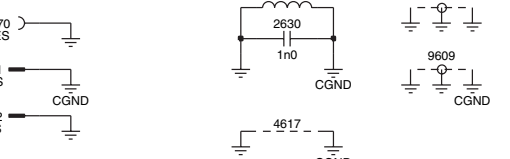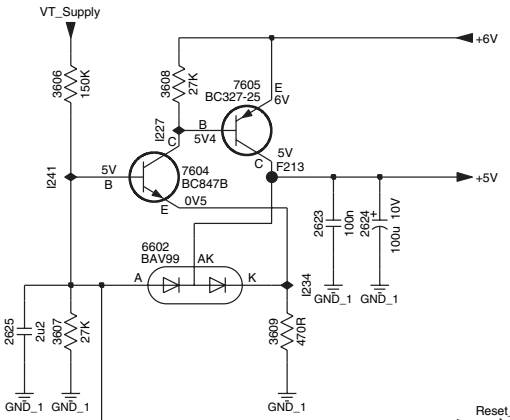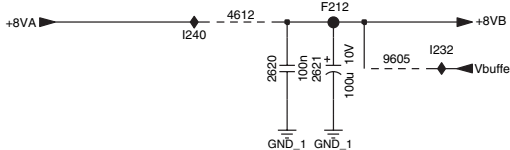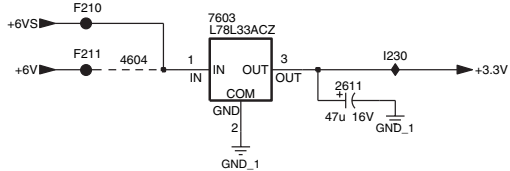

To 1206 of  
Source Select +  
Microcontroller

To P1206 Of  
ATSC  
Panel

To 1251 of  
Source Select +  
Microcontroller

To 1251 of  
Deflection Controller  
- ATSC

To 1252 of  
AV Panel

To 1252 of  
Side AV Panel +  
HP Panel

To 1252 of  
AV Panel

To 1252 of  
Side AV Panel +  
HP Panel


To 1252 of  
AV Panel

To 1252 of  
Side AV Panel +  
HP Panel

- 1206 A10
- 1207 D10
- 1213 E10
- 1219 D8
- 1220 E8
- 1221 F8
- 1240 F5
- 1241 F7
- 1243 F7
- 1250 B8
- 1251 B10
- 1252 B8
- 1254 C8
- 1255 C10
- 1257 E8
- 1270 F1
- 1271 F1
- 1272 G1
- 1273 C7
- 2601 C4
- 2611 B3
- 2613 B9
- 2615 E4
- 2617 E6
- 2620 C3
- 2621 C3
- 2622 F5
- 2623 E3
- 2624 E3
- 2625 E1
- 2630 F3
- 2631 E4
- 2632 A7
- 2633 D7
- 2634 D7
- 2999 D5
- 3601 C4
- 3604 C6
- 3605 C6
- 3606 D2
- 3607 E2
- 3608 D2
- 3609 E3
- 3614 E5
- 3622 E7
- 3623 F7
- 3625 F9
- 3626 E10
- 3628 F10
- 3634 F6
- 3635 D5
- 3637 E6
- 3647 D6
- 3648 B7
- 3649 A7
- 3650 A7
- 3651 B7
- 3652 D8
- 3653 D8
- 3654 A8
- 4253 D8
- 4604 B2
- 4609 D9
- 4612 C2
- 4614 E5
- 4616 B7
- 4617 G3
- 4653 D8
- 5601 F3
- 5602 E5
- 6602 E2
- 6603 B7
- 7601 B5
- 7603 B2
- 7604 E2
- 7605 D2
- 7606 E5
- 7608 A7
- 9235 E5
- 9280 F7
- 9605 C3
- 9606 A9
- 9607 A9
- 9608 F3
- 9609 F3
- F210 B2
- F211 B2
- F212 C3
- F213 E3
- F214 C5
- F215 C5
- F216 C9
- F217 C9
- F218 C9
- F219 D8
- F220 D7
- F221 D7
- F224 C8
- F225 C8
- F226 C7
- F227 E8
- F228 E10
- F229 F10
- F230 A9
- F232 F10
- F233 B9
- F238 B9
- F243 C8
- F247 E9
- F248 E10
- F249 E10
- F251 F9
- F252 C7
- F254 C7
- I227 E2
- I229 E9
- I230 B3
- I231 F9
- I232 C3
- I233 E5
- I234 C3
- I240 C2
- I241 E1
- I242 C8
- I244 E6

FAMILY BOARD 11 NC : 3139\_123\_5932  
MAIN CHASSIS 11 NC : 3139\_123\_5933


## A7 AUDIO AMPLIFIER

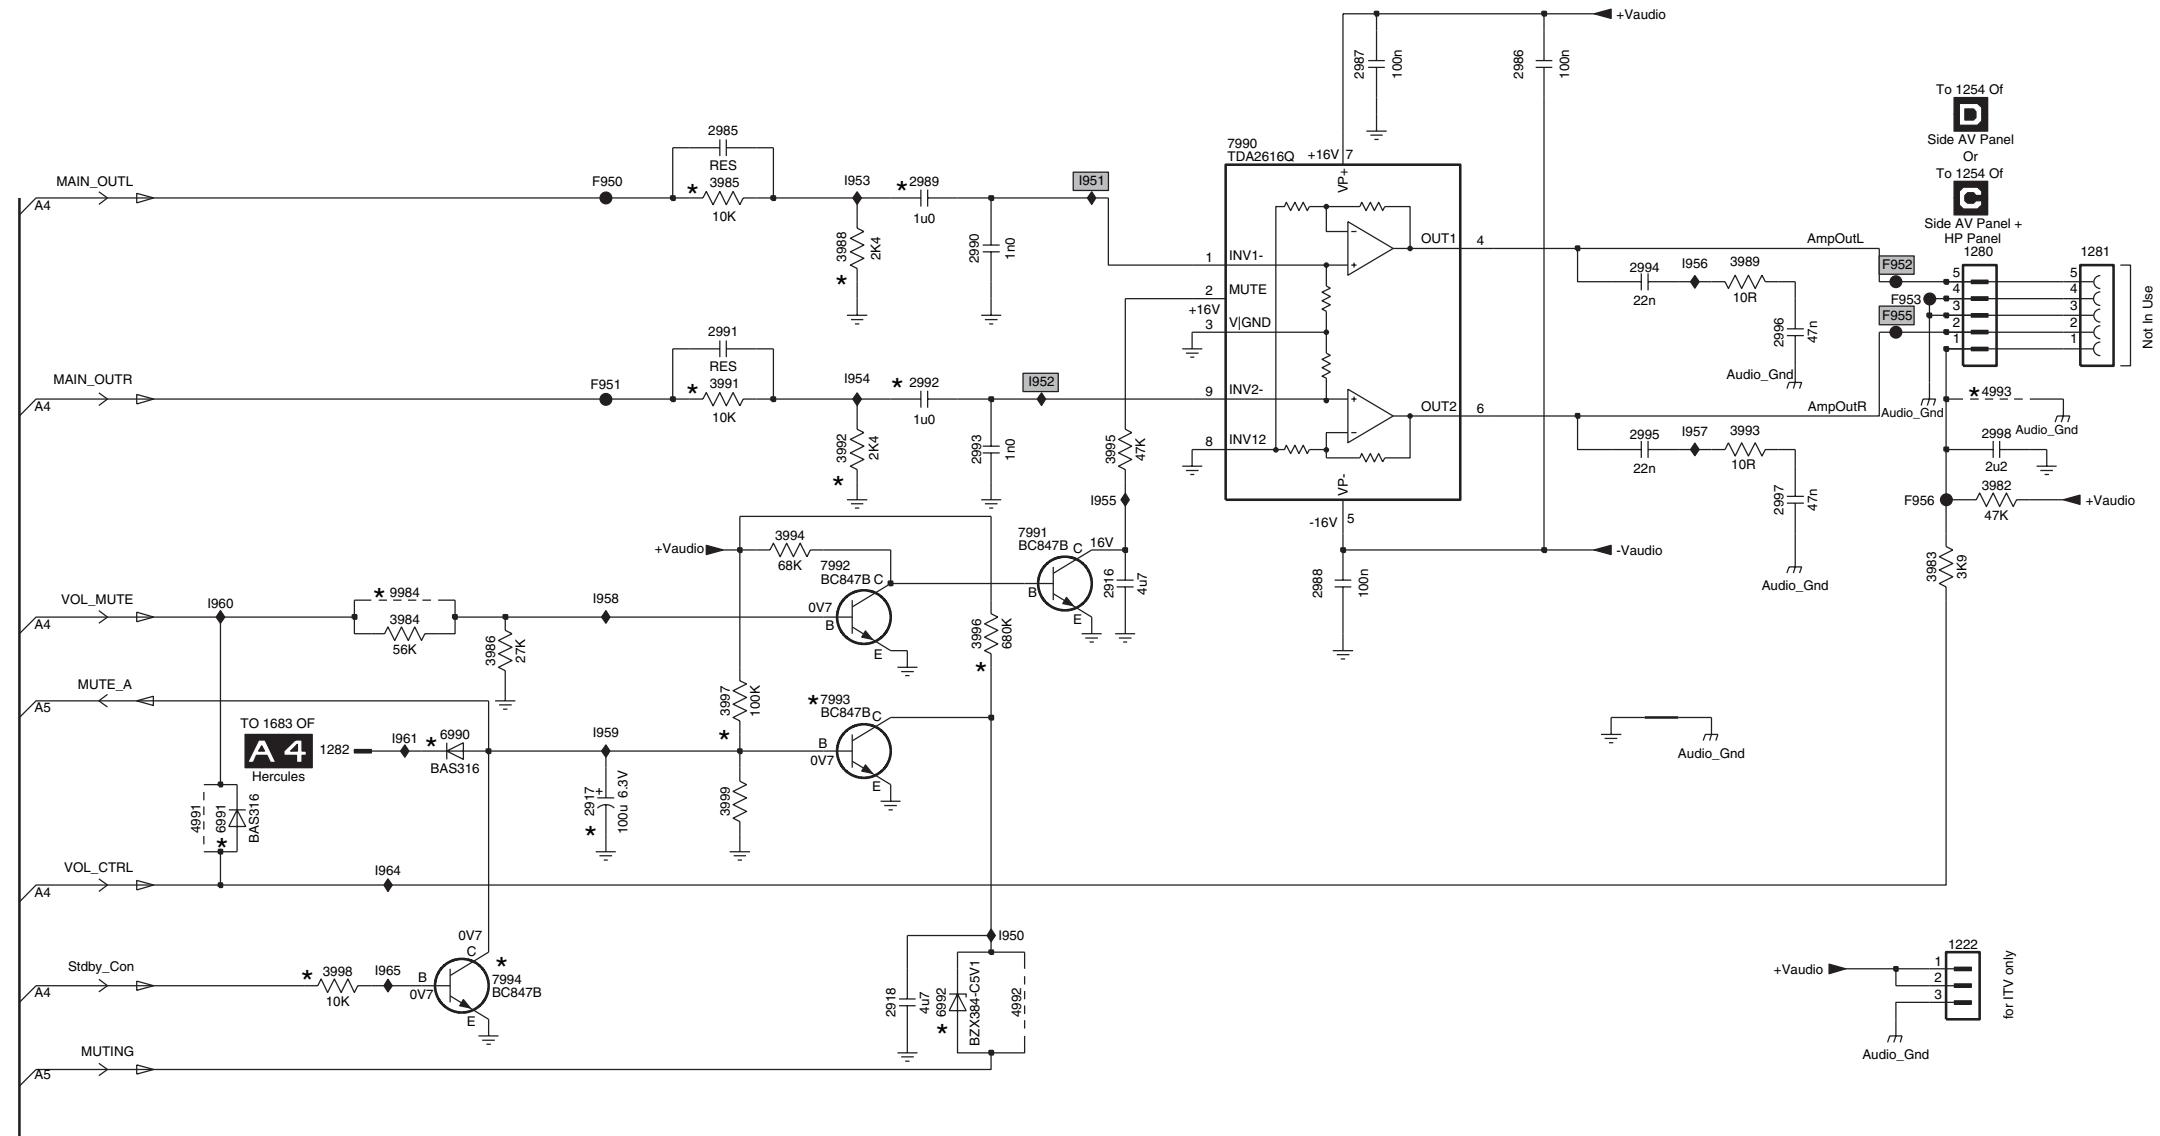

REGION	NAFTA			
SIZE	26WSRF-ATSC	30WSRF-ATSC	27VSRF-ATSC	32VSRF-ATSC
6991	---	---	---	---
6992	---	---	---	---
9984	---	---	---	---
3998	---	---	---	---
7994	---	---	---	---
6990	---	---	---	---
2917	---	---	---	---
3997	---	---	---	---
7993	---	---	---	---
3996	---	---	---	---
3985	22K	22K	22K	22K
3991	22K	22K	22K	22K
3988	5K6	5K6	5K6	5K6
3992	5K6	5K6	5K6	5K6
2989	2U2	2U2	2U2	2U2
2992	2U2	2U2	2U2	2U2
4992	JMP	JMP	JMP	JMP


FAMILY BOARD 11NC : 3139\_123\_5932  
MAIN CHASSIS 11NC : 3139\_123\_5933

Mono Carrier: Rear I/O Cinch

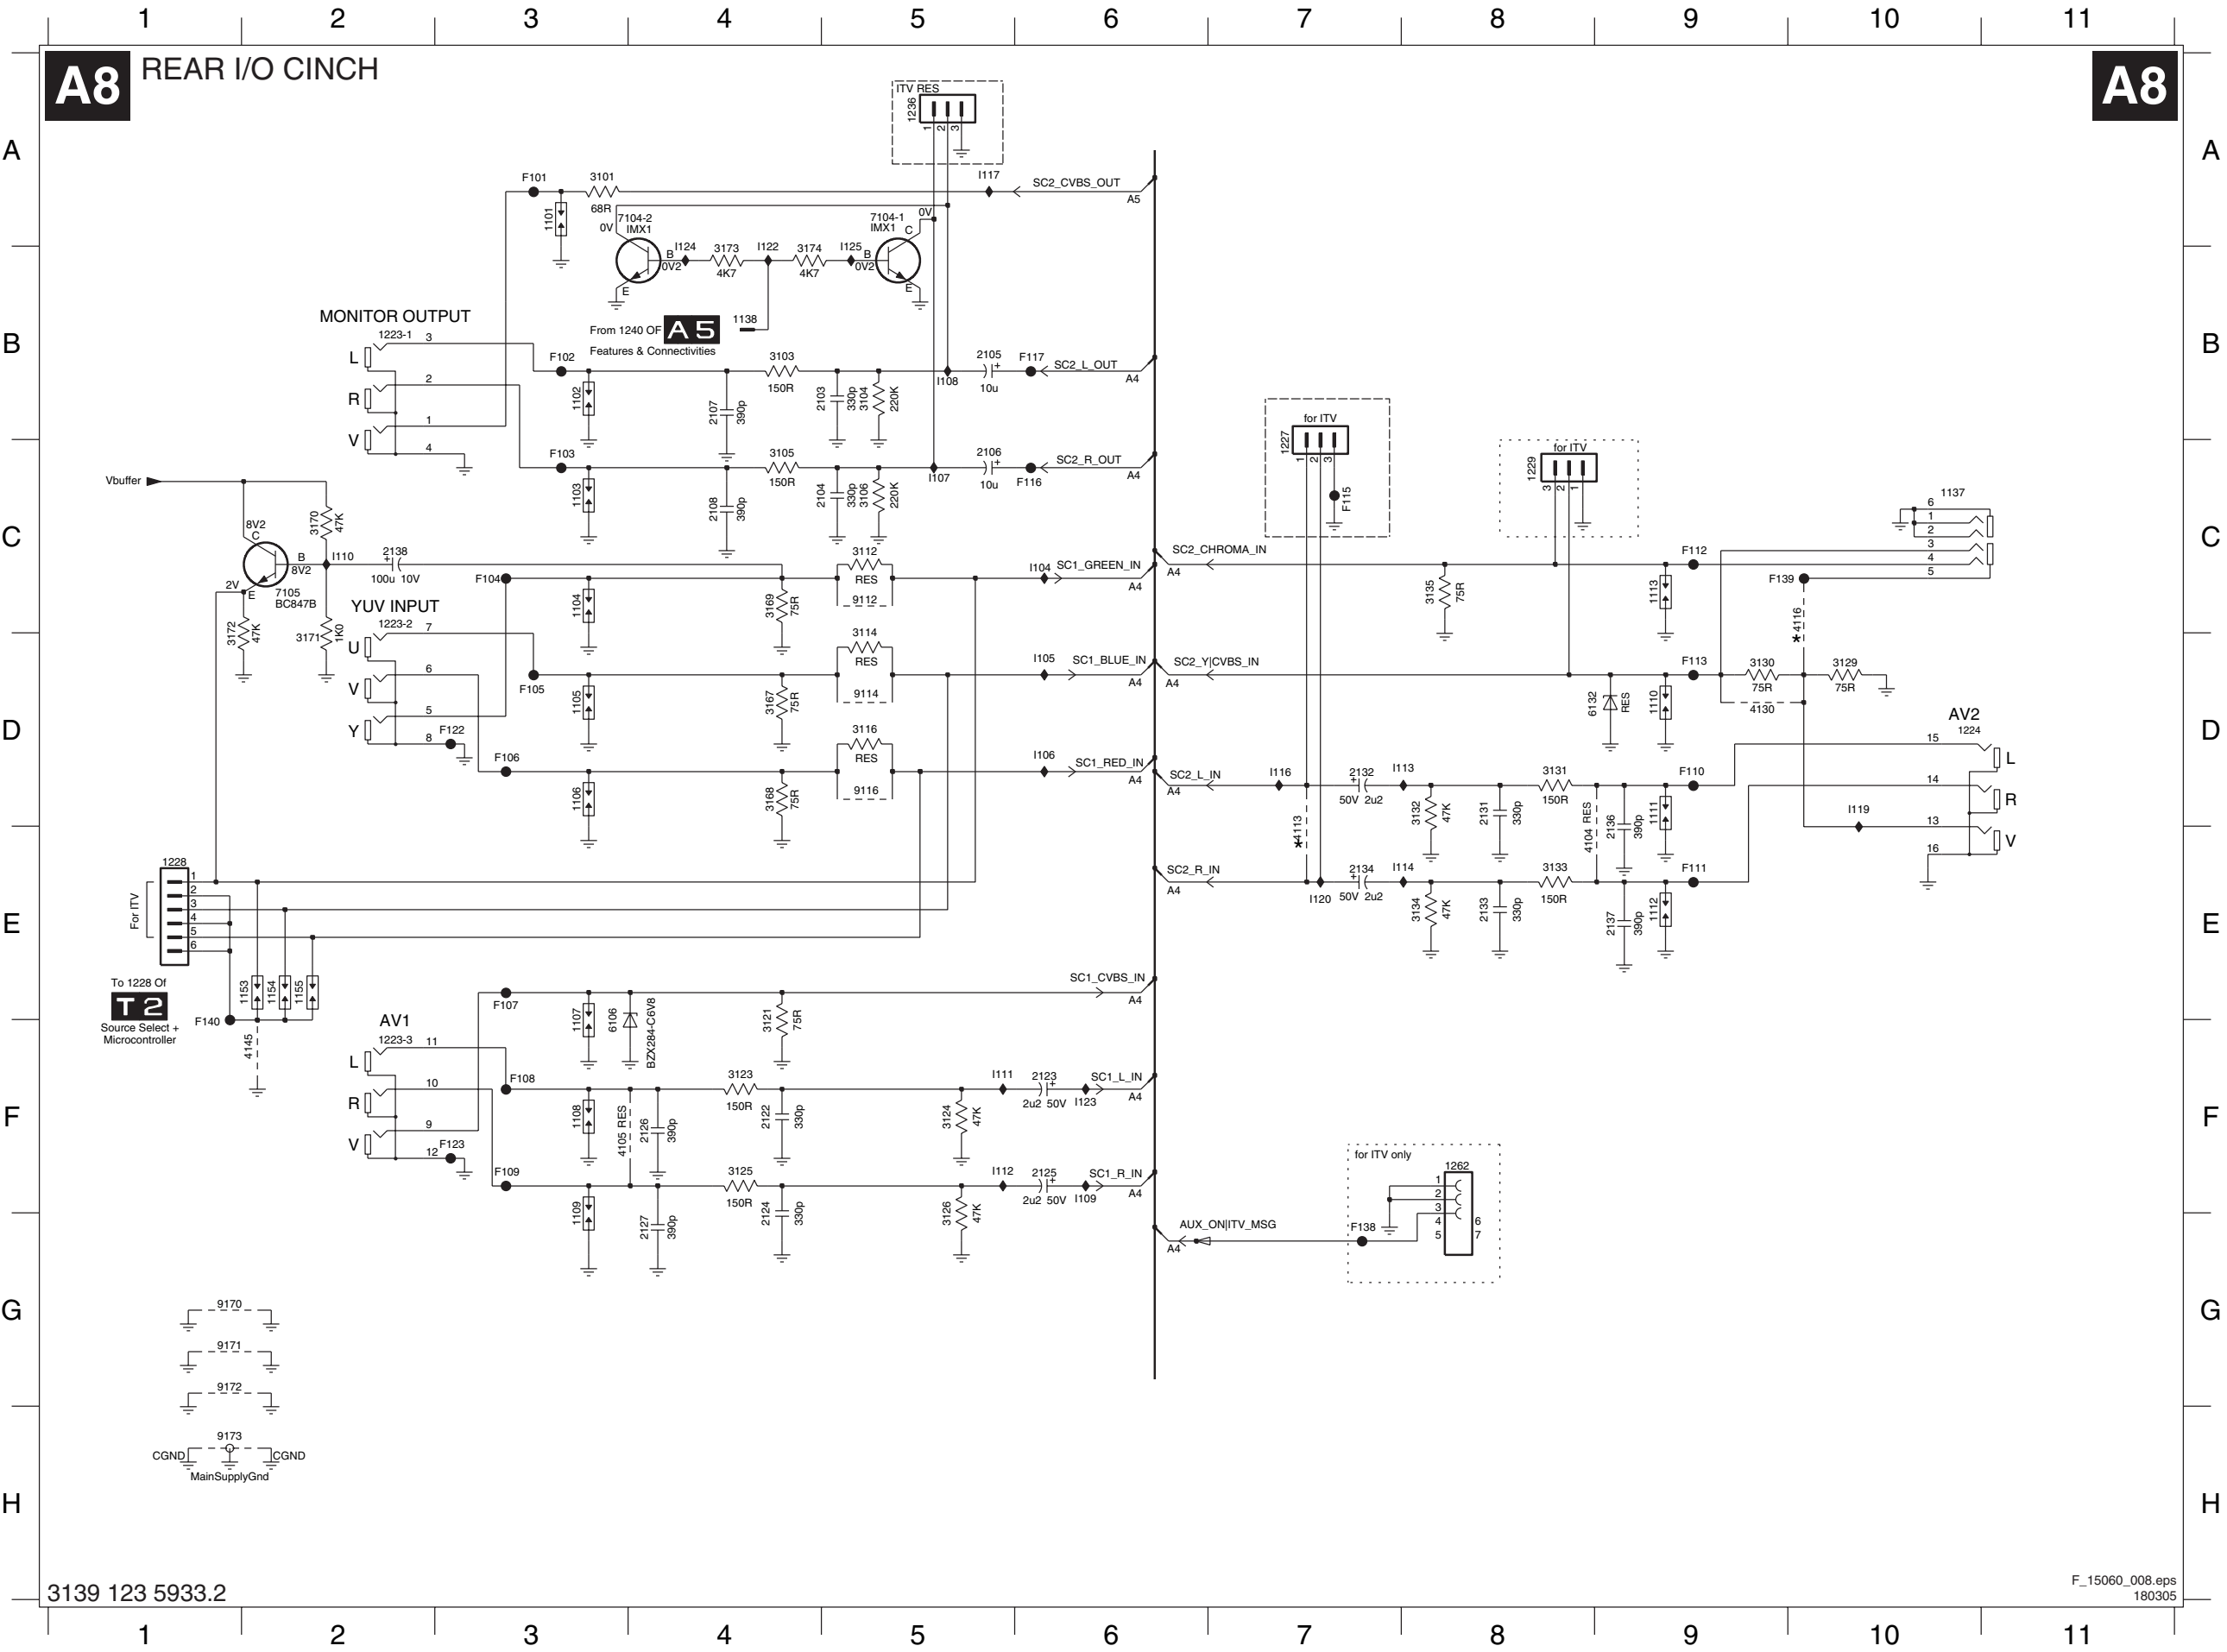

1101 A3	F106 D3
1102 B3	F107 E3
1103 C3	F108 F3
1104 C3	F109 F3
1105 D3	F110 D9
1106 D3	F111 E9
1107 F3	F112 C9
1108 F3	F113 D9
1109 G3	F115 C7
1110 D9	F116 C6
1111 D9	F117 B6
1112 E9	F122 D3
1113 C9	F123 F3
1137 C10	F138 G7
1138 B4	F139 C9
1153 E2	F140 F1
1154 E2	I104 C6
1155 E2	I105 D6
1223-1 B2	I106 D6
1223-2 C2	I107 C5
1223-3 F2	I108 B5
1227 B7	I109 F6
1228 E1	I110 C2
1229 C8	I111 F5
1236 A5	I112 F5
1262 F8	I113 D8
2103 B5	I114 E8
2104 C5	I116 D7
2105 B5	I117 A5
2106 C5	I119 D10
2107 B4	I120 E7
2108 C4	I122 B4
2122 F4	I123 F6
2123 F6	I124 B4
2124 G4	
2125 F6	
2126 F4	
2127 G4	
2131 D8	
2132 D7	
2133 E8	
2134 E7	
2136 E9	
2137 E9	
2138 C2	
3101 A3	
3103 B4	
3104 B5	
3105 C4	
3106 C5	
3112 C5	
3114 D5	
3116 D5	
3121 F4	
3123 F4	
3124 F5	
3125 F4	
3126 G5	
3129 D10	
3130 D9	
3131 D8	
3132 D8	
3133 E8	
3134 E8	
3135 C8	
3167 D4	
3168 D4	
3169 C4	
3170 C2	
3171 D2	
3172 D1	
3173 B4	
3174 B4	
4104 E8	
4105 F3	
4113 E7	
4116 C10	
4130 D9	
4145 F2	
6106 F3	
6132 D8	
7104-1 A5	
7104-2 A4	
7105 C2	
9112 C5	
9114 D5	
9116 D5	
9170 G1	
9171 G1	
9172 G1	
9173 H1	
F101 A3	
F102 B3	
F103 C3	
F104 C3	
F105 D3	

Mono Carrier: Front Control

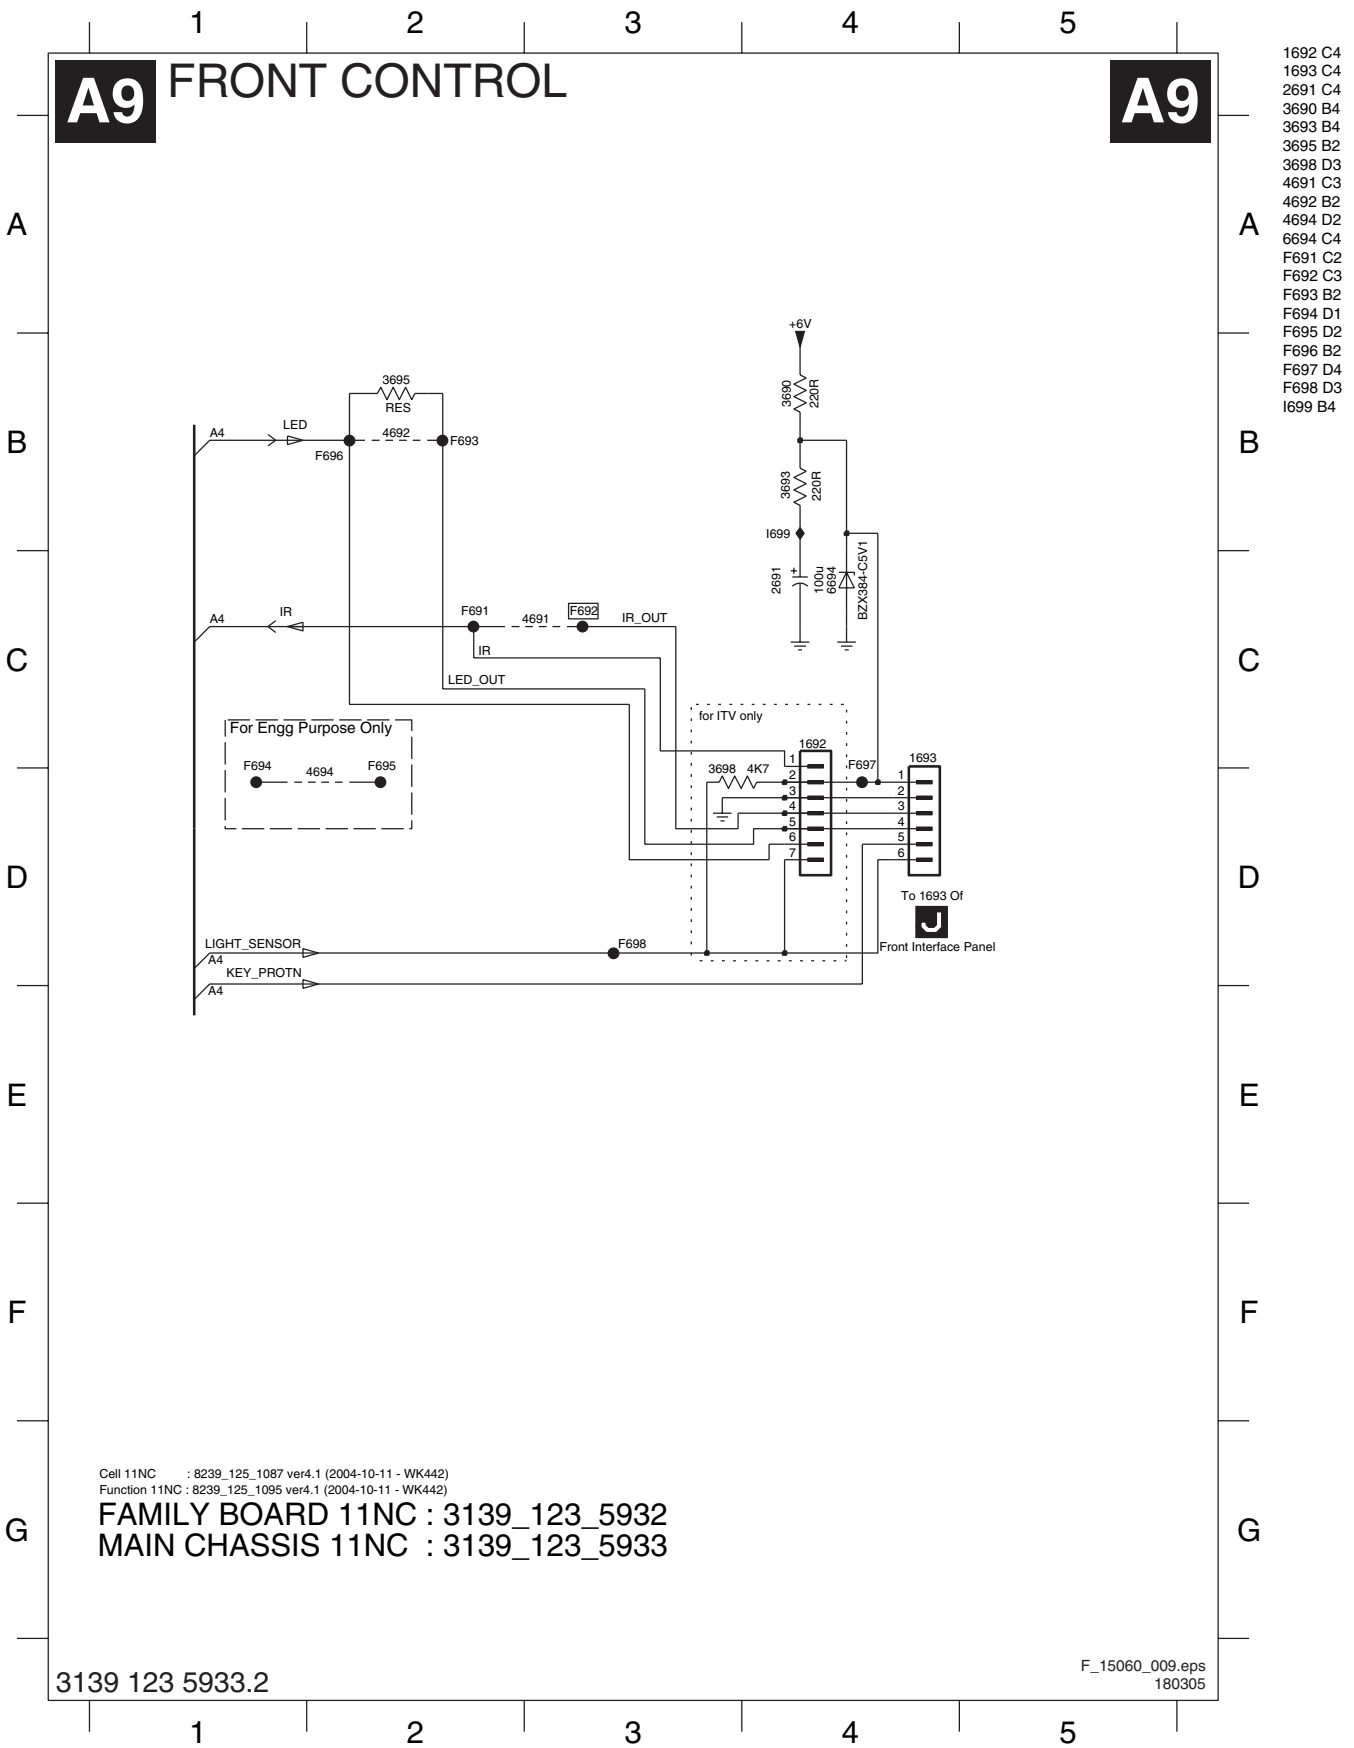

Mono Carrier: Diversity Tables A2 & A4

DIVERSITY TABLE FOR **A2** LINE + FRAME DEFLECTION

DIVERSITY TABLE FOR **A4** HERCULES

Item No	27RF HD	30WSRF-HD	30WS ATSC	27RF ATSC	32RF ATSC	26WS ATSC
2407	---	---	50V 330P	50V 330P	50V 330P	50V 330P
2411	2KV 820P	2KV 220P	2KV 220P	2KV 820P	2KV 330P	2KV 1N
2412	1K6 12N	1K6 12N	1K6 12N	1K6 12N	1K6 12N	1K6 12N
2413	630V 27N	630V 27N	630V 33N	630V 27N	630V 27N	630V 27N
2416	---	---	---	---	---	---
2417	---	---	---	---	---	---
2418	250V 390N	250V 330N	250V 330N	250V 390N	250V 330N	250V 330N
2419	250V 560N	250V 1U2	250V 1U2	250V 560N	250V 560N	250V 560N
2421	---	2KV 220P	2KV 220P	---	---	---
2422	---	2KV 220P	2KV 220P	---	---	---
2433	---	---	---	---	---	---
2435	---	---	---	---	---	---
2451	100V 220N	100V 100N	250V 68N	250V 68N	250V 68N	250V 68N
2458	250V 100N	250V 100N	250V 100N	250V 100N	250V 100N	250V 100N
2470	100V 100N	250V 47N	100V 100N	100V 100N	100V 100N	100V 100N
2471	16V 100N	16V 100N	---	---	---	---
2473	50V 15N	50V 15N	---	---	---	---
2474	50V 150P	50V 150P	---	---	---	---
2495	50V 100N	50V 100N	---	---	---	---
2499	---	---	16V 2U2	16V 2U2	16V 2U2	16V 2U2
3412	---	---	---	---	---	---
3413	1K	1K	1K	1K	1K	1K
3414	4R7	4R7	4R7	4R7	6R8	4R7
3415	4R7	4R7	4R7	4R7	6R8	4R7
3418	100R	100R	---	---	---	---
3419	4R7	4R7	4R7	4R7	6R8	4R7
3421	22R	22R	4R7	4R7	4R7	4R7
3424	---	1mA612V	1mA612V	---	---	---
3425	---	1mA612V	1mA612V	---	---	---
3426	100K	100K	---	---	---	---
3427	680K	680K	---	---	---	---
3428	22K	22K	---	---	---	---
3432	---	---	---	---	---	---
3433	4R7	4R7	4R7	4R7	10R	4R7
3434	5K6	3K9	---	---	---	---
3435	---	---	---	---	---	---
3436	680K	680K	---	---	---	---
3437	22K	22K	---	---	---	---
3440	2R2	2R2	2R2	2R2	2R2	2R2
3442	---	---	---	---	---	---
3451	4R7	4R7	4R7	4R7	10R	4R7
3459	820K	470K	470K	820K	680K	820K
3461	1K5	1K5	27K	27K	27K	27K
3463	1K5	1K5	3K3	3K3	3K3	3K3
3467	220R	220R	100R	100R	100R	100R
3468	220R	220R	100R	100R	100R	100R
3471	1R	2R2	2R2	1R	2R2	2R2
3472	1R2	1R5	1R5	1R2	1R2	1R2
3478	100R	100R	33K	33K	33K	33K
3480	4M7	---	---	---	---	---
3485	0R47	0R47	0R47	---	1R	0R47
3488	220K	220K	---	---	---	---
3489	100R	100R	10K	10K	10K	10K
3491	12K	12K	8K2	10K	8K2	10K
3492	18K	18K	12K	22K	47K	22K
3496	---	---	100K	100K	100K	100K
3497	---	---	56K	56K	56K	56K
3499	1M	1M	470K	470K	470K	470K
4401	---	---	JMP	JMP	JMP	JMP
4418	---	---	JMP	JMP	JMP	JMP
4495	JMP	JMP	---	---	---	---
5401	3U9	3U9	3U9	3U9	5U5	5U5
5408	W7132-004	W7131-001	W7131-001	W7132-004	W7132-004	W7132-004
5450	JF0101-85039	JF0101-85038	JF0101-85038	JF0101-85039	JF0101-85040	JF0101-85039
5456	---	SD20417-07	SD20417-07	---	---	---
6442	---	BZV85-C10	BZV85-C10	BZV85-C10	BZV85-C10	BZV85-C10
6449	BZX384-C15	BZX384-C15	BZX384-C12	BZX384-C12	BZX384-C12	BZX384-C12
6476	BZV85-C6V8	BZV85-C6V8	BZV85-C6V8	BZV85-C6V8	BZV85-C6V8	BZV85-C6V8
6482	BZX384-C6V8	BZX384-C6V8	---	---	---	---
6483	BAS316	BAS316	---	---	---	---
6491	---	---	BZX384-C3V3	BZX384-C3V3	BZX384-C3V3	BZX384-C3V3
9402	---	---	---	---	---	---
9411	JMP	---	JMP	JMP	JMP	JMP
9432	---	---	JMP	JMP	JMP	JMP
9435	JMP	JMP	JMP	JMP	JMP	JMP
9440	---	---	---	---	---	---
9442	JMP	JMP	---	---	---	---
9476	---	---	---	---	---	---
9489	---	---	---	---	---	---
9490	---	---	---	---	---	---

	HD set	ATSC set
2251	150n	10n
2293	1n	470p
2294	5n6	---
2295	1n	---
3238	---	10K
3246	---	100R
3252	---	10K
3262	---	100R
3265	---	100R
3266	---	100R
3279	---	4K7
3280	---	4K7
3282	4K7	---
3291	---	4K7
4201	---	0R
4299	---	0R
5214	100MHz, 120R	---


Region: NAFTA	HD	L05 ATSC
Size	27V RF 30WSRF	27V RF 27V RF
2251	50V 150N50V 150N	50V 10N 50V 10N
2293	25V 1N 25V 1N	50V 470N 50V 470N

Region	NAFTA			
Size	26WSRF-ATSC	30WSRF-ATSC	27VRF-ATSC	32VRF-ATSC
3246	100R	100R	100R	100R
3255	---	---	---	---
3256	---	---	---	---
9601	---	---	---	---
9602	---	---	---	---



Mono Carrier: AUX Power Supply

A10 AUXILIARY POWER SUPPLY

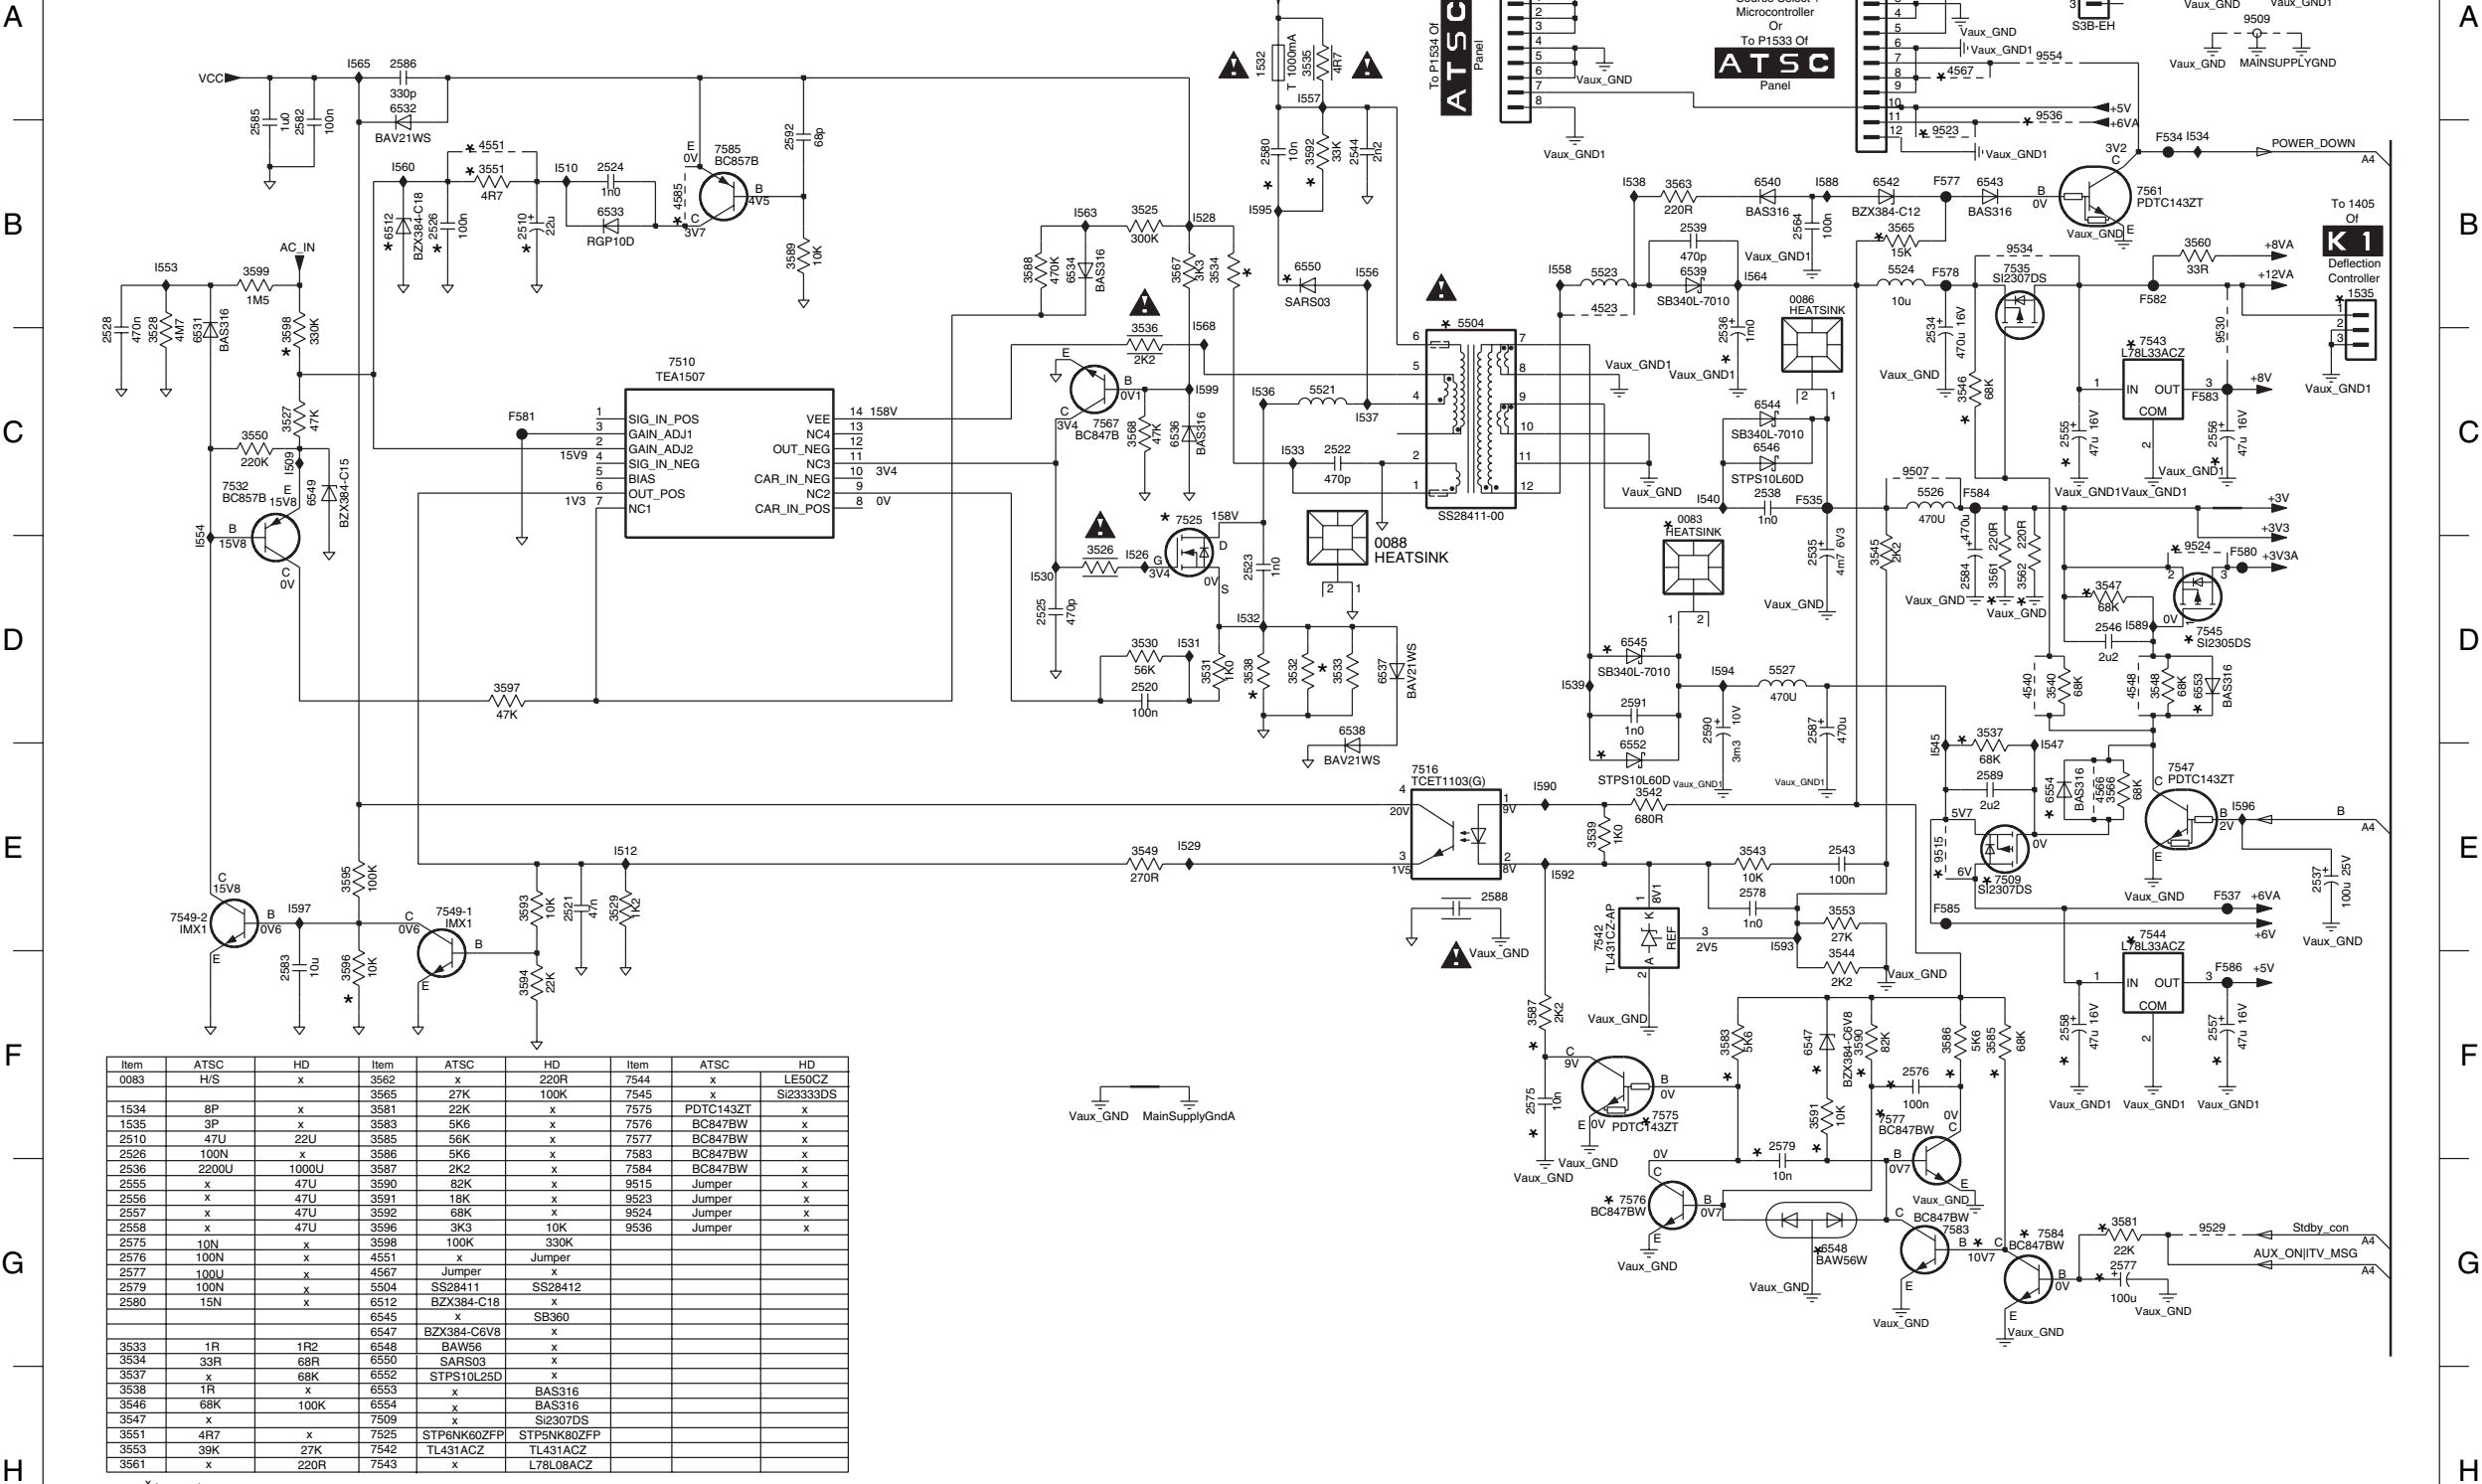

Item	ATSC	HD	Item	ATSC	HD	Item	ATSC	HD
0083	H/S	x	3562	x	220R	7544	x	LE50CZ
1534	8P	x	3565	27K	100K	7545	x	SI2333DS
1535	3P	x	3581	22K	x	7575	PDTCT143ZT	x
2510	47U	22U	3583	5K6	x	7576	BC847BW	x
2526	100N	x	3585	5K6	x	7577	BC847BW	x
2536	2200U	1000U	3586	5K6	x	7583	BC847BW	x
2555	x	47U	3587	2K2	x	7584	BC847BW	x
2556	x	47U	3590	82K	x	9515	Jumper	x
2557	x	47U	3591	18K	x	9523	Jumper	x
2558	x	47U	3592	68K	x	9524	Jumper	x
2575	10N	x	3596	3K3	10K	9536	Jumper	x
2576	100N	x	3598	100K	330K			
2577	100U	x	4551	x	Jumper			
2579	100N	x	4567	Jumper	x			
2580	15N	x	5504	SS28411	SS28412			
			6512	BZX384-C18	x			
			6545	x	SB360			
			6547	BZX384-C6V8	x			
3533	1R	1R2	6548	BAW56	x			
3534	33R	68R	6550	SARS03	x			
3537	x	68K	6552	STPS10L25D	x			
3538	1R	x	6553	x	BAS316			
3546	68K	100K	6554	x	BAS316			
3547	x		7509	x	SI2307DS			
3551	4R7	x	7525	STP6NK60ZFP	STP5NK80ZFP			
3553	39K	27K	7542	TL431ACZ	TL431ACZ			
3561	x	220R	7543	x	L78L08ACZ			

\* Layout Jumper

CELL 11NC : 8239\_125\_1089 ver6.0 (2004-12-03 - WK449.5)  
FUNCTION 11NC : 8239\_125\_1097 ver6.0 (2004-12-03 - WK449.5)

FAMILY BOARD 11NC : 3139\_123\_5932  
MAIN CHASSIS 11NC : 3139\_123\_5933

F\_15060\_010.eps  
180305

0083 C8	3598 C1	1545 E9
0086 B9	3599 B1	1547 E10
0088 D7	4523 B8	1553 B1
1532 A6	4540 D10	1554 D1
1533 A9	4548 D10	1556 B7
1534 A7	4551 B2	1557 A6
1535 B11	4566 E10	1558 B8
2510 B3	4567 A9	1560 B2
2520 D6	4585 B3	1563 B5
2521 E3	5504 B7	1564 B8
2522 C6	5521 C6	1565 A2
2523 D6	5523 B8	1568 B6
2524 B3	5524 B9	1588 B9
2525 D5	5526 C9	1589 D10
2526 B2	5527 D9	1590 E7
2528 C1	6512 B2	1592 E8
2534 C9	6531 C1	1593 E9
2535 D9	6532 A2	1594 D8
2536 C8	6533 B3	1595 B6
2537 E11	6534 B5	1596 E11
2538 C9	6536 C6	1597 E1
2539 B8	6537 D7	1599 C6
2543 E9	6538 D7	
2544 B7	6539 B8	
2546 D10	6540 B9	
2555 C10	6542 B9	
2556 C11	6543 B10	
2557 F11	6544 C9	
2558 F10	6545 D8	
2564 B9	6546 C9	
2575 F7	6547 F9	
2576 F9	6548 G9	
2577 G10	6549 C2	
2578 E8	6550 B6	
2579 F9	6552 E8	
2580 B6	6553 D11	
2582 B1	6554 E10	
2583 F1	7509 E10	
2584 D10	7510 C3	
2585 B1	7516 E7	
2586 A2	7525 C6	
2587 D9	7532 C1	
2588 E7	7535 B10	
2589 E10	7542 E8	
2590 D8	7543 C10	
2591 D8	7544 E10	
2592 B4	7545 D11	
3525 B6	7547 E10	
3526 D5	7549-1 E2	
3527 C1	7549-2 E1	
3528 C1	7561 B10	
3529 E3	7567 C5	
3530 D6	7575 F8	
3531 D6	7576 G8	
3532 D6	7577 F9	
3533 D6	7583 G10	
3534 B6	7584 G10	
3535 A6	7585 B3	
3536 C6	9507 C9	
3537 D10	9509 A11	
3538 D6	9515 E9	
3539 E8	9523 B9	
3540 D10	9524 D11	
3542 E8	9529 G11	
3543 E8	9530 C11	
3544 F9	9534 B10	
3545 D9	9536 A10	
3546 C9	9554 A10	
3547 D10	9999 A10	
3548 D10	F534 B10	
3549 E6	F535 C9	
3550 C1	F537 E11	
3551 B2	F577 B9	
3553 E9	F578 B9	
3560 B11	F580 D11	
3561 D10	F581 C3	
3562 D10	F582 B10	
3563 B8	F583 C11	
3565 B9	F584 C10	
3566 E10	F585 E9	
3567 B6	F586 F11	
3568 C5	I509 C1	
3581 G10	I510 B3	
3583 F8	I512 E3	
3585 F10	I526 D5	
3586 F9	I528 B6	
3587 F7	I529 E6	
3588 B5	I530 D5	
3589 B4	I531 D6	
3590 F9	I532 D6	
3591 F9	I533 C6	
3592 B6	I534 B11	
3593 E3	I536 C6	
3594 F3	I537 C7	
3595 E2	I538 B8	
3596 F2	I539 D8	
3597 D2	I540 C8	

Architectural site plan of a large industrial or commercial complex. The plan shows numerous buildings, parking lots, roads, and landscaping. Buildings are labeled with numbers and letters, and many are surrounded by trees. The plan is divided into sections by a grid of numbers 1 through 8. The top of the plan has a list of building numbers and their corresponding grid coordinates. The bottom of the plan has a list of building numbers and their corresponding grid coordinates. The plan is oriented with North at the top.

Top Grid Coordinates:

0083	C2	1013	E8	1222	D3	1250	C7	1273	E5	1503	C2	1572	C4	2105	D7	2234	D6	2413	B6	2449	C8	2502	C3	2523	B3	2555	C1	3105	E8	3241	E5	3401	B5	3432	C7	3467	C7	3488	C6	3506	B1	3521	A5	3592	B3	5409	B6	5512	B4	5563		
0086	C3	1137	C8	1223	D8	1251	C6	1280	E3	1504	C2	1577	D3	2106	D7	2240	E5	2416	B6	2451	A8	2503	A3	2528	B3	2556	D2	2588	C3	3112	D8	3252	D5	3402	B5	3433	B8	3468	C7	3489	C6	3508	B2	3523	C2	3598	B3	5450	B7	5512	B4	5564
0088	B3	1138	D7	1227	D7	1252	D6	1281	E3	1505	A1	1682	D4	2123	D7	2250	D6	2417	B6	2454	A8	2504	A4	2534	C4	2557	C1	2590	C2	3114	D8	3260	D5	3412	A6	3435	C5	3469	C7	3490	A5	3509	B2	3525	C4	3599	B3	5452	C6	5512	B4	5602
1000	E8	1205	D5	1228	D7	1254	C6	1282	D3	1507	B2	1683	C5	2125	D8	2251	E5	2418	A6	2458	B7	2505	A4	2535	D3	2558	C1	2611	E4	3116	D8	3270	E7	3413	A6	3440	C6	3471	C7	3493	B8	3510	B3	3531	B3	3606	E4	5456	A6	5521	B3	6001
1001	E6	1206	D5	1229	C8	1255	C6	1401	C6	1510	B1	1684	D6	2132	C7	2265	E6	2419	B6	2460	A8	2506	B2	2536	D3	2561	B4	2621	E5	3123	D8	3274	E7	3414	A6	3442	C7	3472	C7	3499	C6	3511	B5	3534	C3	3984	D3	5459	B6	5524	D3	6006
1002	E5	1207	E7	1230	D5	1257	E5	1402	A7	1532	B3	1685	D6	2134	C7	2273	E6	2421	A7	2461	C7	2507	A4	2539	C3	2562	C4	2624	E5	3125	D8	3275	E7	3415	A6	3450	B8	3473	B6	3500	B1	3513	A5	3535	B3	5201	D5	5500	B2	5526	D3	6403
1003	E5	1208	D7	1234	D5	1262	D7	1404	B5	1533	D2	1692	D1	2138	D8	2275	E6	2422	A7	2468	C8	2508	C2	2541	C2	2563	C4	2631	D7	3131	C8	3276	D7	3419	B8	3451	B8	3477	B7	3501	C1	3514	A5	3536	C3	5208	D6	5501	B2	5527	C2	6404
1005	E8	1213	C5	1236	D8	1266	D6	1451	C7	1534	D2	1693	D1	2203	D5	2291	D6	2431	A6	2469	B7	2509	B1	2542	B4	2570	B4	2691	D1	3133	C8	3277	D7	3421	B5	3455	A8	3478	C6	3502	B2	3515	A5	3549	B4	5216	D6	5502	A3	5551	B5	6442
1010	E7	1219	C7	1240	D4	1270	D6	1500	A2	1535	C1	2005	E5	2217	E5	2404	B6	2433	A7	2488	B5	2510	C3	2544	B3	2577	C4	2999	D4	3201	D5	3278	D7	3424	A7	3456	A8	3481	C6	3503	B2	3516	A4	3560	D3	5401	A5	5504	C3	5552	B5	6452
1011	E7	1220	E4	1241	D5	1271	E7	1501	A2	1545	B4	2006	E7	2218	D6	2411	A6	2435	A8	2500	A2	2511	A5	2551	B5	2580	C3	3101	E8	3215	D5																					

A	C5	6457	C8	9248	E6	9547	D2
	A3	6461	B8	9249	C4	9548	D2
	D7	6466	B7	9250	E6	9549	D2
	E8	6467	B7	9251	E5	9550	C1
	E7	6471	C6	9252	C5	9551	C3
	B8	6476	B7	9253	D5	9552	C4
	B6	6486	B6	9254	C7	9553	D1
	C7	6500	A3	9255	C5	9554	D2
	A8	6511	A5	9257	E7	9563	C5
	B7	6533	C4	9260	D5	9570	A3
B	A8	6539	C3	9261	D7	9572	C4
		6544	C3	9262	E7	9576	A4
		6545	C2	9263	D7	9577	D3
		6546	C3	9265	D7	9580	C5
		6550	C3	9266	D7	9583	C4
		6551	C5	9267	D7	9585	A4
		6552	C2	9269	C4	9586	C4
		6562	C4	9271	E5	9587	B4
		6563	B4	9272	D4	9588	C5
		6564	C4	9273	D4	9590	C4
C		6575	A4	9274	D4	9590	A4
		7203	E5	9275	C5	9601	D7
		7204	E5	9276	D5	9602	D7
		7405	A6	9278	D4	9605	E6
		7406	C6	9279	D4	9606	D4
		7451	C7	9280	D5	9607	D4
		7512	A4	9288	D7	9608	C7
		7513	B5	9290	E6	9609	C7
		7516	C4	9291	C5	9631	C6
		7525	B3	9292	C4	9637	E7
D		7542	C4	9293	E4	9639	E4
		7543	C2	9294	C6	9642	C7
		7544	D1	9296	C5	9643	D5
		7571	B5	9297	C4	9653	D4
		7601	D5	9298	C5	9660	D1
		7603	E4	9299	C5	9661	D1
		7605	E5	9402	A5	9666	D1
		7990	E3	9411	A6	9688	E4
		9002	E7	9429	A6	9689	E4
		9010	E7	9432	C7	9694	E6
E		9112	D8	9435	C5	9695	E4
		9114	D8	9440	C6	9696	D4
		9116	D8	9442	C7	9697	D4
		9120	D8	9450	C7	9698	D6
		9121	D8	9451	C7	9699	C6
		9122	D8	9465	C6	9920	D3
		9124	D7	9473	C5	9921	D3
		9129	D7	9476	C7	9922	D3
		9170	D7	9480	C6	9942	D3
		9171	D7	9482	C6	9943	D3
F		9172	D7	9483	B6	9984	D3
		9173	C7	9484	C6		
		9201	C6	9485	B6		
		9202	E4	9486	C6		
		9203	E6	9487	C5		
		9204	E7	9488	C6		
		9205	D4	9489	C6		
		9206	D4	9490	C6		
		9207	D4	9491	C6		
		9208	D4	9492	C6		
G		9209	C5	9493	C6		
		9210	E7	9494	C8		
		9213	D7	9495	C7		
		9214	D4	9497	C5		
		9215	E7	9498	B5		
		9216	D7	9500	A2		
		9217	D6	9501	B2		
		9218	E6	9502	B2		
		9219	D6	9503	B2		
		9220	D5	9504	B2		
H		9221	D5	9505	B2		
		9222	E5	9506	A3		
		9223	E6	9509	D4		
		9224	D5	9510	C4		
		9225	D4	9511	B3		
		9226	D4	9512	A3		
		9227	D5	9513	B3		
		9228	D4	9515	C1		
		9229	D5	9523	D1		
		9230	D5	9524	D2		
I		9231	E6	9526	D4		
		9232	E5	9527	D4		
		9233	E6	9528	D4		
		9234	E7	9529	D3		
		9235	D7	9530	D2		
		9236	E7	9531	C3		
		9237	D6	9532	D3		
		9238	D7	9534	D2		
		9239	E6	9535	D3		
		9240	E5	9536	D1		
J		9241	D7	9537	C3		
		9242	D4	9539	B3		
		9243	C4	9541	D2		
		9244	E6	9542	D4		
		9245	E4	9544	C1		
		9246	E6	9545	D2		
		9247	E4	9546	C2		



2001	A8	2104	A7	2204	A5	2216	B6	2239	A5	2262	B6	2278	A5	2294	A5	2462	C7	2478	D7	2516	E5	2546	B2	2585	C3	2625	A4	2989	B3	3002	A8	3019	A7	3168	B8	3207	B5	3221	B6	3238	C6	3262	B5	3282	B5	3408	D5	3443	C6	3497	C5	3533	D3
2002	A8	2107	B8	2205	B5	2223	B6	2241	A5	2263	A6	2279	B5	2295	A5	2463	C7	2491	C6	2517	E5	2564	C3	2586	C4	2630	C7	2990	A3	3003	A7	3104	A7	3169	B8	3208	A4	3222	A5	3242	A7	3263	B5	3283	B5	3416	E6	3453	E8	3512	E5	3537	B2
2003	A7	2108	B8	2206	B5	2225	B6	2242	B6	2264	B6	2280	B5	2407	C7	2464	D8	2492	D7	2518	E5	2565	C4	2589	B2	2632	B7	2991	A3	3004	A8	3106	A7	3170	A8	3209	A4	3223	A5	3247	A6	3264	B5	3284	B5	3418	C6	3459	C7	3517	E5	3538	D3
2004	A7	2122	B8	2207	A4	2226	A5	2244	A5	2266	A6	2282	B5	2409	E5	2465	C7	2493	E8	2519	E5	2571	D5	2591	C2	2633	B6	2992	A3	3005	A7	3121	B8	3171	A8	3210	A4	3226	B6	3248	B7	3265	B5	3285	A4	3426	C6	3460	C7	3518	E5	3539	C3
2007	A7	2124	B8	2208	A4	2227	A5	2246	A5	2267	A6	2283	A6	2410	D8	2466	C7	2494	D7	2520	D3	2572	C5	2592	C3	2634	B6	2993	A3	3006	A5	3124	B8	3172	A8	3211	A4	3227	B6	3249	B6	3266	B5	3287	B5	3427	C6	3461	C7	3522	E5	3540	B2
2009	A7	2126	B8	2209	B5	2229	B6	2249	B6	2268	A5	2284	A6	2423	D5	2467	C7	2495	C6	2521	D3	2574	D5	2601	B5	2916	B3	2994	A3	3007	A5	3126	B8	3173	B8	3212	B5	3228	B6	3253	A6	3267	B6	3288	B5	3428	C5	3462	C7	3524	E5	3541	C2
2011	A6	2127	B8	2210	B5	2231	B6	2253	A6	2269	A5	2285	A6	2424	D8	2470	C7	2496	C6	2522	C3	2575	C4	2613	B5	2917	A4	2995	A3	3008	A7	3129	C8	3174	B7	3214	B5	3229	B6	3254	A6	3269	B5	3289	C6	3434	C7	3463	C7	3526	D3	3542	C3
2012	A6	2131	C7	2211	B6	2232	B6	2255	A7	2270	A6	2286	B6	2425	C6	2471	C5	2497	D5	2524	C4	2576	C4	2615	B7	2918	B4	2996	A3	3009	A5	3130	C8	3202	B5	3216	B6	3231	B6	3255	A6	3272	B6	3290	B6	3436	C5	3474	D6	3527	D4	3543	C4
2013	A7	2133	C7	2212	B5	2233	B6	2256	A6	2271	A6	2287	B6	2426	D7	2472	C6	2499	C5	2525	D3	2578	C4	2617	B7	2985	B3	2997	A3	3010	A7	3132	C7	3203	A5	3217	A5	3232	A5	3256	A6	3273	B6	3292	B5	3437	C5	3480	C6	3528	D3	3544	C4
2014	A7	2136	C8	2213	B5	2235	A5	2257	A6	2272	A6	2290	A5	2432	C7	2473	C6	2512	E5	2526	D4	2579	C4	2620	A5	2986	A3	2998	A3	3014	A7	3134	C7	3204	B5	3218	B5	3235	C6	3257	B7	3279	B5	3296	A5	3438	C6	3491	C6	3529	D3	3545	C4



4

3139 123 5933.1 WK449.5

C


## 8

C






Layout Mono Carrier (Part 4 Bottom Side)

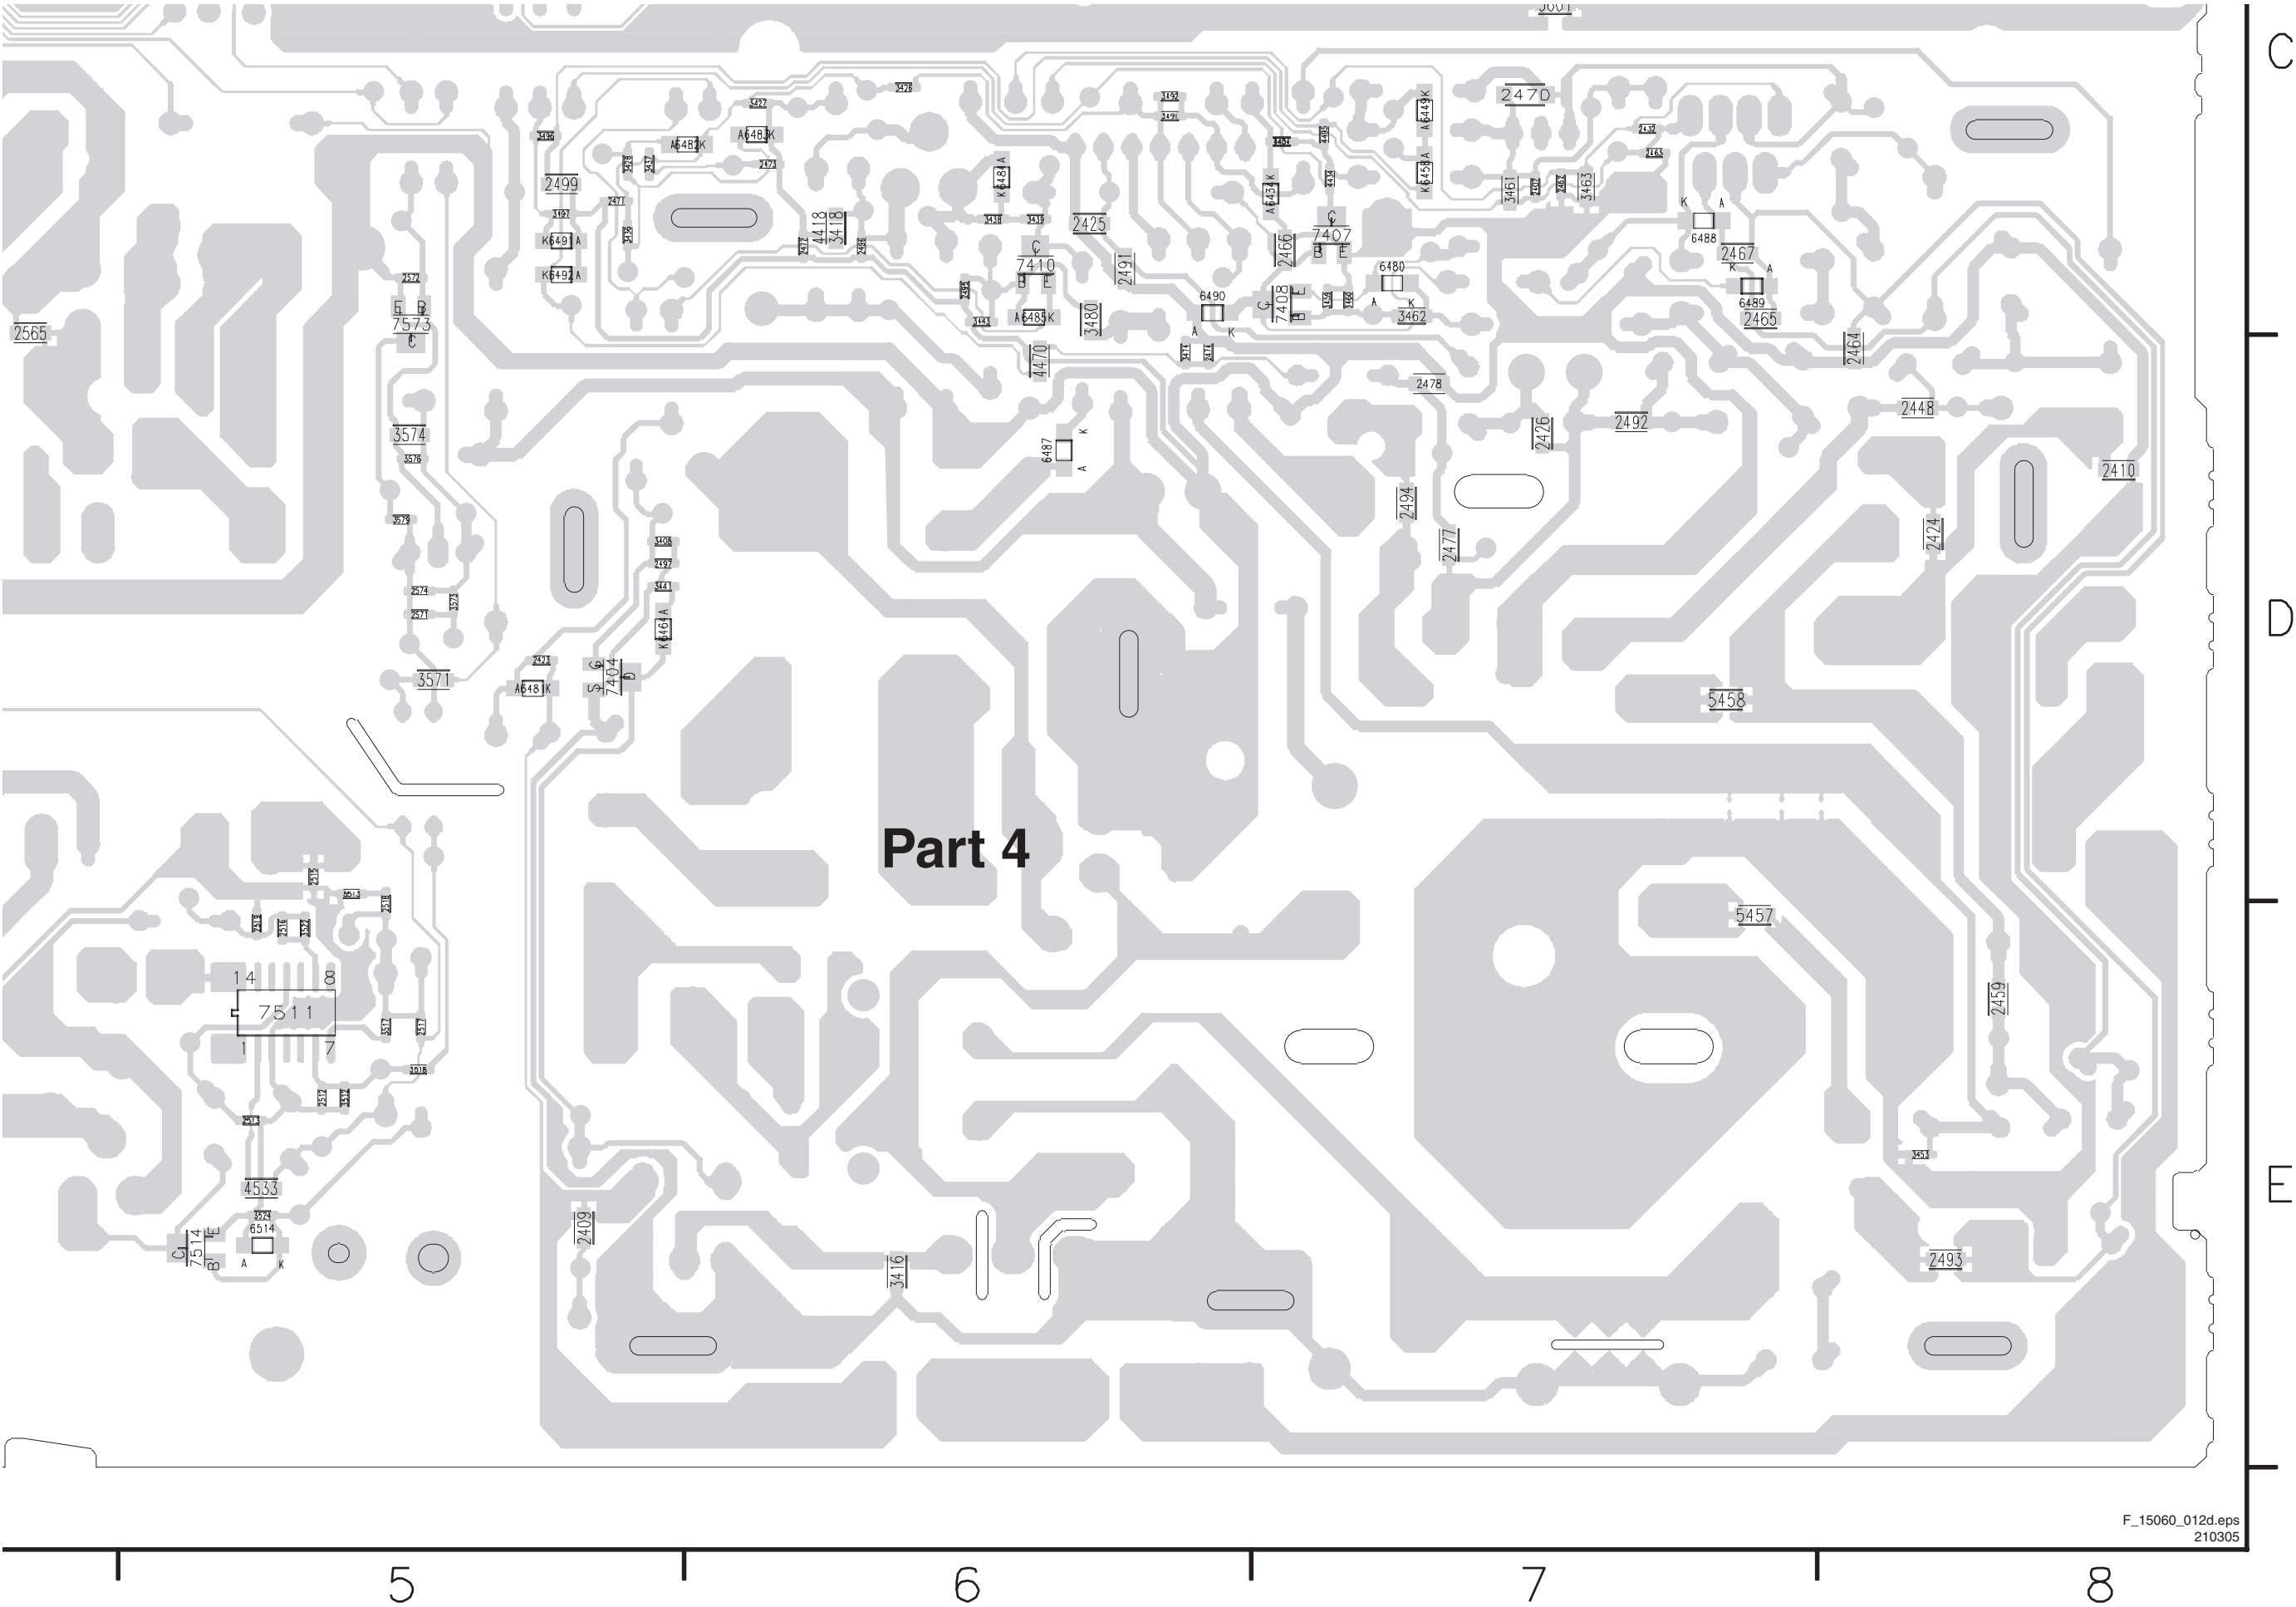

## B1 CRT SOCKET






CRT Panel: RGB Amplifier (Multi Board)

B2 RGB AMPLIFIER

B2

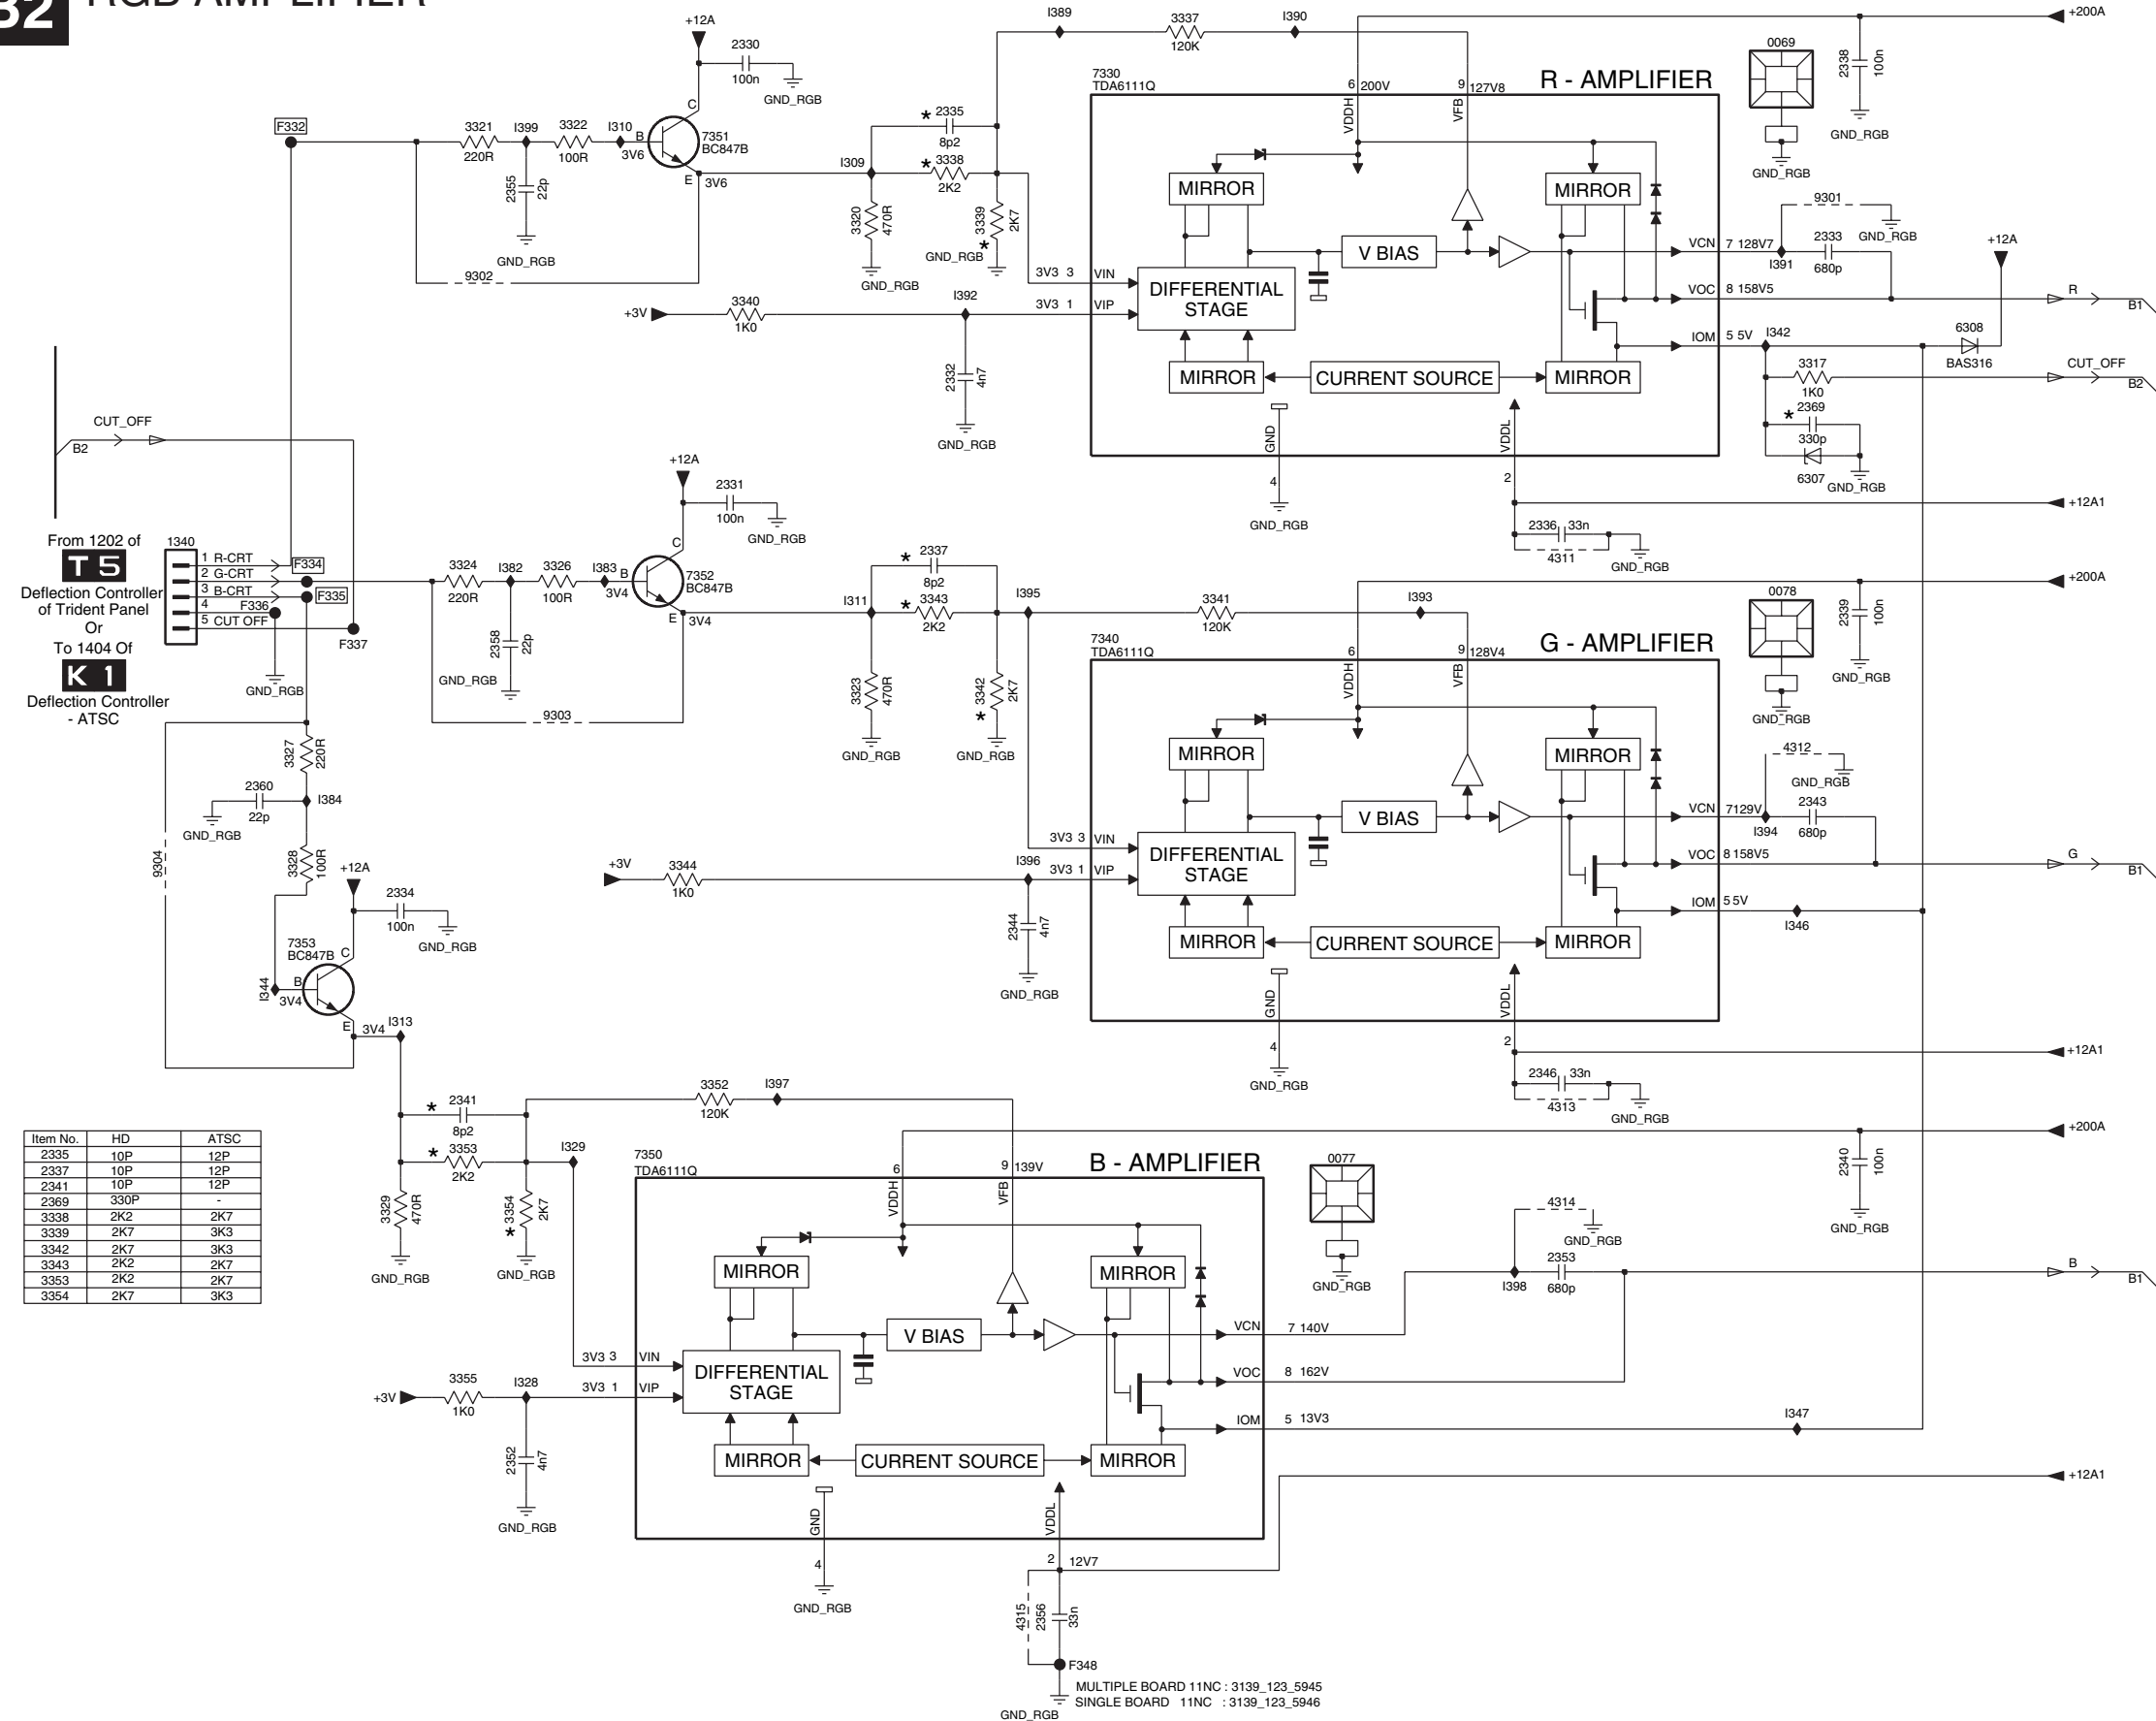

Item No.	HD	ATSC
2335	10P	12P
2337	10P	12P
2341	10P	12P
2369	330P	-
3338	2K2	2K7
3339	2K7	3K3
3342	2K7	3K3
3343	2K2	2K7
3353	2K2	2K7
3354	2K7	3K3

3139 123 5946.1

F\_15060\_033.eps  
180305

- 0069 A9
- 0077 F7
- 0078 C9
- 1340 C1
- 2330 A4
- 2331 C4
- 2332 B5
- 2333 B9
- 2334 E2
- 2335 A5
- 2336 C8
- 2337 C5
- 2338 A9
- 2339 C9
- 2340 F9
- 2341 F3
- 2343 D9
- 2344 E5
- 2346 E8
- 2352 G3
- 2353 F8
- 2355 A3
- 2356 H5
- 2358 D3
- 2360 D2
- 2369 B9
- 3317 B9
- 3320 B4
- 3321 A3
- 3322 A3
- 3323 D4
- 3324 C3
- 3326 C3
- 3327 D2
- 3328 E2
- 3329 F2
- 3337 A6
- 3338 A5
- 3339 B5
- 3340 B4
- 3341 C6
- 3342 D5
- 3343 C5
- 3344 E4
- 3352 F4
- 3353 F3
- 3354 F3
- 3355 G3
- 4311 C8
- 4312 D9
- 4313 F8
- 4314 F8
- 4315 H5
- 6307 C9
- 6308 B9
- 7330 A5
- 7340 D5
- 7350 F3
- 7351 A4
- 7352 C4
- 7353 E2
- 9301 B9
- 9302 B3
- 9303 D3
- 9304 E1
- F332 A2
- F334 C2
- F335 C2
- F336 C2
- F337 D2
- F348 H5
- I309 A4
- I310 A3
- I311 C4
- I313 E2
- I328 G3
- I329 F3
- I342 B9
- I344 E2
- I346 E9
- I347 G9
- I382 C3
- I383 C3
- I384 D2
- I389 A5
- I390 A6
- I391 B9
- I392 B5
- I393 C7
- I394 D9
- I395 C5
- I396 E5
- I397 F4
- I398 F7
- I399 A3


## B3 ROTATION & SCAVEM




Item No.	HD	ATSC
2364	470P	4n7
2365	470P	4n7
2383	220p	680P
2393	-	220p(30PW
3366	120k	68k
3367	120k	68k
3371	560R	2K2
3373	1K5	4K7
3378	68R	330R
3380	33K	22K
3381	18K	33K
3384	330K	-
3385	4K7	-
3393	56R	-
9393	-	Jmp

A	0087 A8	I366 B7
	1361 C11	I367 B6
	1362 C11	I368 A8
	1381 E11	I369 C7
	2361 B6	I370 D4
	2363 A6	I371 D7
	2364 B6	I375 C5
	2365 D6	I380 E7
	2367 G6	I381 G6
	2368 C6	I386 B4
B	2370 E7	I387 E6
	2381 B5	
	2382 B3	
	2383 C9	
	2384 A7	
	2385 D7	
	2387 E4	
	2389 G7	
	2390 D9	
	2391 D3	
C	2392 D2	
	2393 E2	
	3309 D3	
	3310 B7	
	3311 C7	
	3350 G5	
	3361 B4	
	3362 C5	
	3363 A7	
	3364 A7	
D	3365 B7	
	3366 C7	
	3367 C7	
	3368 D7	
	3369 D8	
	3370 D7	
	3371 C8	
	3372 G8	
	3373 A4	
	3374 C10	
E	3377 E4	
	3378 D3	
	3379 E2	
	3380 E6	
	3381 E6	
	3382 B4	
	3383 E2	
	3384 E6	
	3385 G5	
	3392 C8	
F	3393 C5	
	3394 D7	
	3395 B2	
	3396 E5	
	3397 B5	
	3398 D2	
	3399 C9	
	4362 A2	
	4363 G2	
	5361 B8	
G	5362 B2	
	6334 E5	
	6361 B3	
	6362 C4	
	6363 B2	
	7331 D2	
	7332 A7	
	7333 D8	
	7361 B5	
	7362 C4	
H	7363 B8	
	7364 C8	
	7365 D4	
	7366 D8	
	9322 C2	
	9323 B8	
	9325 G3	
	9393 C5	
	F361 B8	
	F362 C8	
	F381 E10	
	F382 E10	
	I314 B8	
	I315 D8	
	I316 D8	
	I317 C9	
	I319 F8	
	I320 D7	
	I321 A4	
	I325 D3	
	I326 D2	
	I360 A7	
	I361 B4	
	I362 C5	
	I364 D6	
	I365 C7	


Layout CRT Panel (Top Side) (Multi Board)

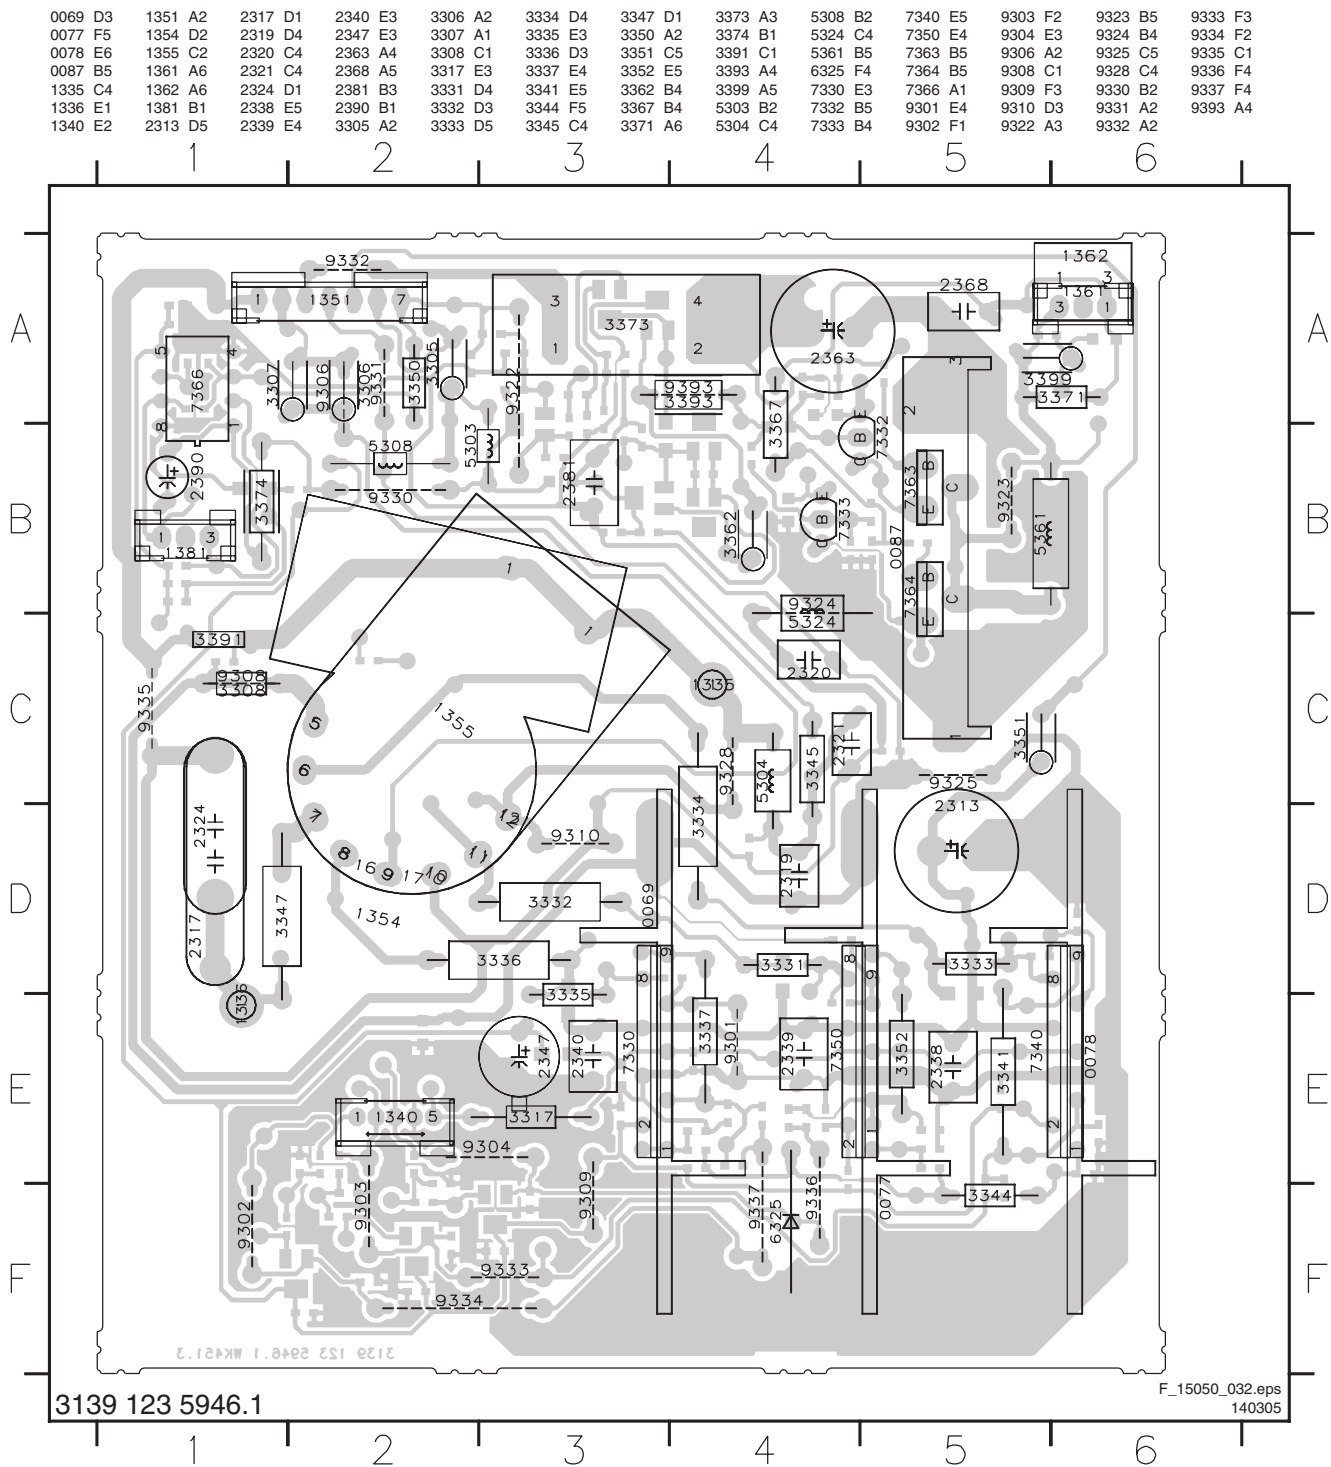


Layout CRT Panel (Bottom Side) (Multi Board)

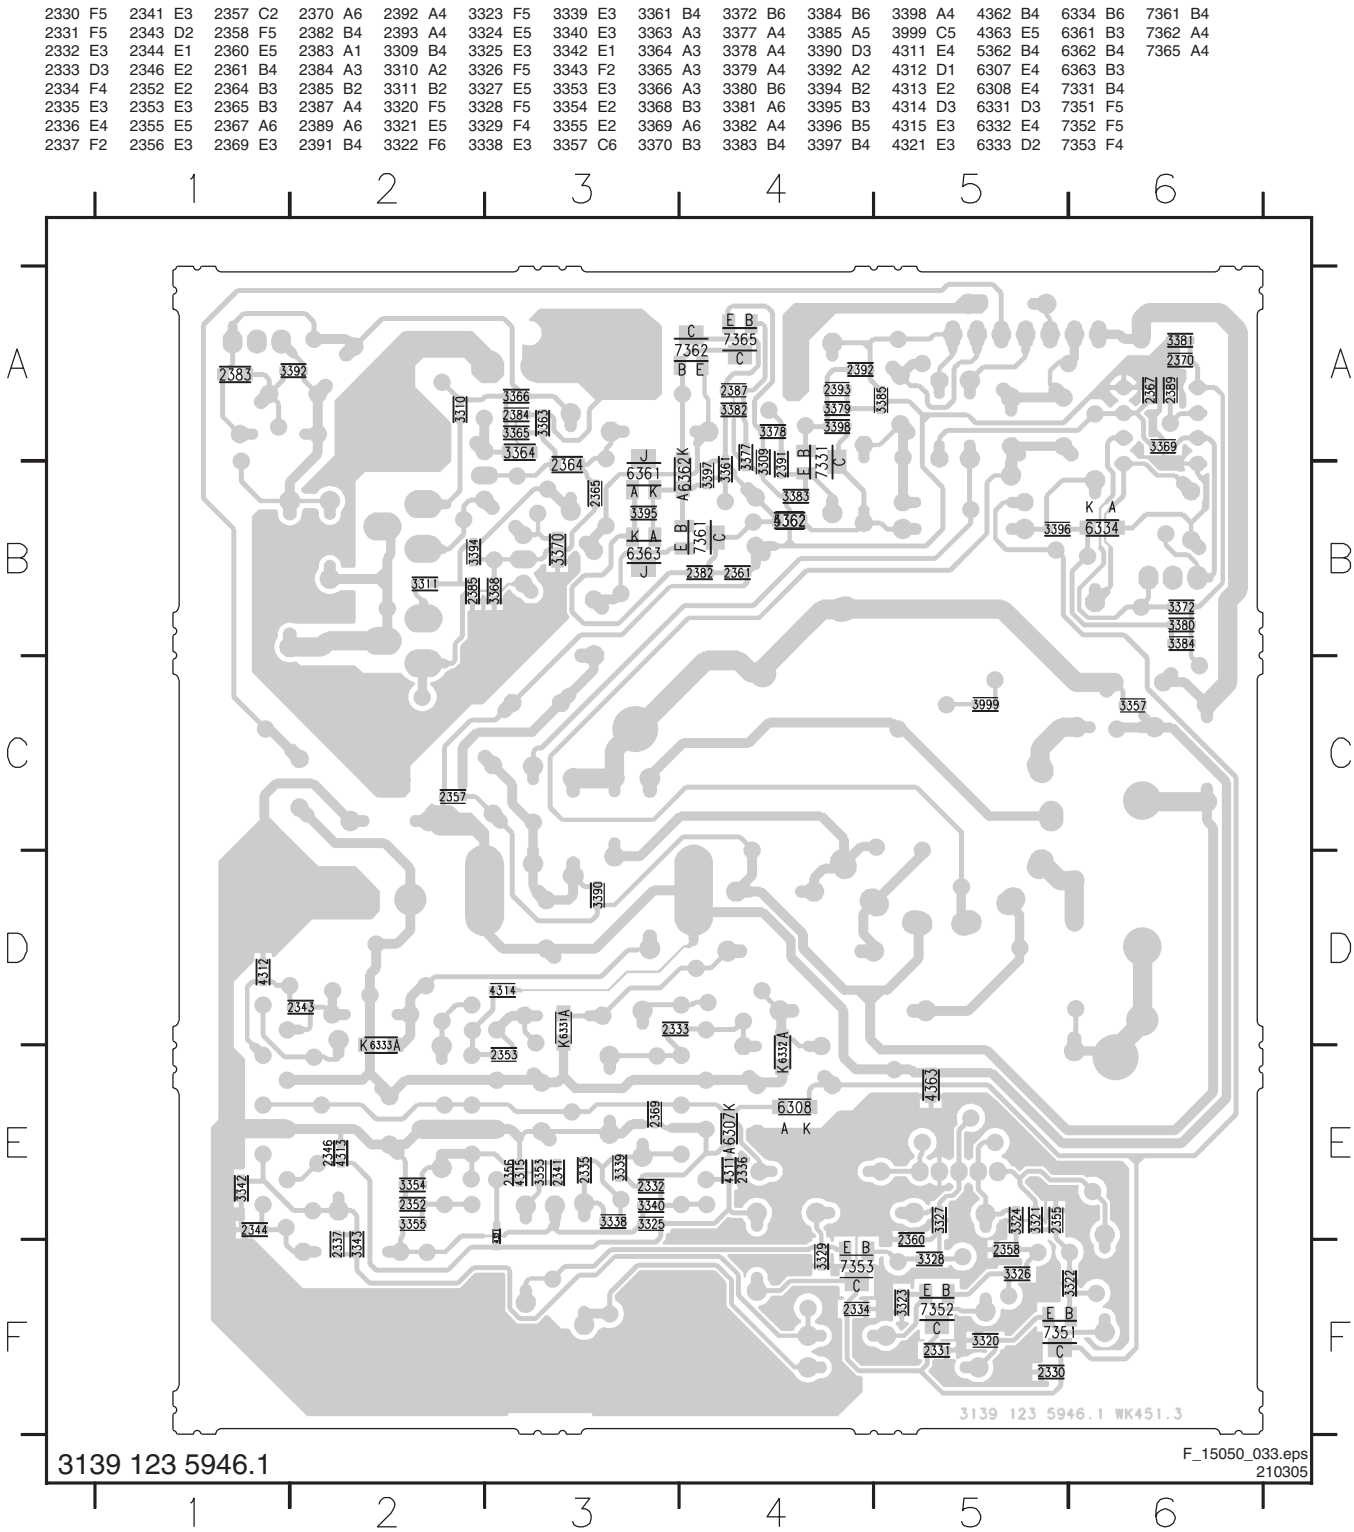


## D SIDE AV PANEL + HP PANEL




Layout Side AV + HP Panel (PV2) (Top Side)

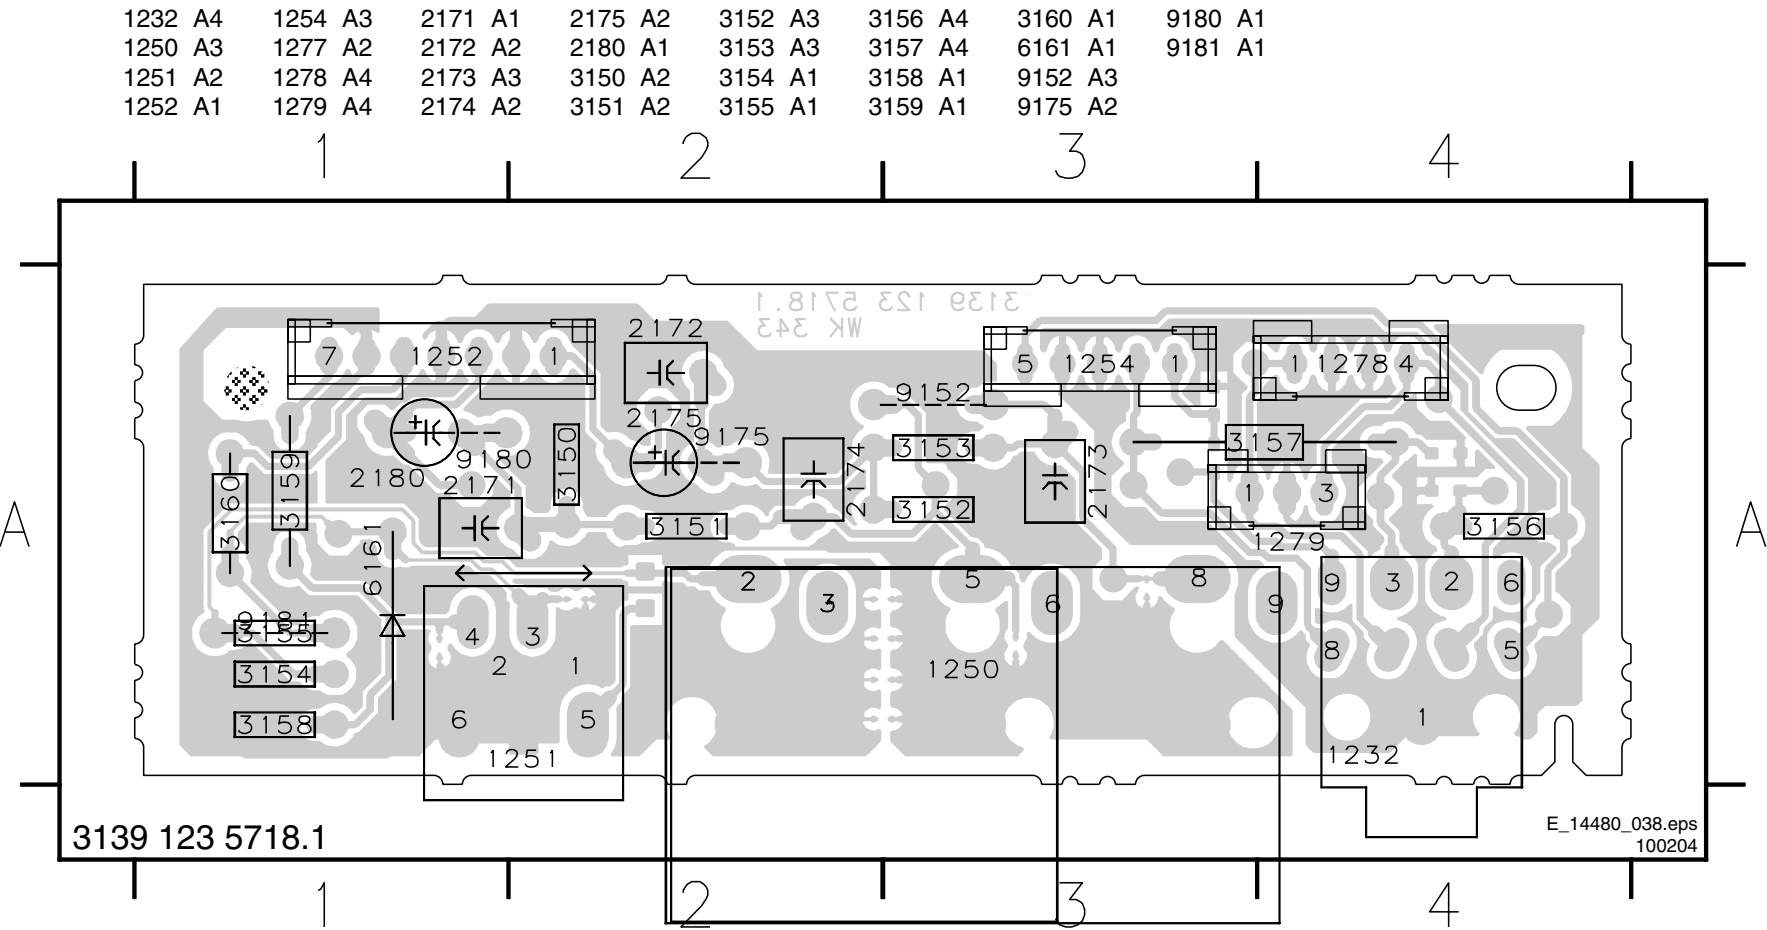


Layout Side AV + HP Panel (PV2) (Bottom Side)

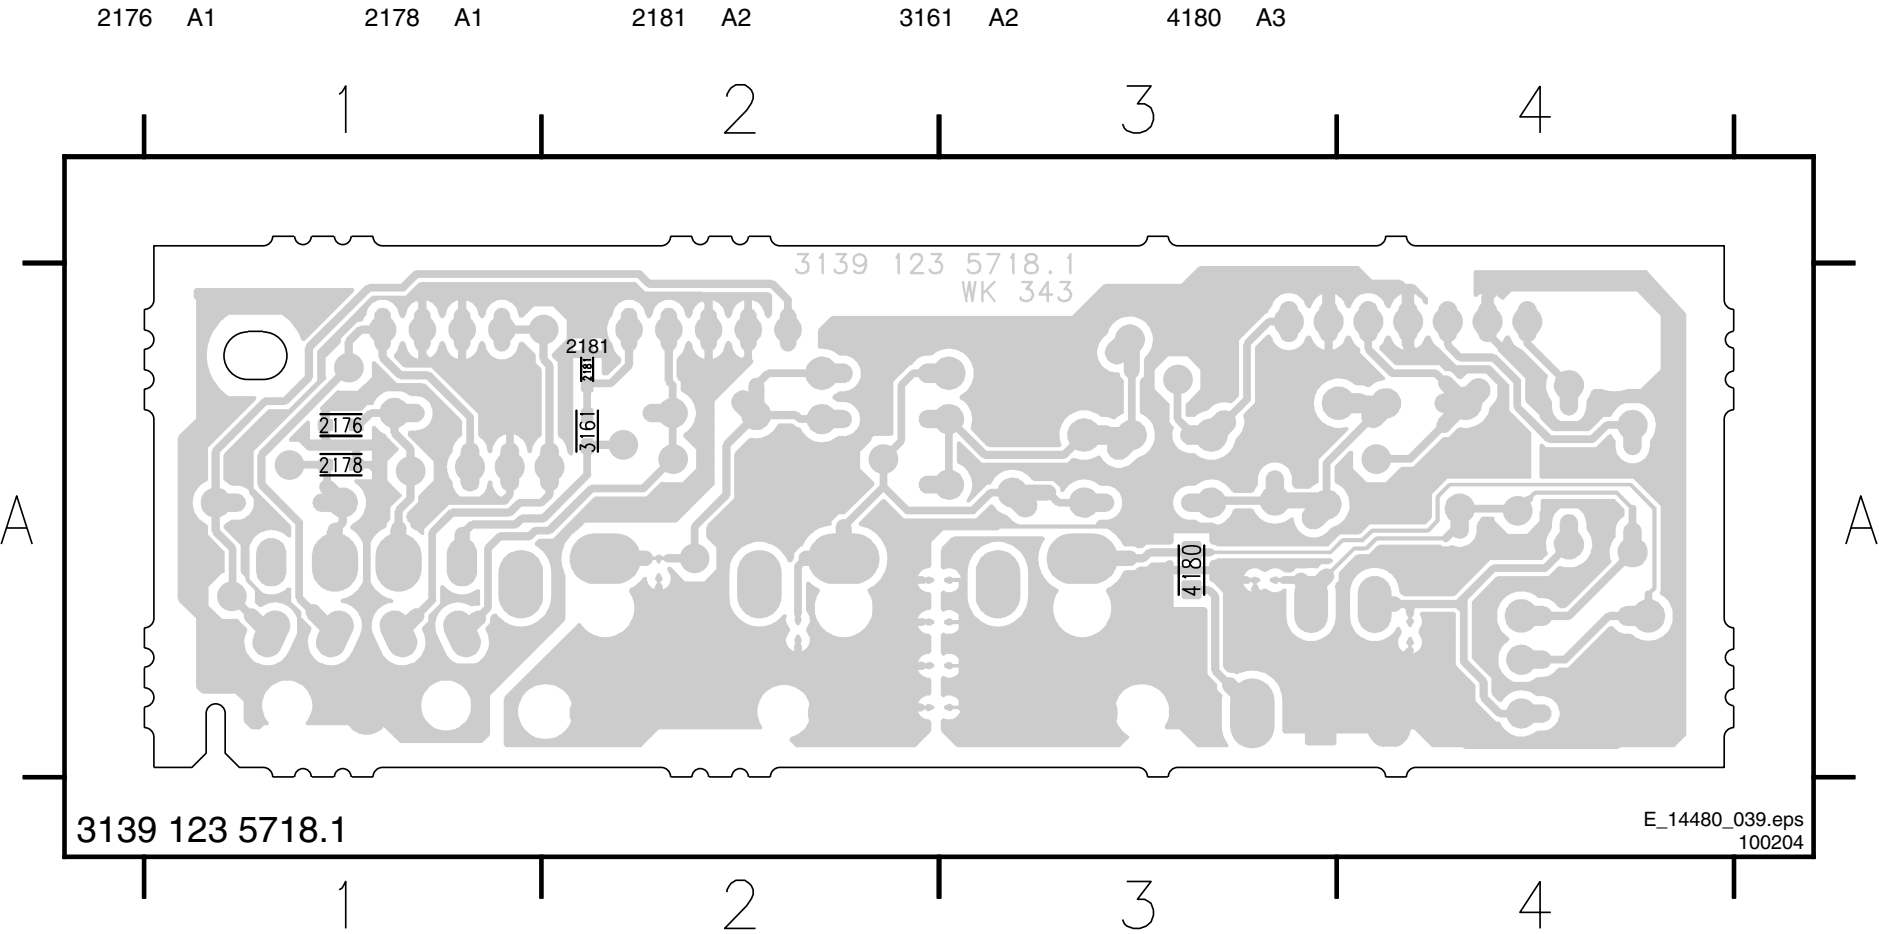


**D** SIDE AV PANEL + HP PANEL (FL13)



Layout Side AV + HP Panel (FL13) (Top Side)

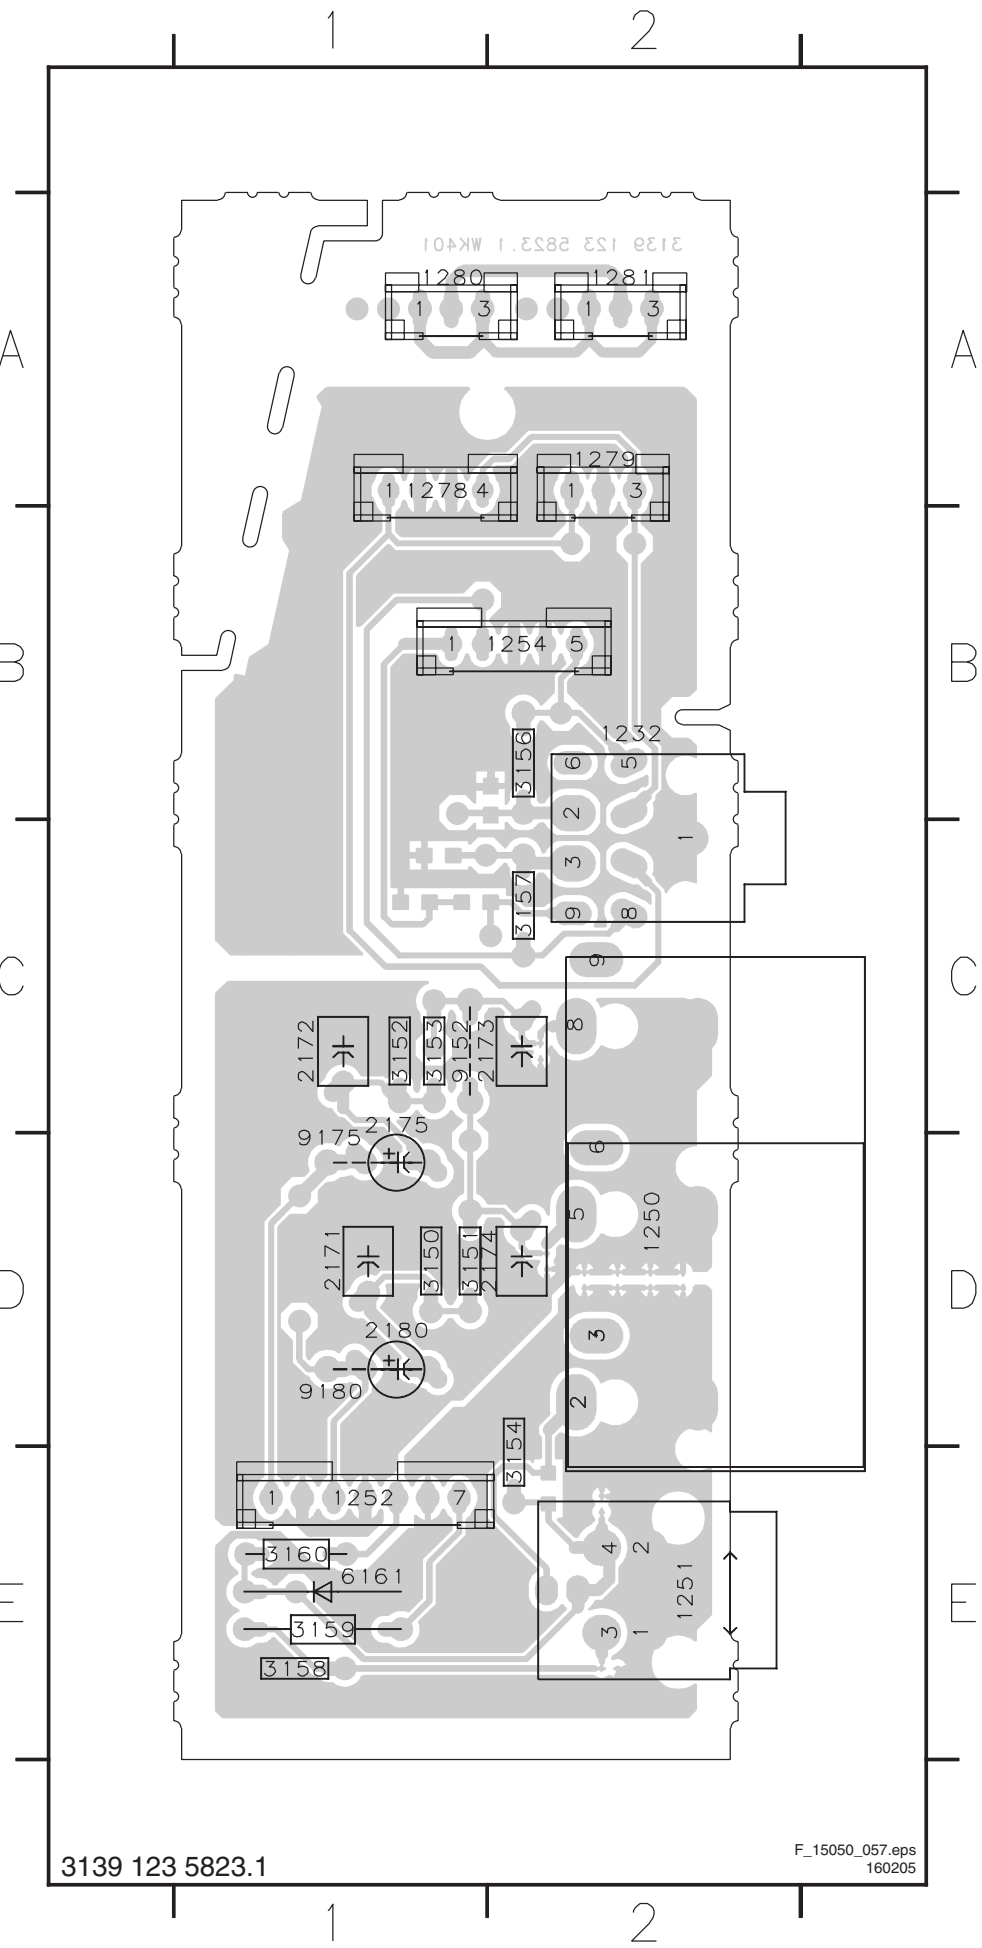


Layout Side AV + HP Panel (FL13) (Bottom Side)

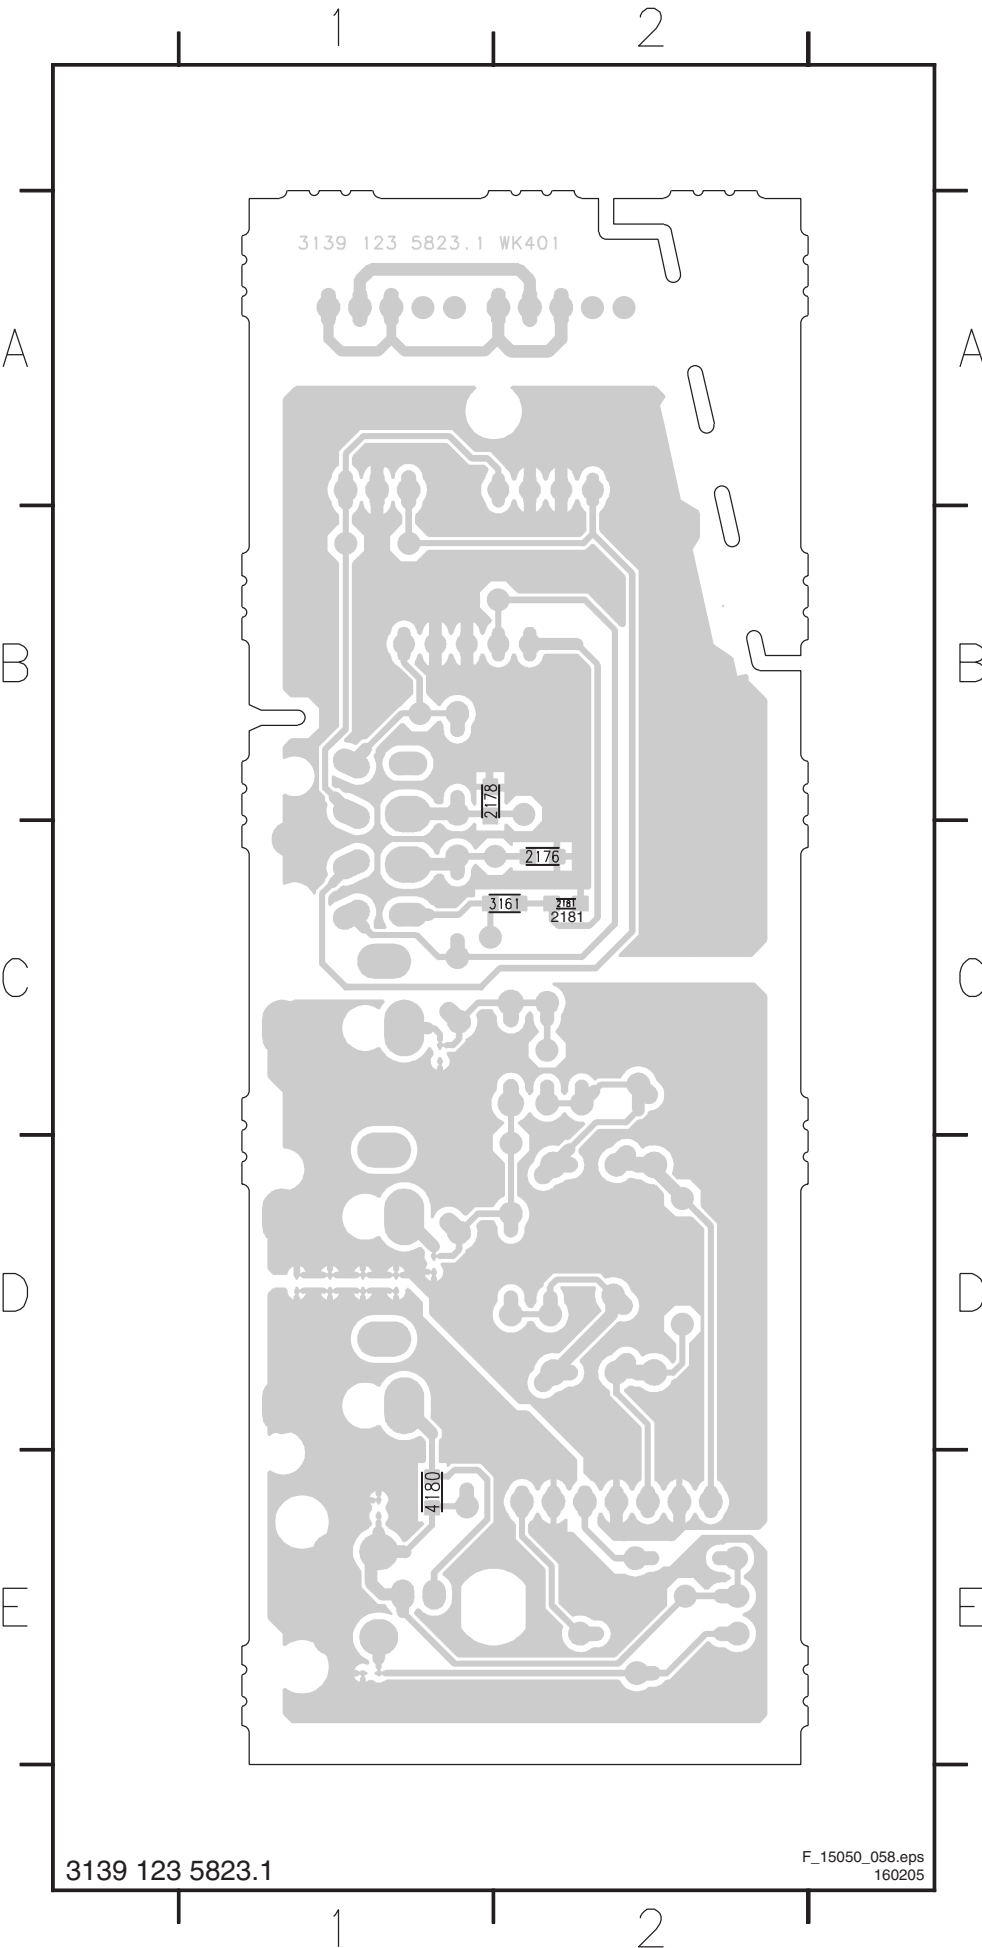




Top Control Panel (PV2)

1010 A1    1013 B2    3011 A2    3014 B3    F011 A2    I013 A3  
1011 B3    1014 B2    3012 A2    3015 A3    F012 A3    I017 B3  
1012 B3    3010 A2    3013 A3    3016 B3    I011 A2    I018 A3

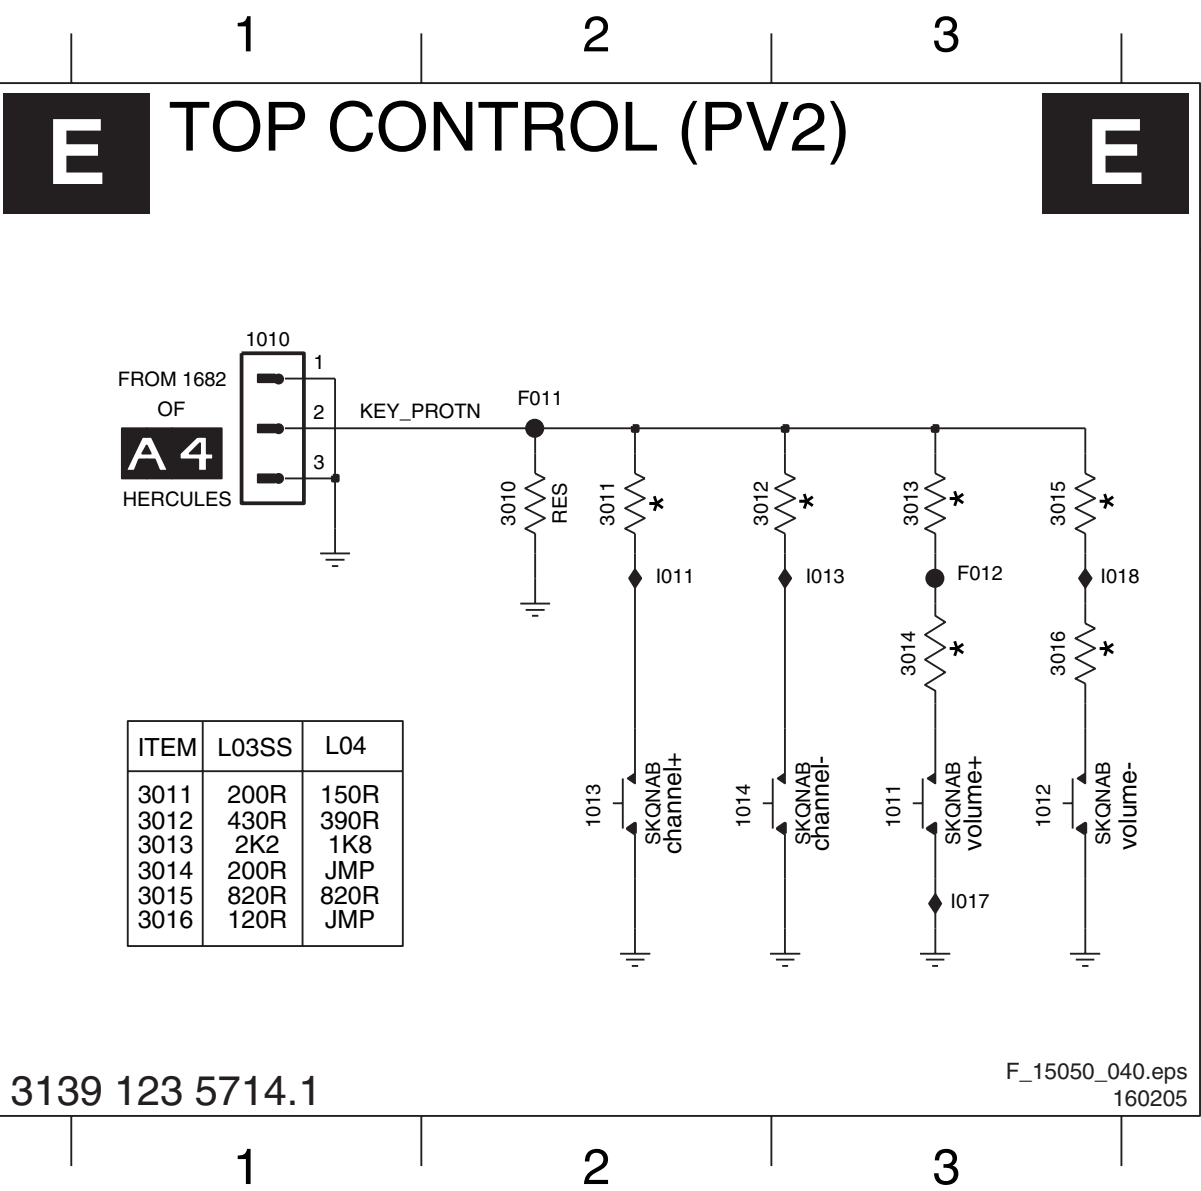


Top Control Panel (FL13)

0345 A4    1703 B2    3008 B2    3013 B1    9000 C3    F001 A3    F007 C4    I106 B2    I109 B1  
1701 B1    1704 B2    3010 B2    3014 B1    9001 C3    F002 A3    I103 A3    I107 B2  
1702 B1    1705 B2    3011 B1    3999 C3    9002 C4    F006 C3    I105 B1    I108 B2

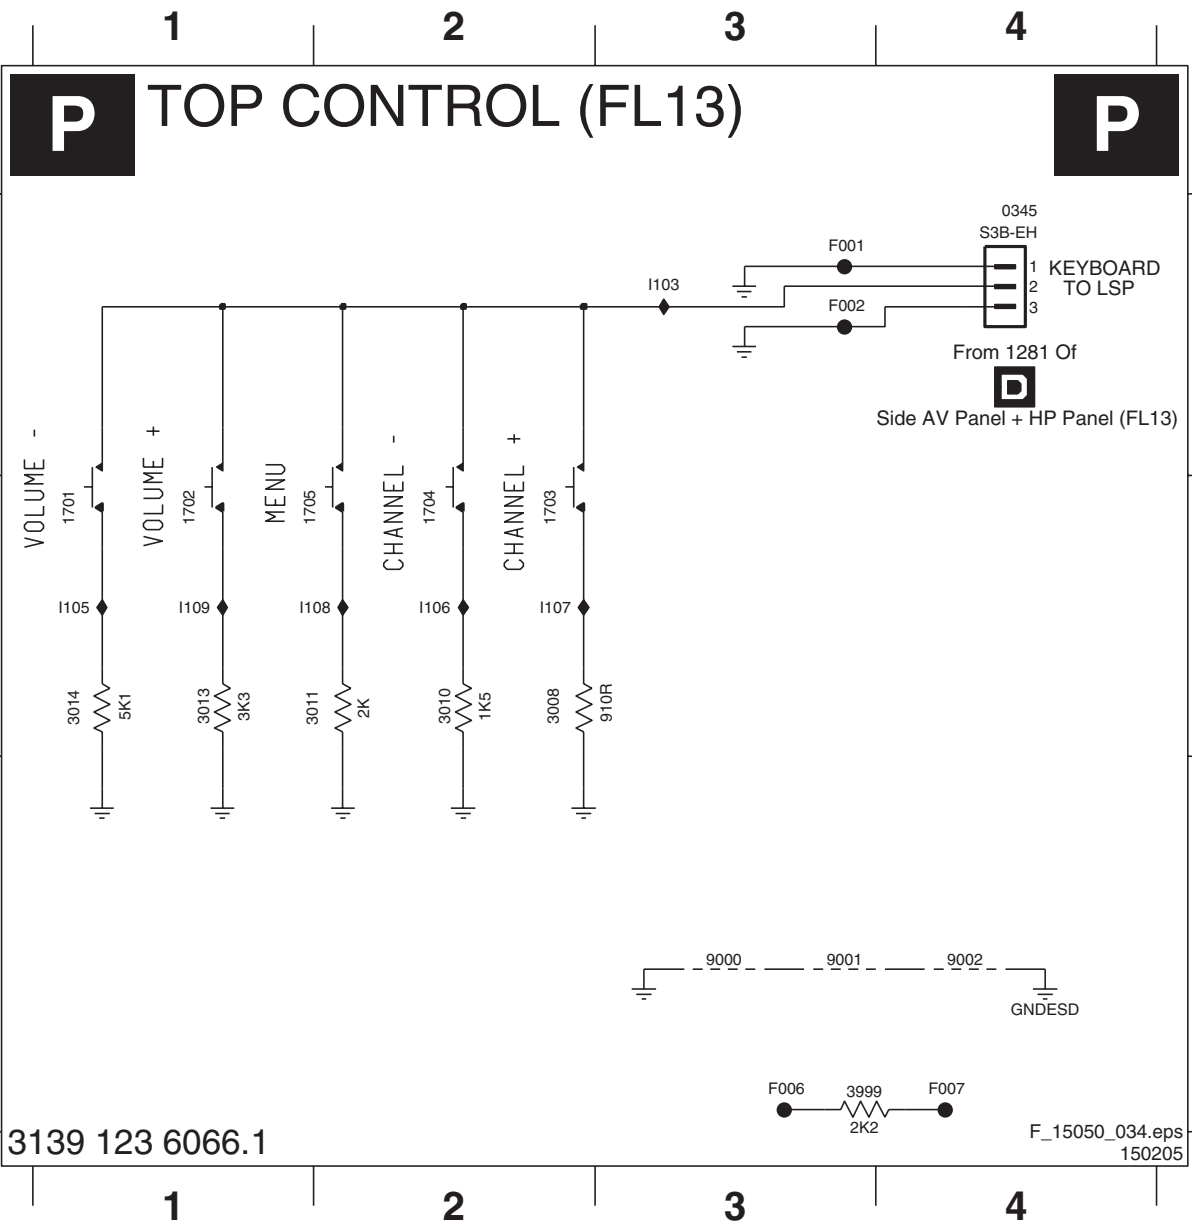





Layout Top Control Panel (PV2) (Top Side)

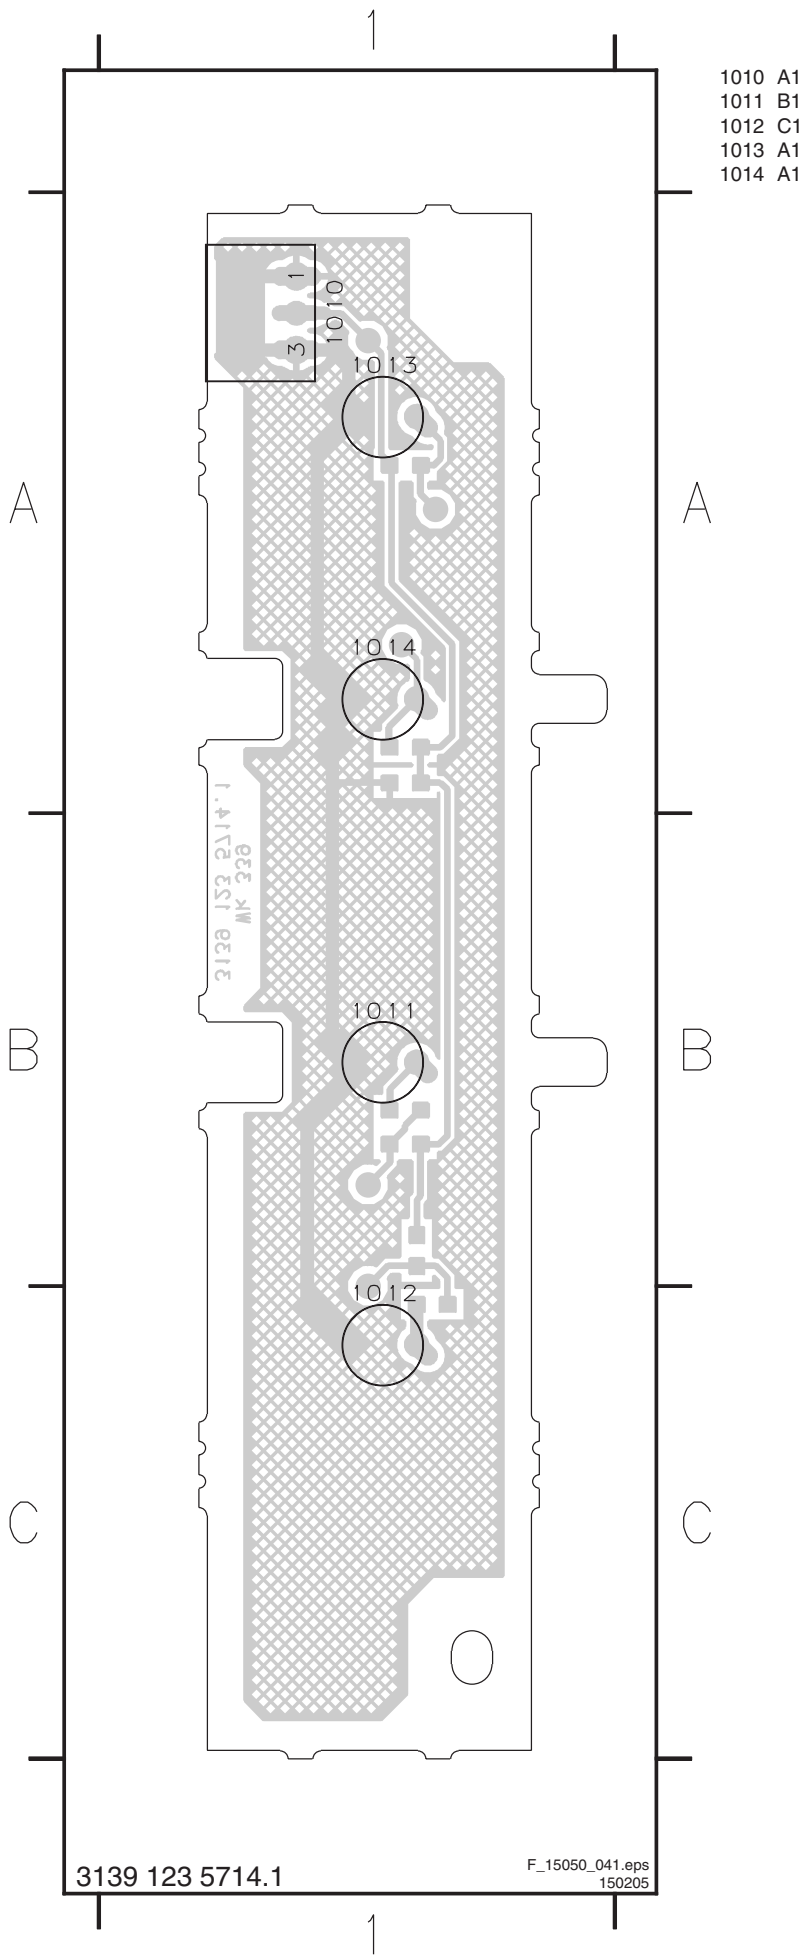


Layout Top Control Panel (PV2) (Bottom Side)

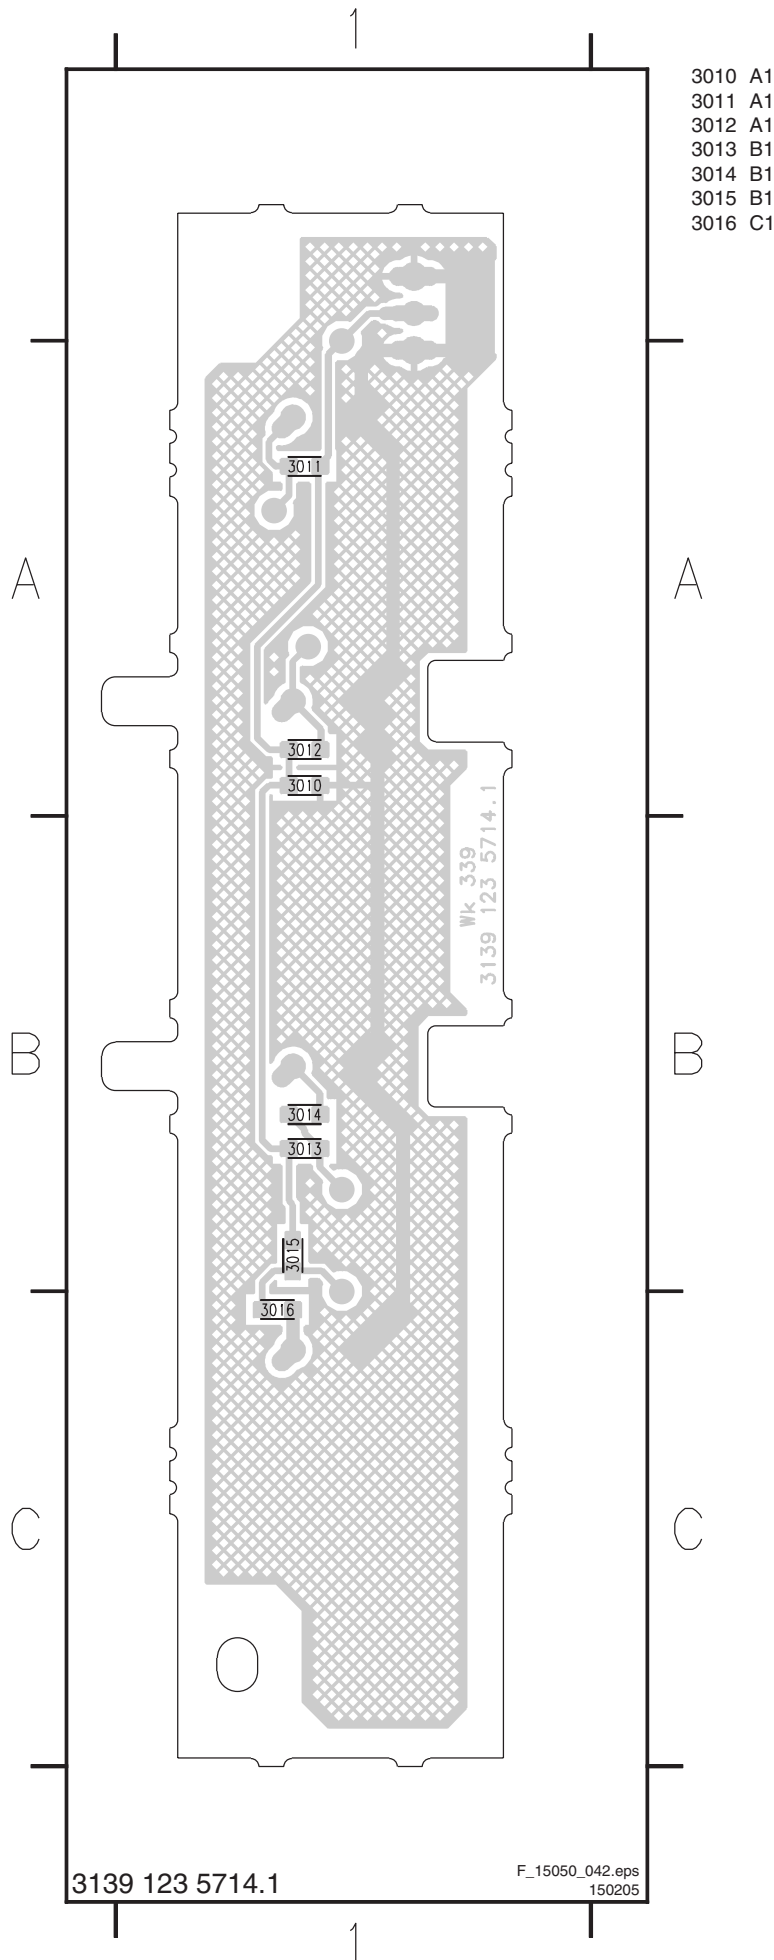


Layout Top Control Panel (FL13) (Top Side)

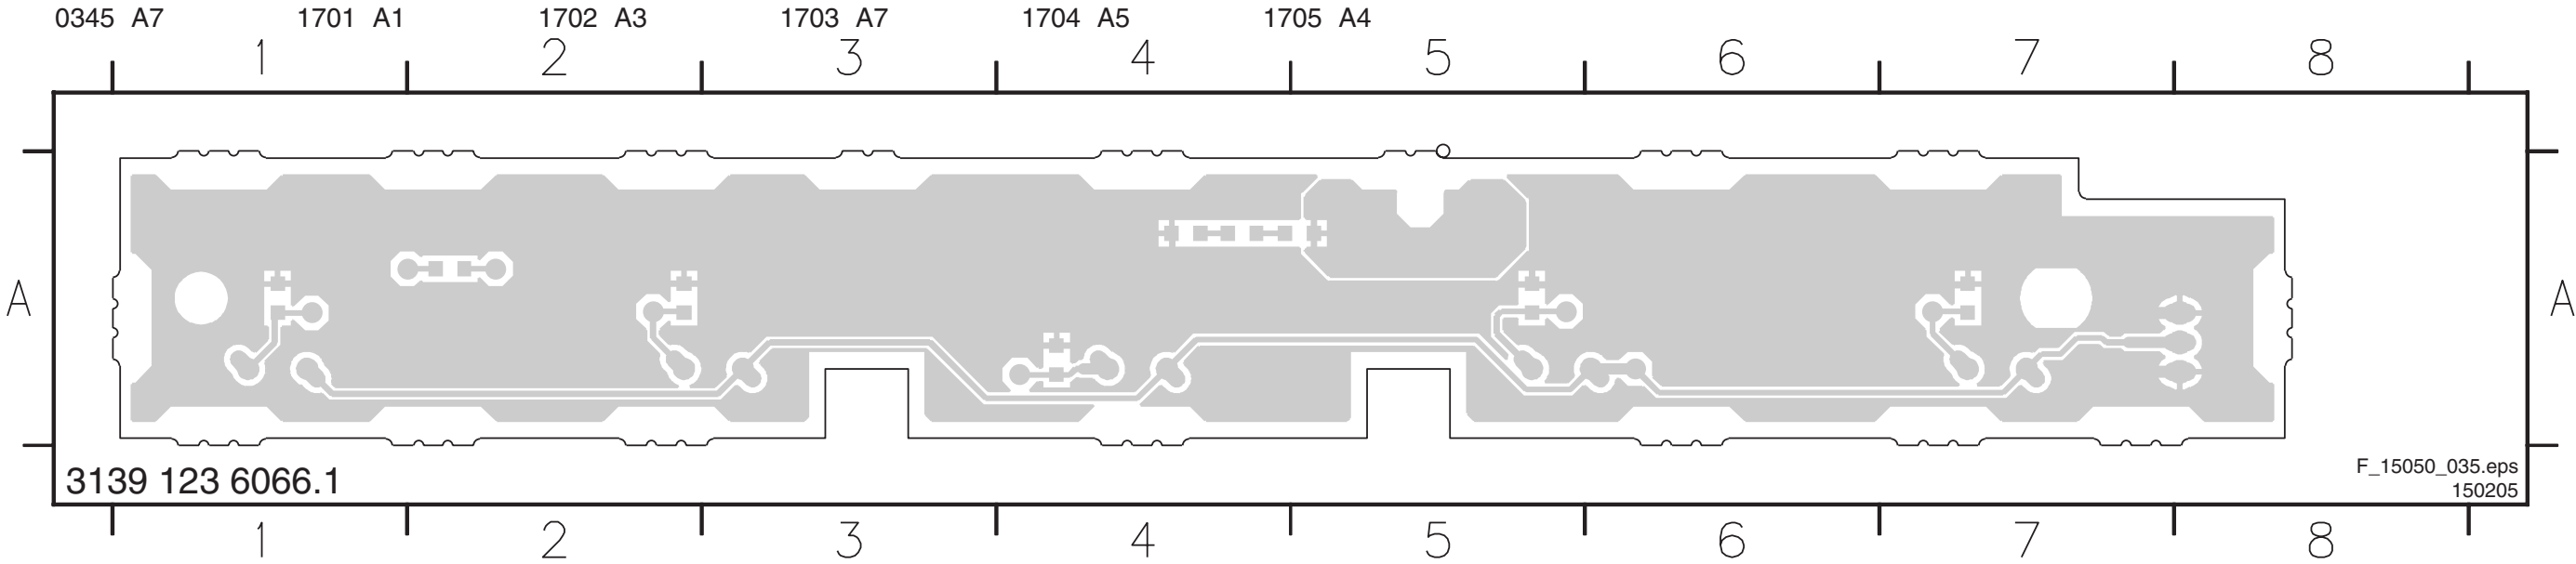


Layout Top Control Panel (FL13) (BottomSide)

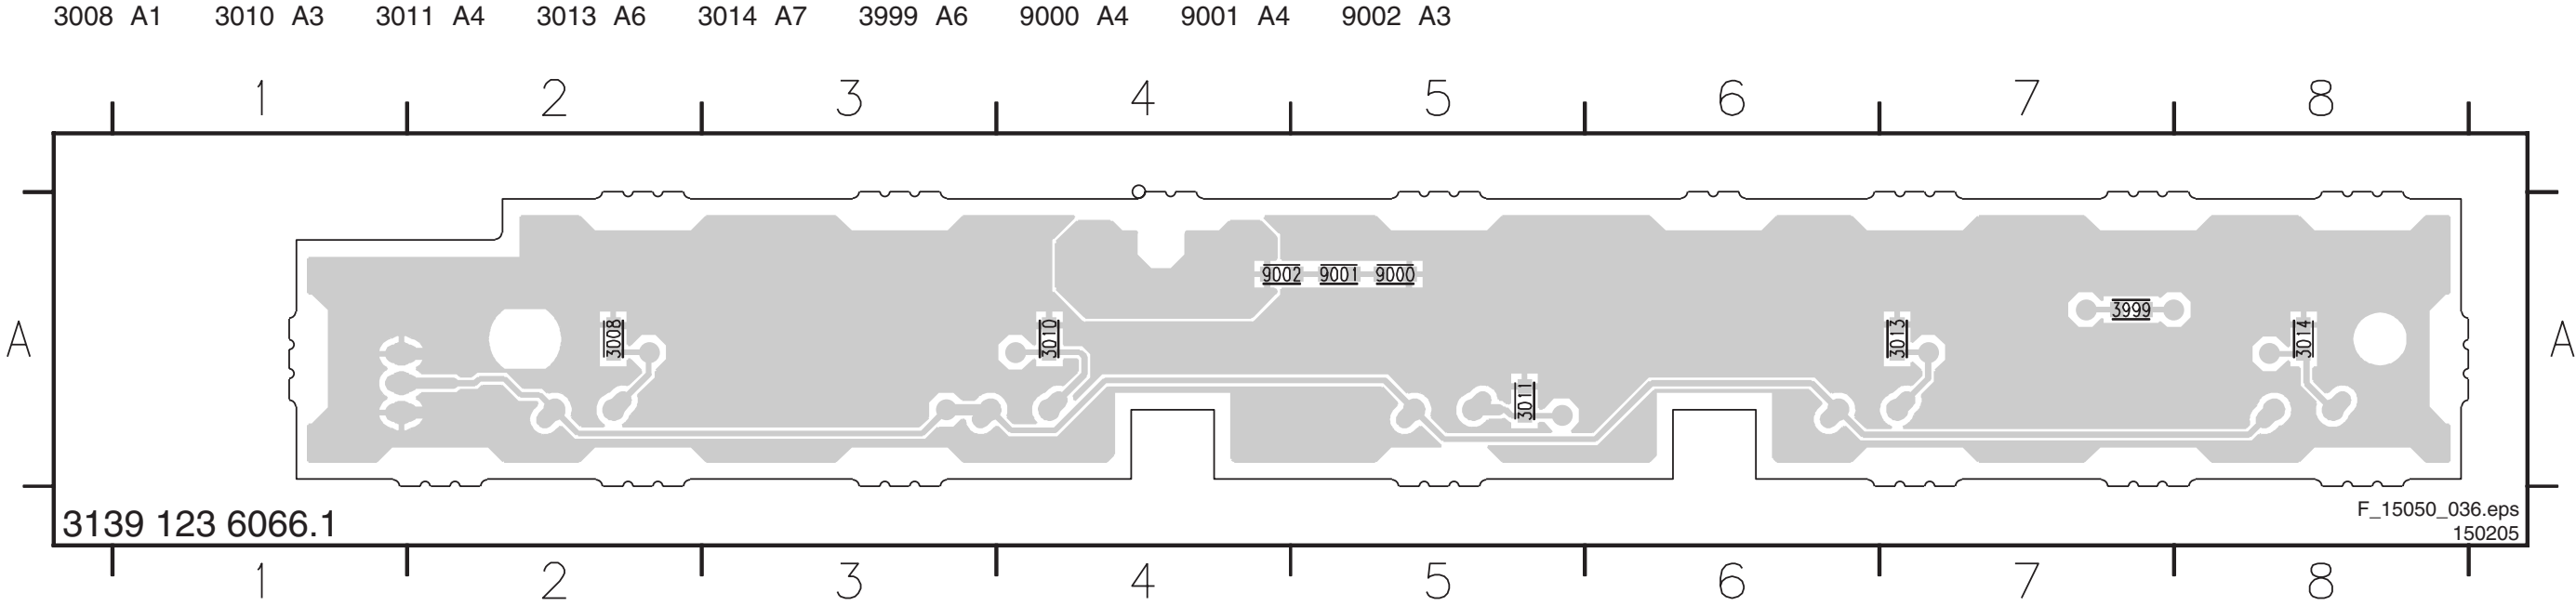


Front Interface Panel (FL13)

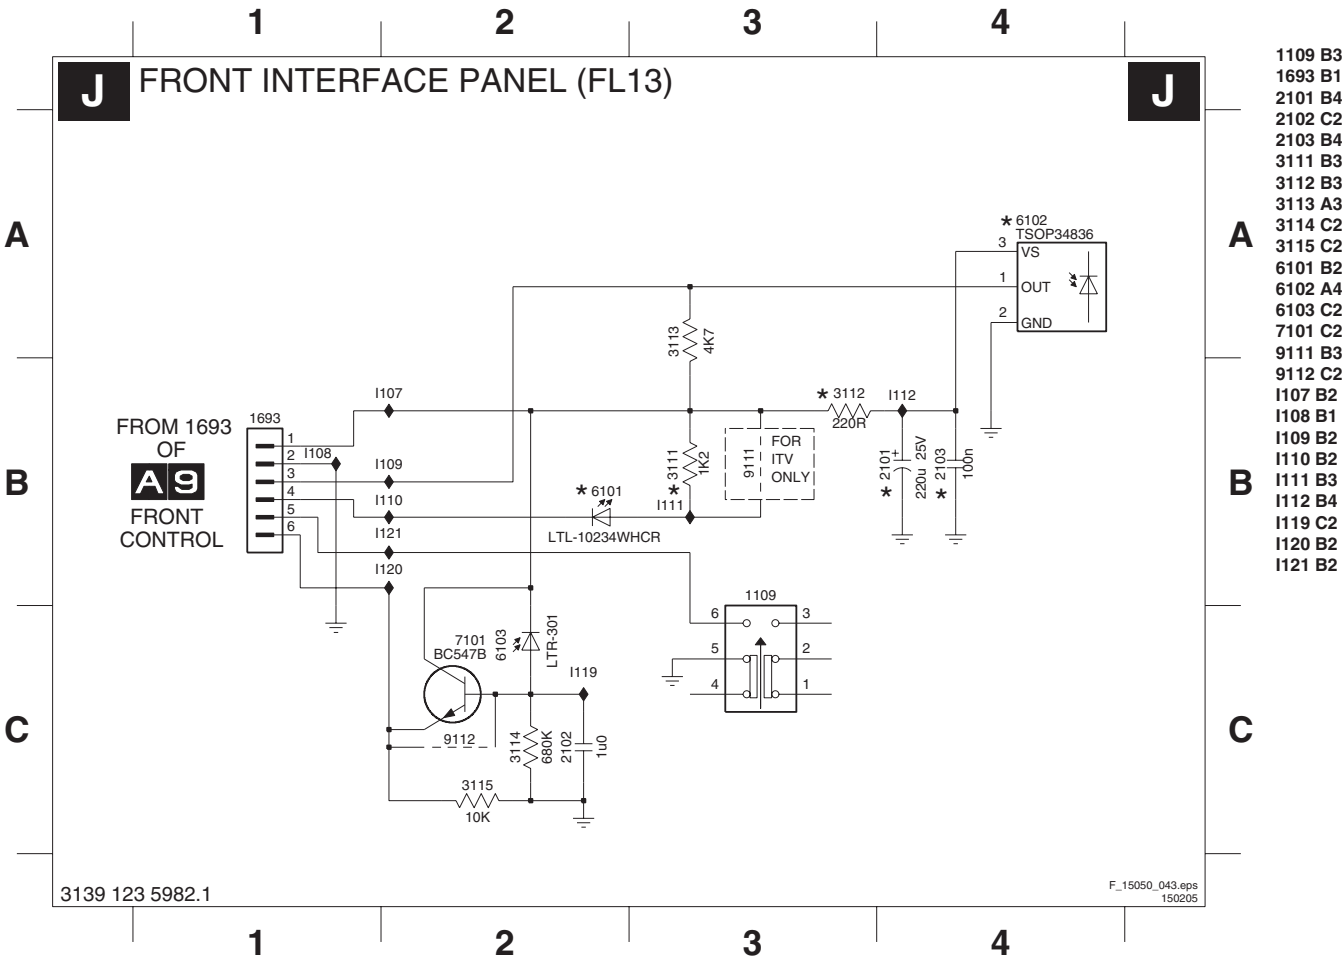


Front Interface Panel (PV2)

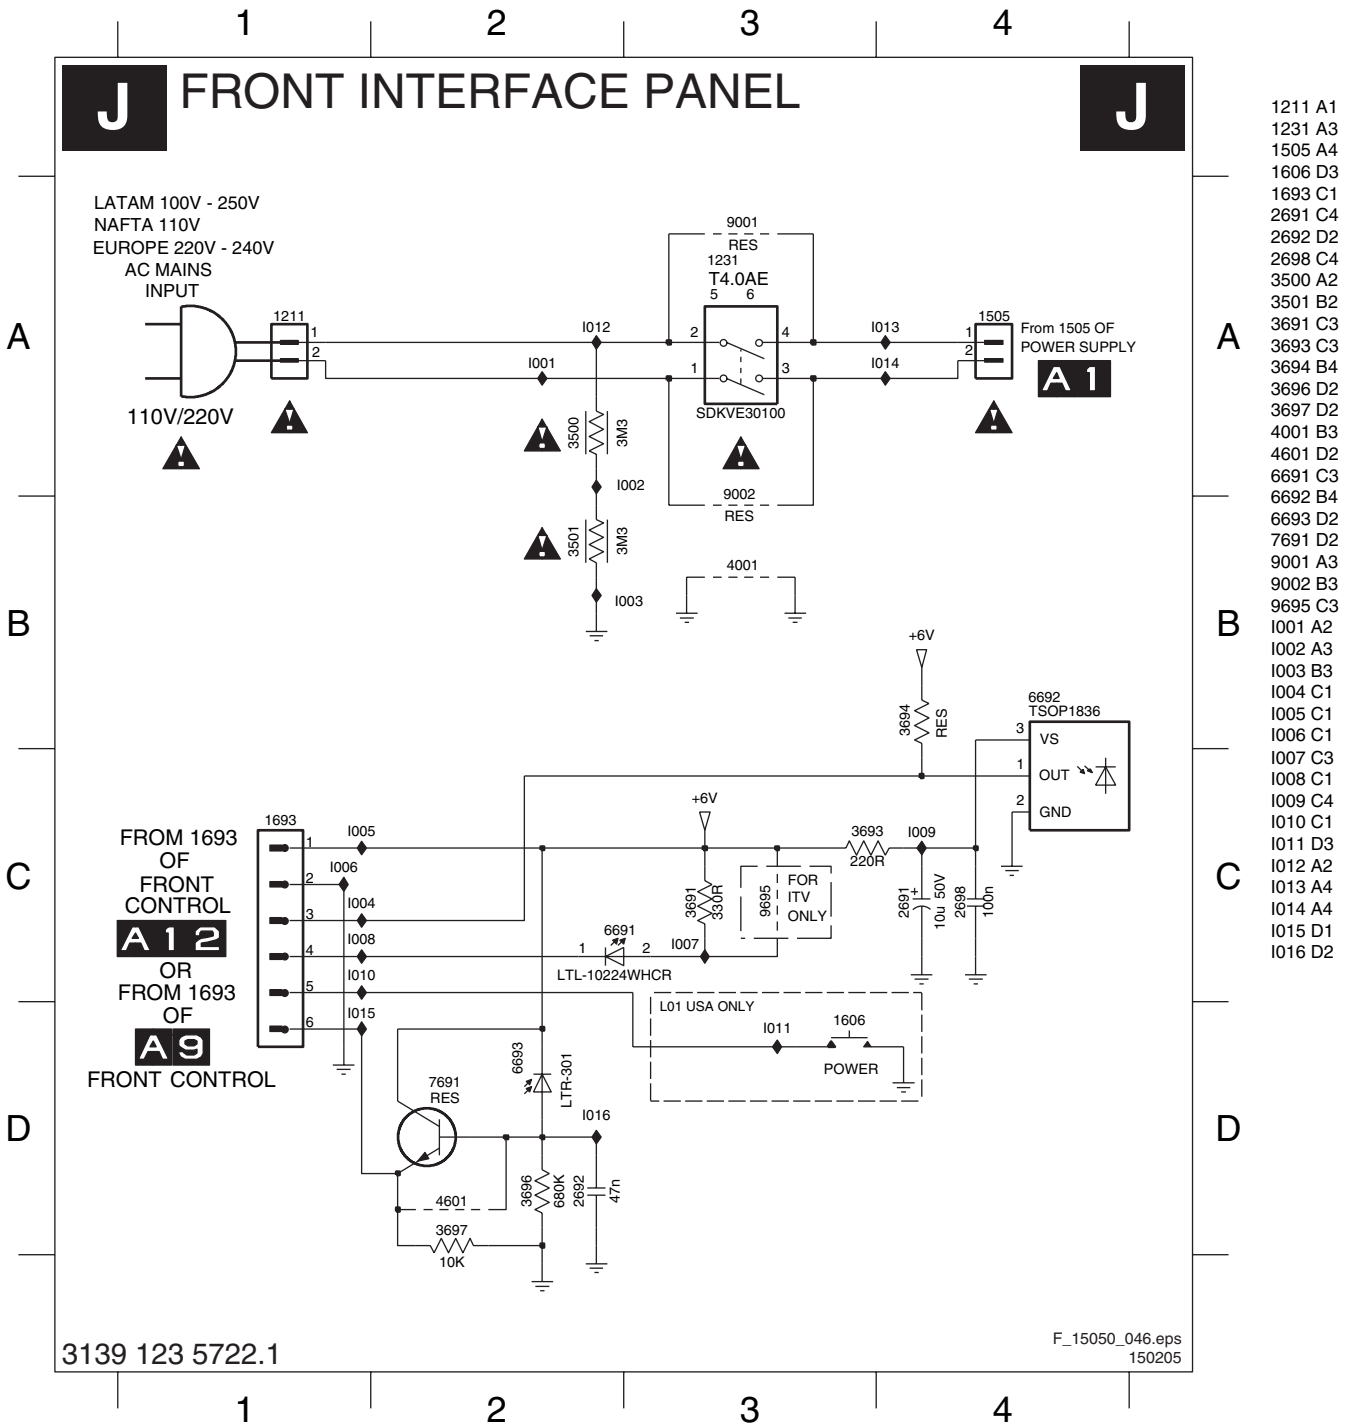

Layout Front Interface Panel (FL13) (Top Side)

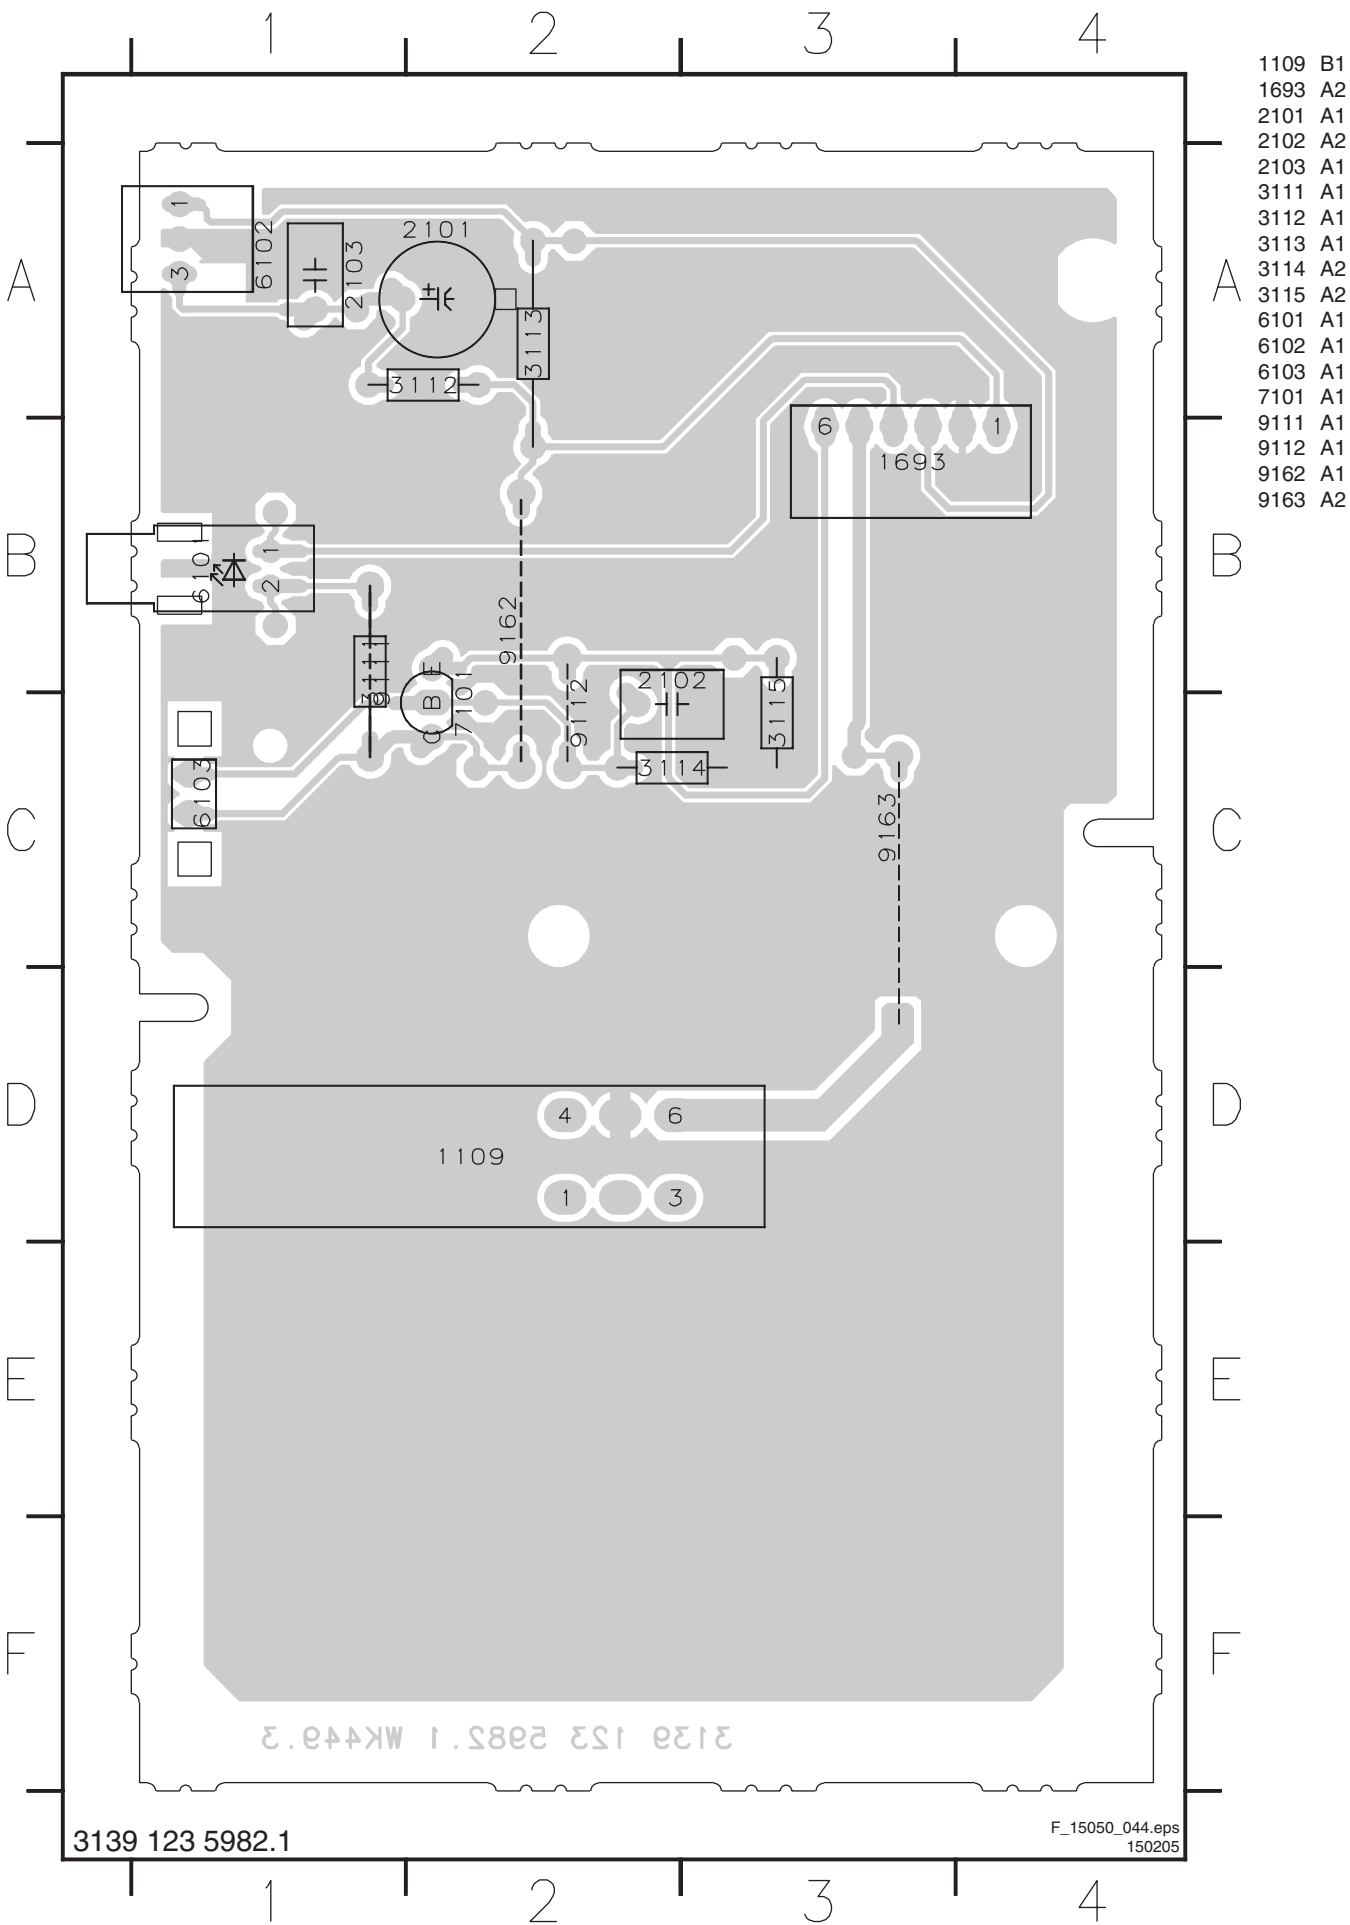


Layout Front Interface Panel (FL13) (Bottom Side)

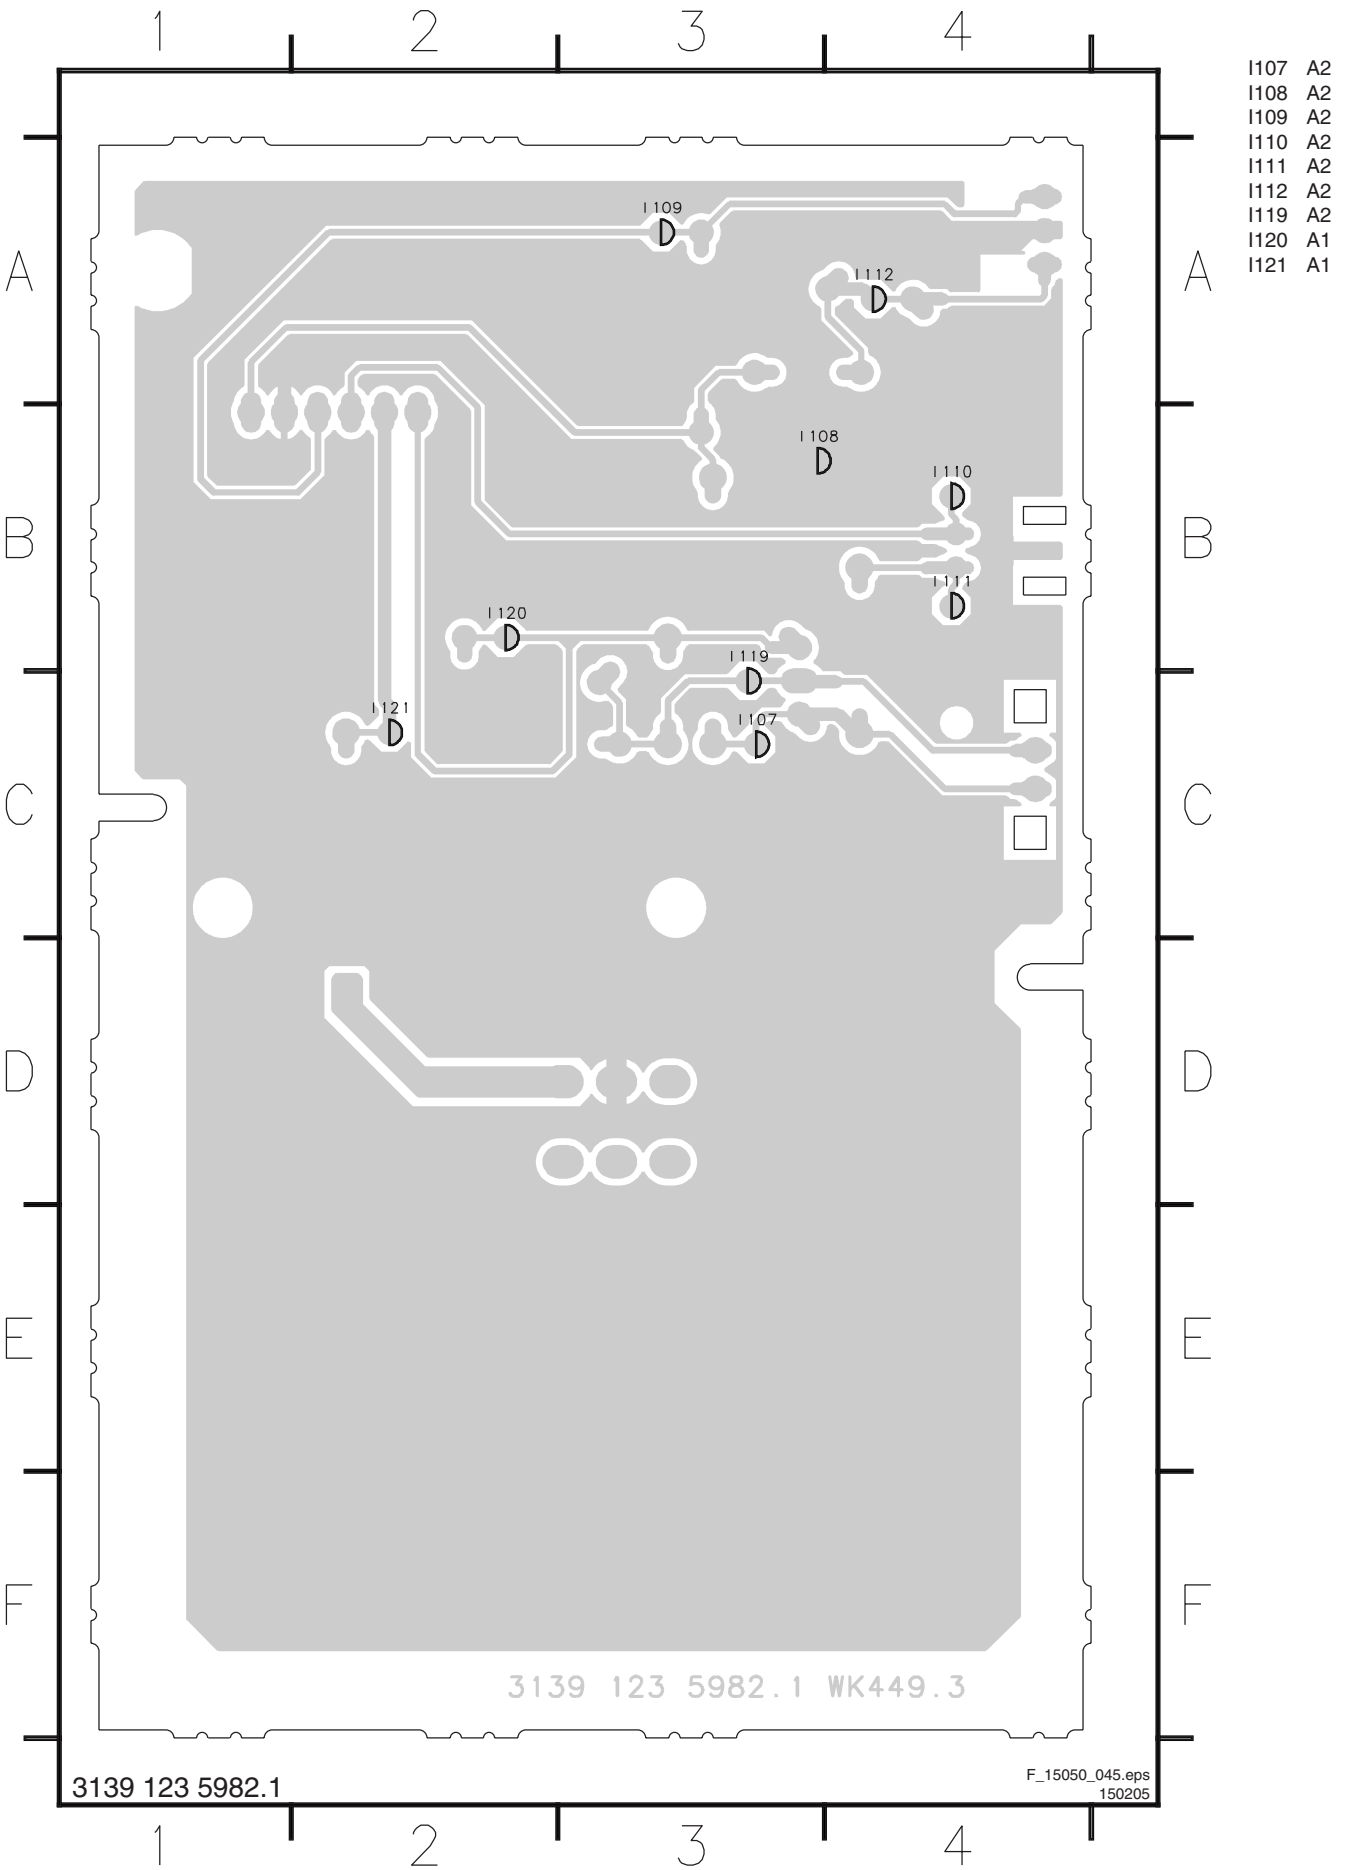


Layout Front Interface Panel (PV2) (Top Side)

1211 D1	1505 A1	1693 A3	2698 A3	3501 B3	3693 B3	6691 B4	6693 A4	9002 D2	9695 B3
1231 C3	1606 D4	2691 A4	3500 B2	3691 B3	3694 B3	6692 B4	9001 C1	9685 B3	9696 A3

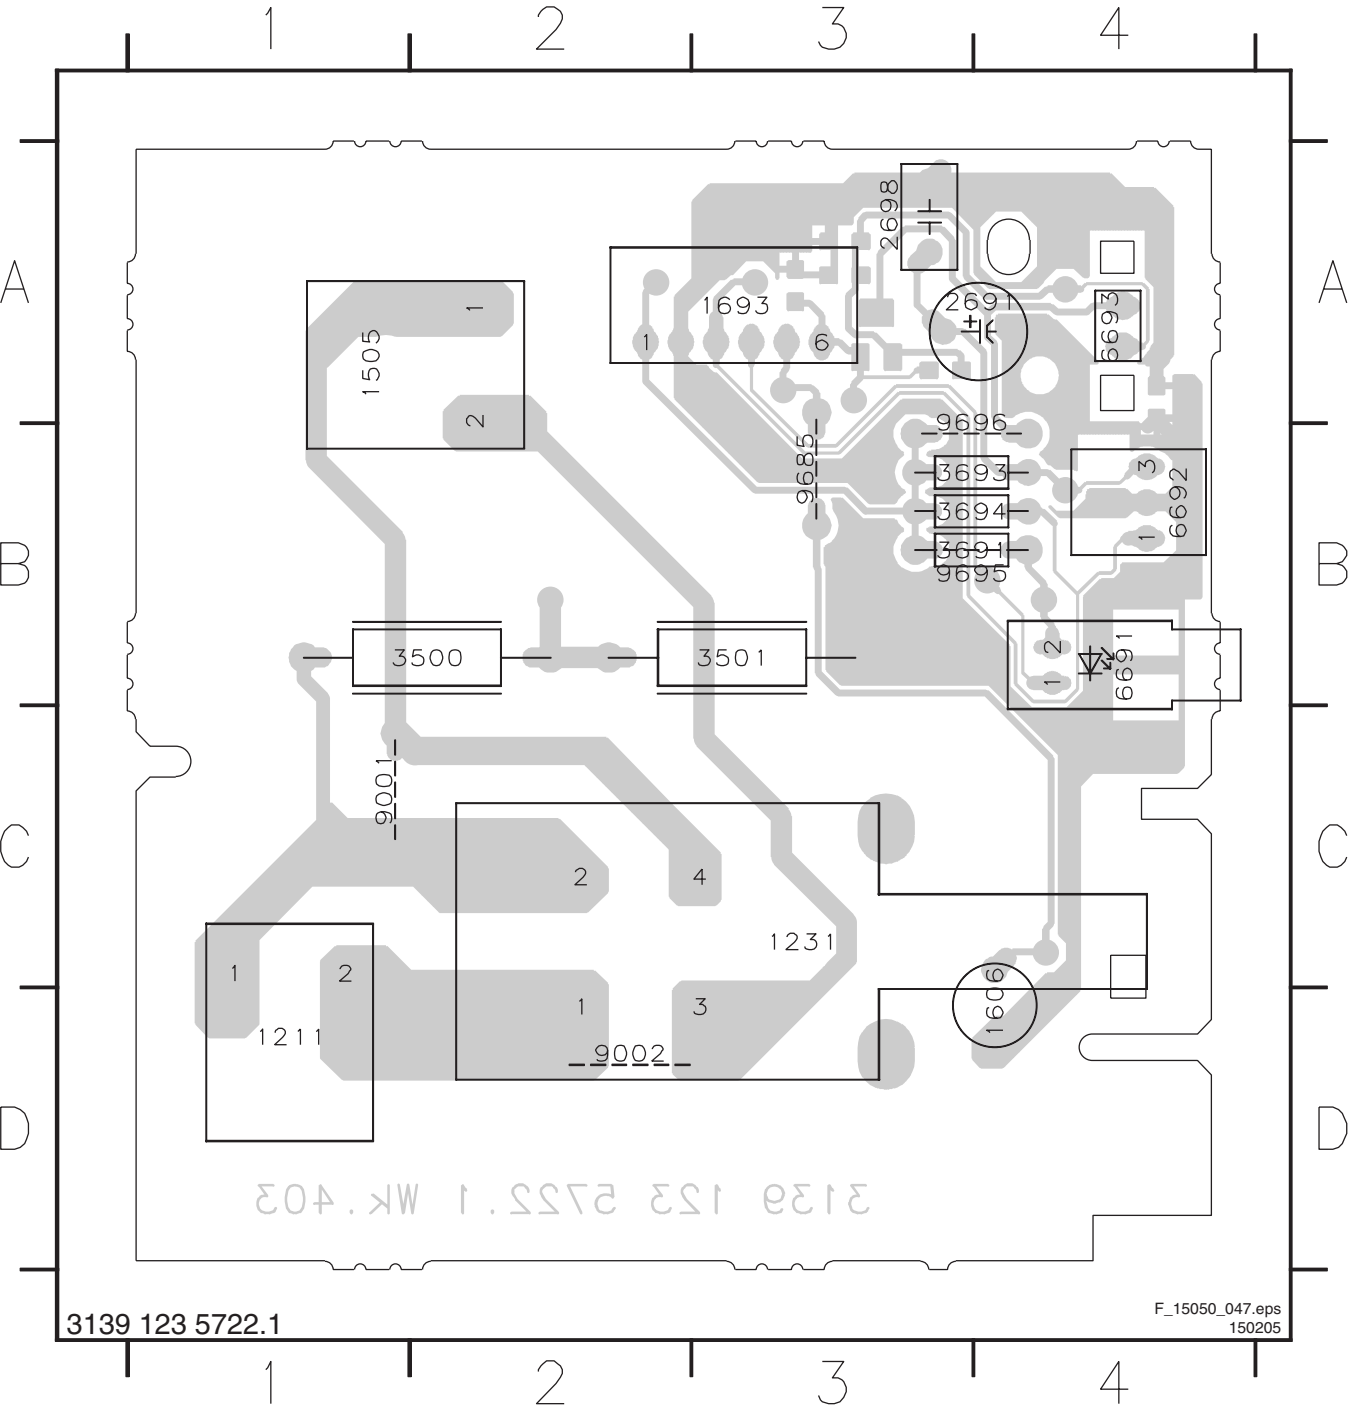


Layout Front Interface Panel (PV2) (Bottom Side)

2692 A2	3696 A2	3697 A2	4001 A1	4601 A2	7691 A2
---------	---------	---------	---------	---------	---------

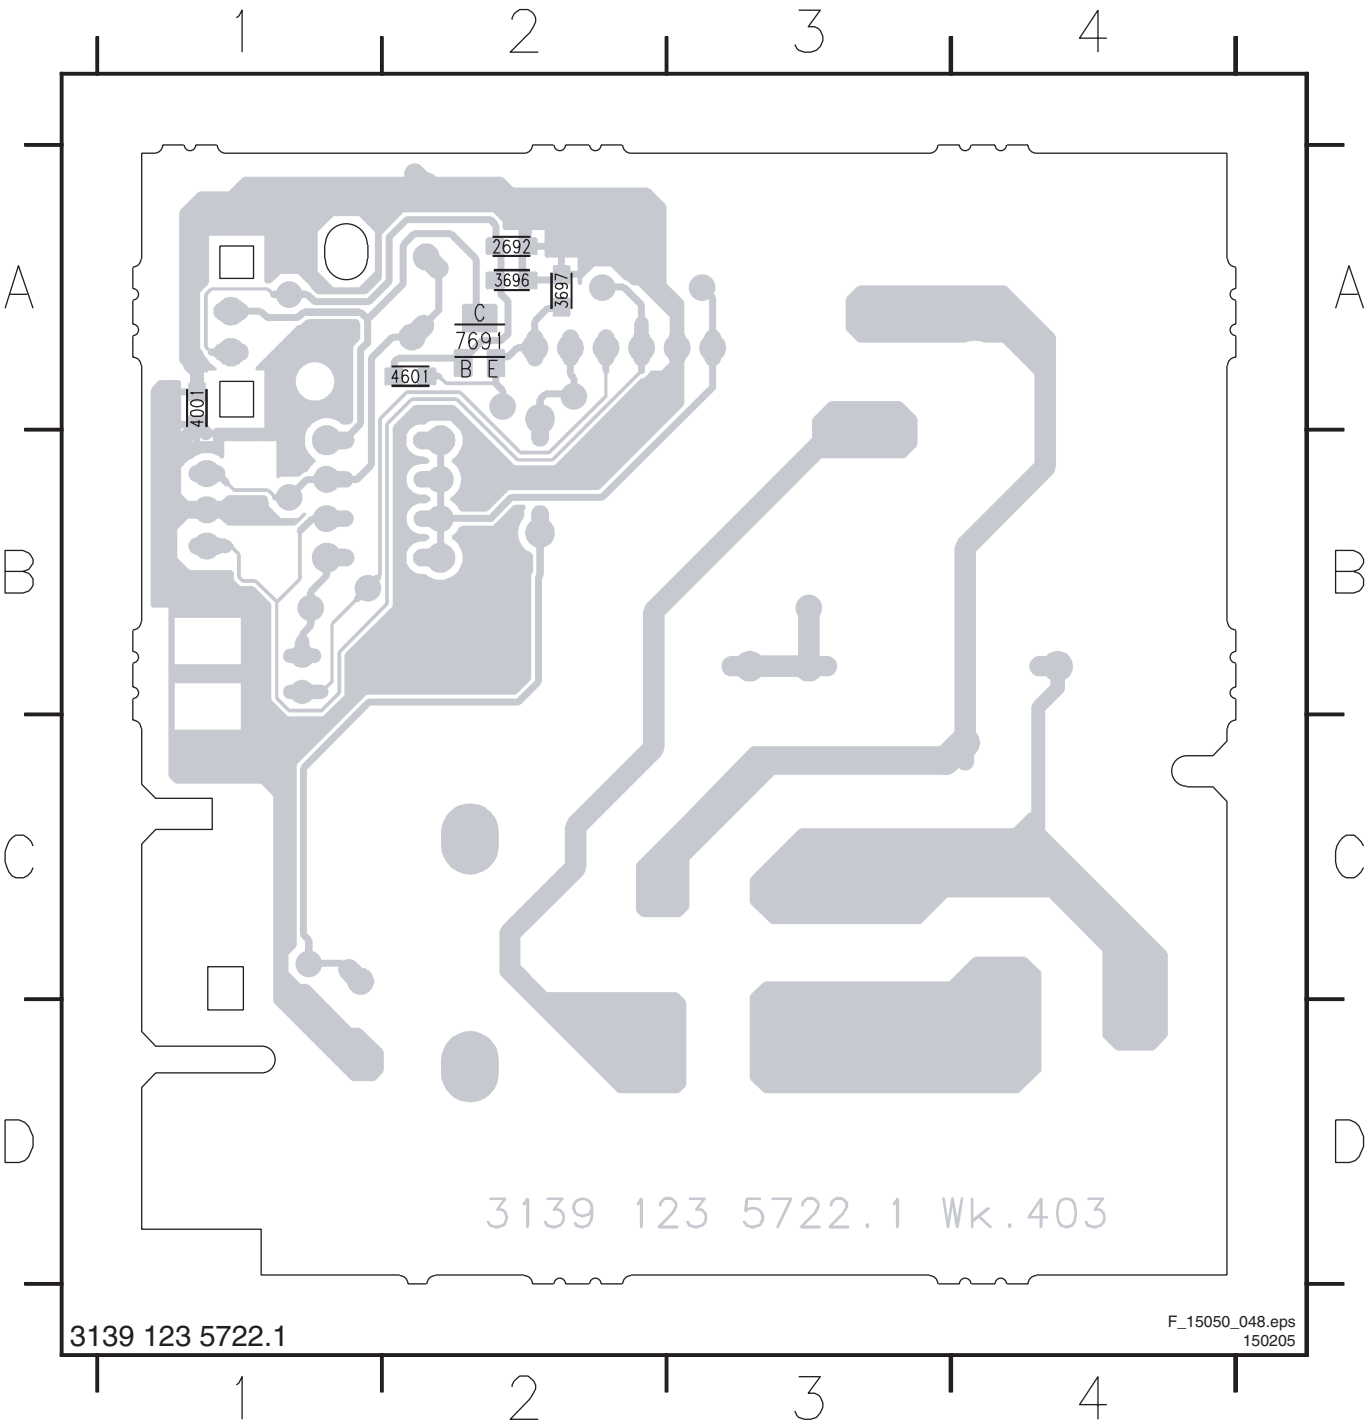

## Deflection Controller - ATSC

## K1 DEFLECTION CONTROLLER - ATSC

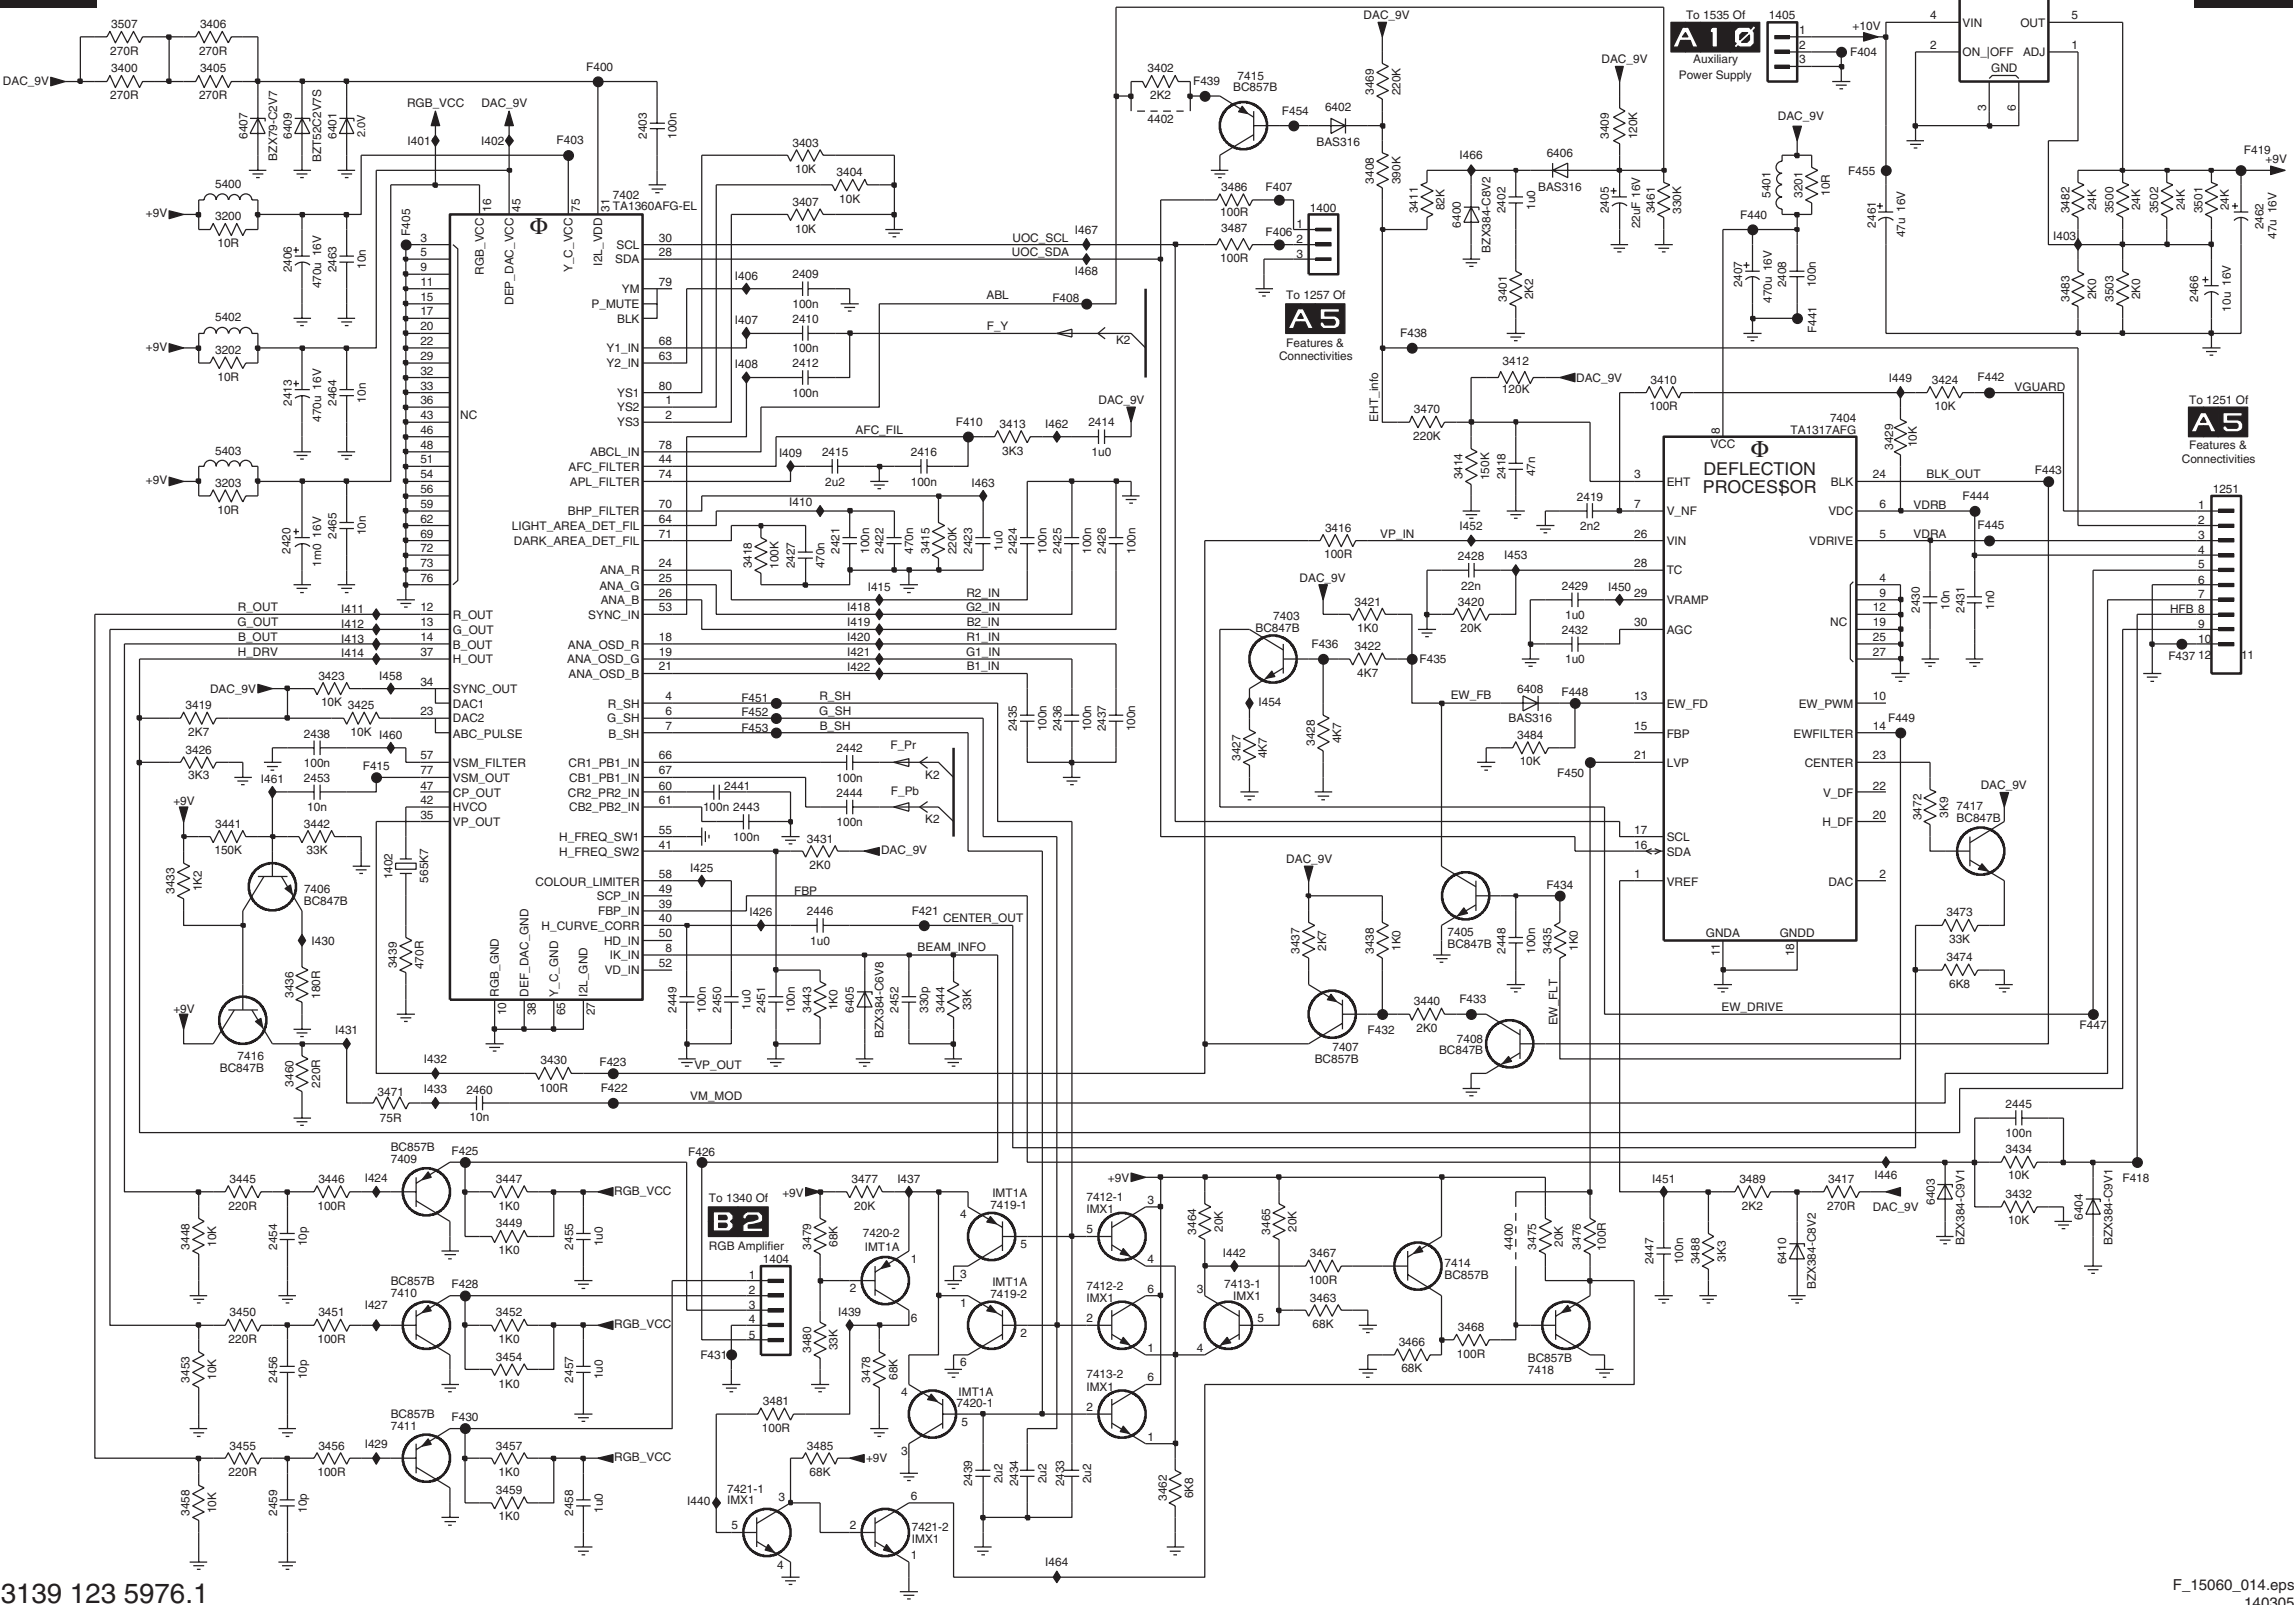

3139 123 5976.1

F\_15060\_014.eps  
140305


1251 C11	3425 D2	7410 F2	I452 C8
1400 A7	3426 D1	7411 G2	I453 C8
1402 D4	3427 D6	7412-1 F6	I454 D7
1404 F4	3428 D7	7412-2 F6	I458 C2
1405 A9	3429 B10	7413-1 F7	I460 D2
2402 A8	3430 E3	7413-2 G6	I461 D2
2403 A4	3431 D4	7414 F7	I462 B6
2405 A8	3432 F10	7415 A7	I463 C5
2406 A2	3433 D1	7416 E2	I464 G6
2407 B9	3434 F10	7417 D10	I466 A8
2408 B9	3435 E8	7418 G8	I467 A6
2409 B4	3436 E2	7419-1 F5	I468 B6
2410 B4	3437 E7	7419-2 F5	
2412 B4	3438 E7	7420-1 G5	
2413 B2	3439 E2	7420-2 F5	
2414 B6	3440 E7	7421-1 G4	
2415 B4	3441 D2	7421-2 G5	
2416 B5	3442 D2	7423 A10	
2418 B8	3443 E4	F400 A3	
2419 C8	3444 E5	F403 A3	
2420 C2	3445 F2	F404 A9	
2421 C5	3446 F2	F405 A2	
2422 C5	3447 F3	F406 A7	
2423 C5	3448 F1	F407 A7	
2424 C5	3449 F3	F408 B6	
2425 C6	3450 G2	F410 B5	
2426 C6	3451 G2	F415 D2	
2427 C4	3452 G3	F418 F11	
2428 C8	3453 G1	F419 A11	
2429 C8	3454 G3	F421 E5	
2430 C10	3455 G2	F422 E3	
2431 C10	3456 G2	F423 E3	
2432 C8	3457 G3	F425 F3	
2433 G6	3458 G1	F426 F4	
2434 G5	3459 G3	F428 F3	
2435 D5	3460 E2	F430 G3	
2436 D6	3461 A8	F431 G4	
2437 D6	3462 G6	F432 E7	
2438 D2	3463 F7	F433 E8	
2439 G5	3464 F6	F434 D8	
2441 D4	3465 F7	F435 C7	
2442 D5	3466 G7	F436 C7	
2443 D4	3467 F7	F437 C11	
2444 D5	3468 G8	F438 B7	
2445 F10	3469 A7	F439 A6	
2446 E4	3470 B7	F440 A9	
2447 F8	3471 E2	F441 B9	
2448 E8	3472 D10	F442 B10	
2449 E4	3473 E10	F443 B10	
2450 E4	3474 E10	F444 C10	
2451 E4	3475 F8	F445 C10	
2452 E5	3476 F8	F447 E11	
2453 D2	3477 F5	F448 D8	
2454 F2	3478 G5	F449 D10	
2455 F3	3479 F4	F450 D8	
2456 G2	3480 G4	F451 D4	
2457 G3	3481 G4	F452 D4	
2458 G3	3482 A10	F453 D4	
2459 G2	3483 B10	F454 A7	
2460 E3	3484 D8	F455 A9	
2461 A10	3485 G4	I401 A2	
2462 A11	3486 A6	I402 A3	
2463 A2	3487 A6	I403 A10	
2464 B2	3488 F9	I406 B4	
2465 C2	3489 F9	I407 B4	
2466 B11	3500 A11	I408 B4	
3200 A2	3501 A11	I409 B4	
3201 A9	3502 A11	I410 C4	
3202 B2	3503 B11	I411 C2	
3203 C2	3507 A1	I412 C2	
3400 A1	4400 F8	I413 C2	
3401 B8	4402 A6	I414 C2	
3402 A6	5400 A2	I415 C5	
3403 A4	5401 A9	I418 C5	
3404 A5	5402 B2	I419 C5	
3405 A1	5403 B2	I420 C5	
3406 A1	6400 A8	I421 C5	
3407 A4	6401 A2	I422 C5	
3408 A7	6402 A7	I424 F2	
3409 A8	6403 F10	I425 D4	
3410 B8	6404 F11	I426 E4	
3411 A7	6405 E5	I427 F2	
3412 B8	6406 A8	I429 G2	
3413 B5	6407 A2	I430 E2	
3414 B8	6408 D8	I431 E2	
3415 C5	6409 A2	I432 E3	
3416 C7	6410 F9	I433 E3	
3417 F9	7402 A3	I437 F5	
3418 C4	7403 C7	I439 G5	
3419 D1	7404 B9	I440 G4	
3420 C8	7405 E7	I442 F6	
3421 C7	7406 E2	I446 F10	
3422 C7	7407 E7	I449 B10	
3423 C2	7408 E8	I450 C8	
3424 B10	7409 F2	I451 F8	



RGB Buffer- ATSC

K2 RGB BUFFER - ATSC

K2

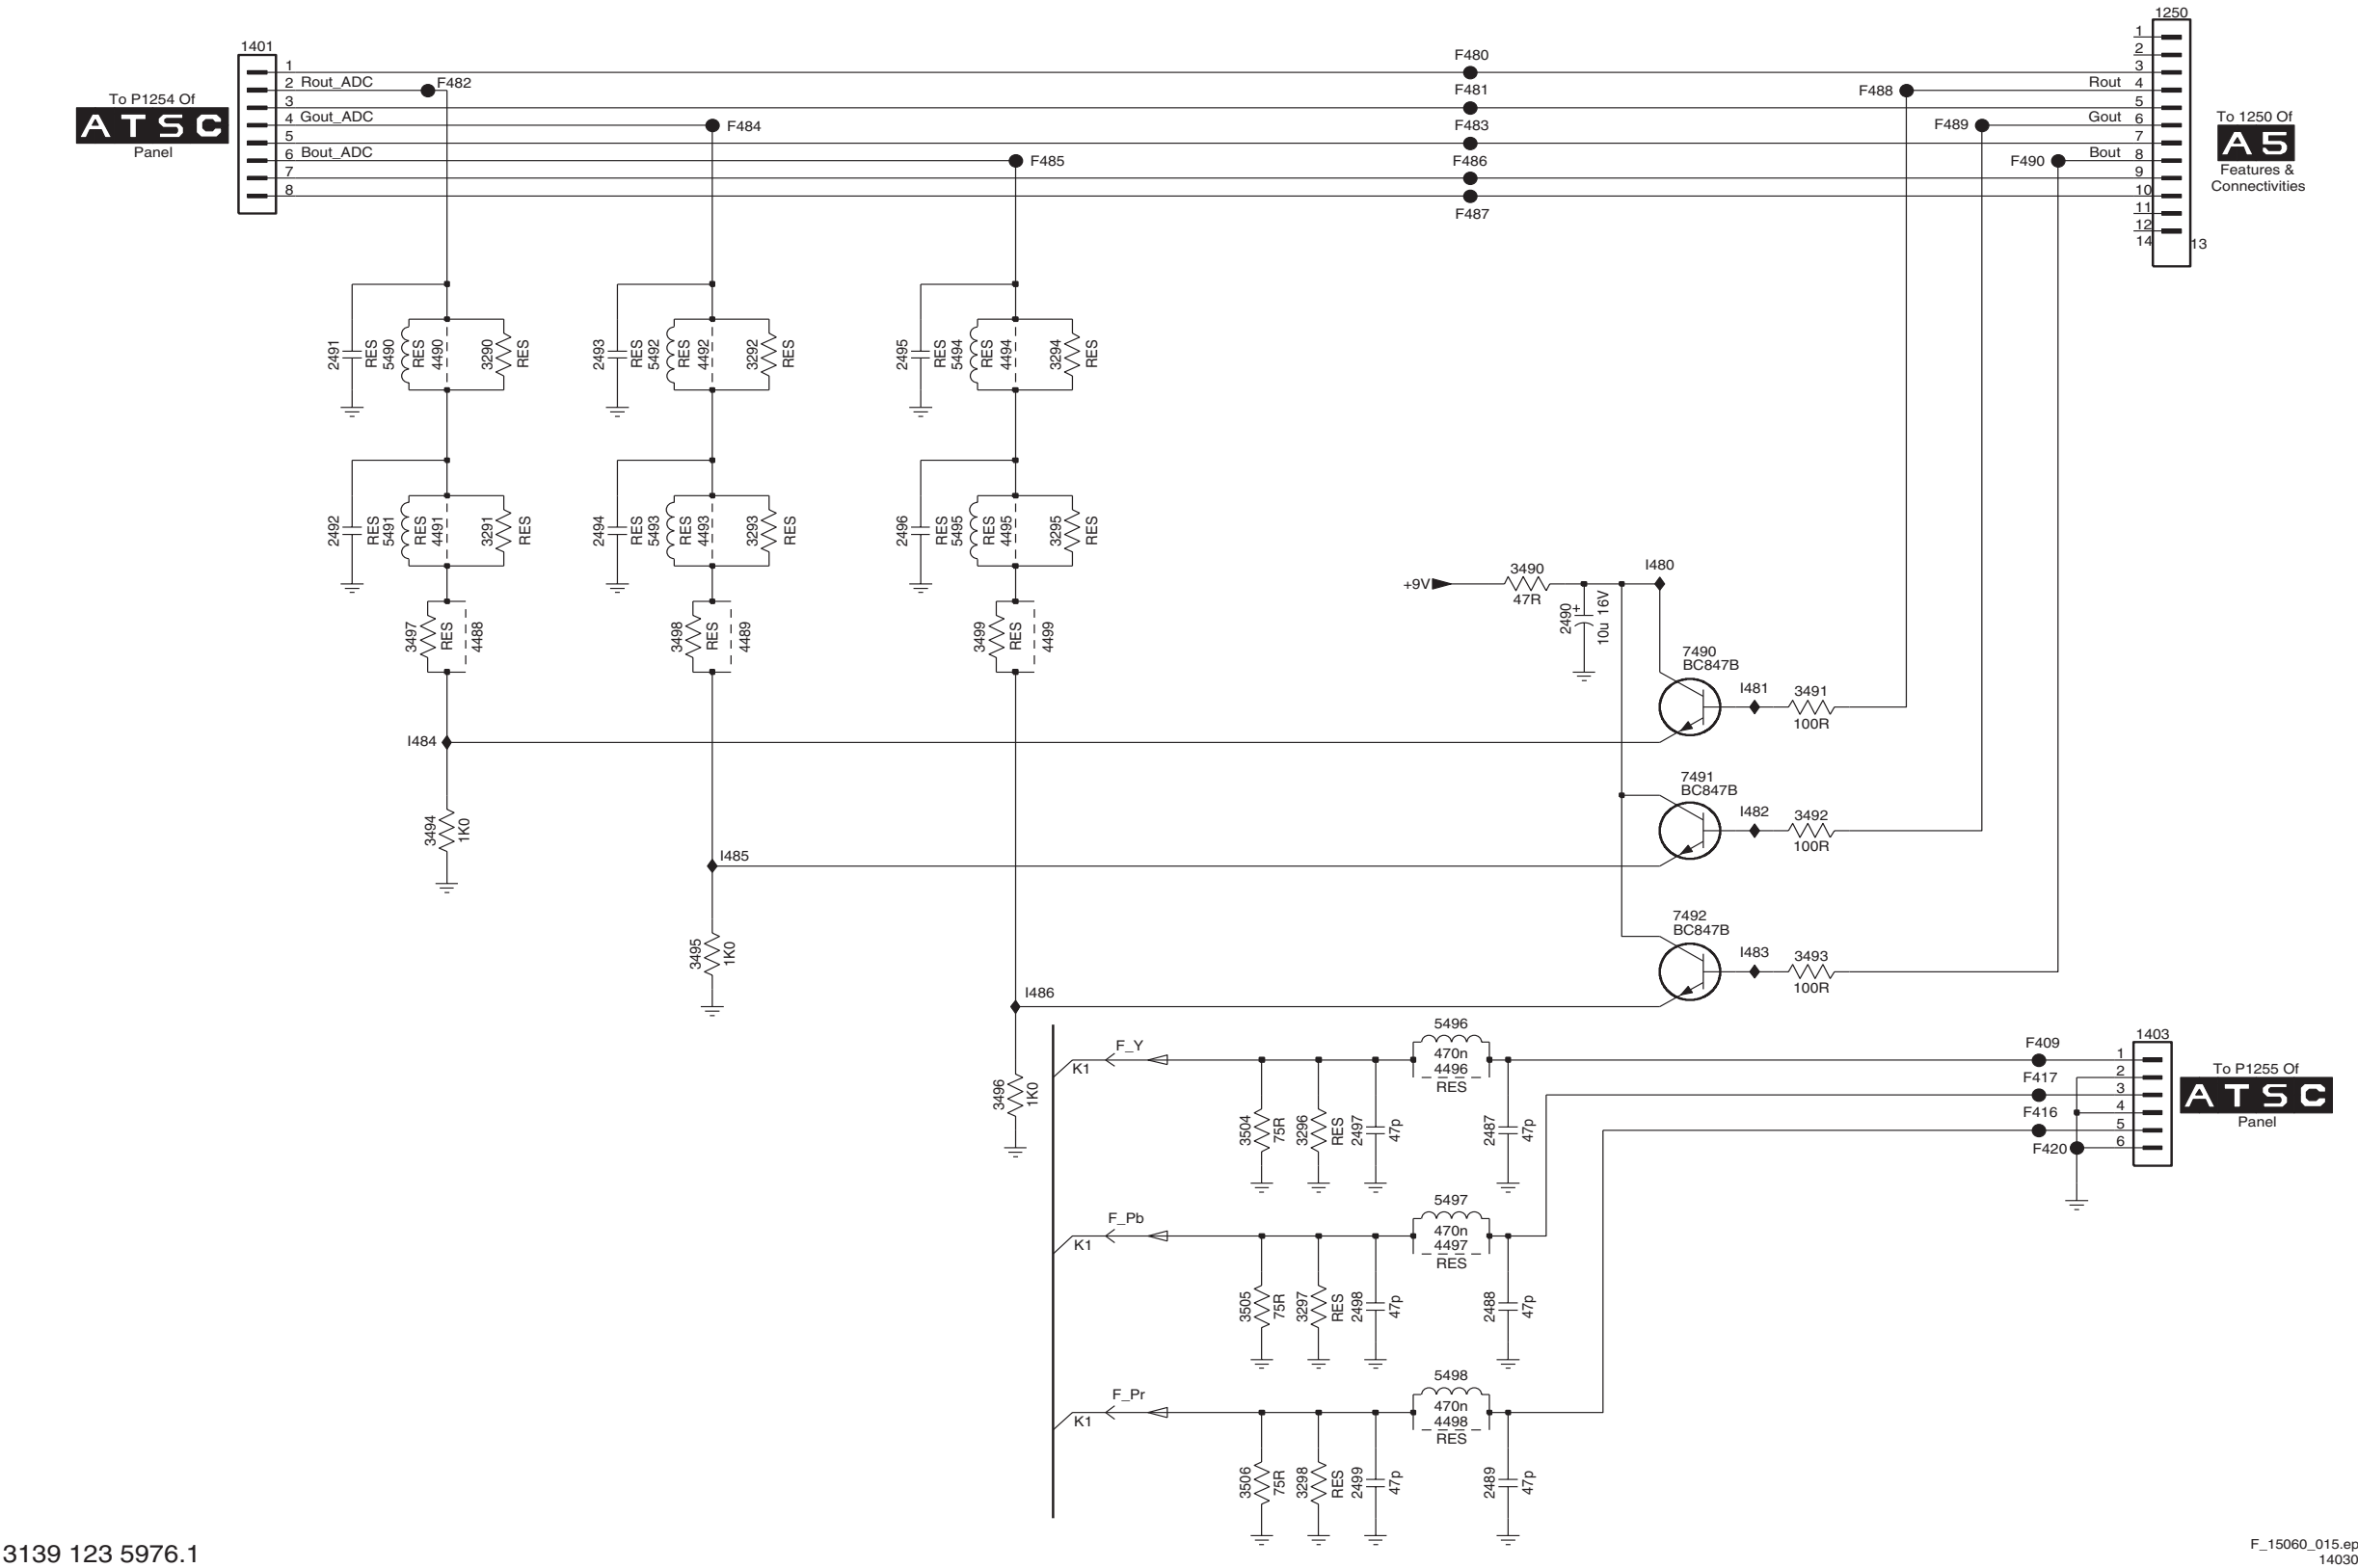


3139 123 5976.1


F\_15060\_015.eps  
140305

- 1250 A8
- 1401 A1
- 1403 E8
- 2487 E6
- 2488 F6
- 2489 F6
- 2490 C6
- 2491 B1
- 2492 C1
- 2493 B2
- 2494 C2
- 2495 B3
- 2496 C3
- 2497 E5
- 2498 F5
- 2499 F5
- 3290 B2
- 3291 C2
- 3292 B3
- 3293 C3
- 3294 B4
- 3295 C4
- 3296 E5
- 3297 F5
- 3298 F5
- 3490 C6
- 3491 C7
- 3492 D7
- 3493 D7
- 3494 D2
- 3495 D3
- 3496 E4
- 3497 C2
- 3498 C3
- 3499 C4
- 3504 E5
- 3505 F5
- 3506 F5
- 4488 C2
- 4489 C3
- 4490 B2
- 4491 C2
- 4492 B3
- 4493 C3
- 4494 B4
- 4495 C4
- 4496 E6
- 4497 F6
- 4498 F6
- 4499 C4
- 5490 B2
- 5491 C2
- 5492 B3
- 5493 C3
- 5494 B4
- 5495 C4
- 5496 E6
- 5497 E6
- 5498 F6
- 7490 C7
- 7491 D7
- 7492 D6
- F409 E8
- F416 E8
- F417 E8
- F420 E8
- F480 A6
- F481 A6
- F482 A2
- F483 A6
- F484 A3
- F485 A4
- F486 A6
- F487 A6
- F488 A7
- F489 A7
- F490 A8
- I480 C6
- I481 C7
- I482 D7
- I483 D7
- I484 D2
- I485 D3
- I486 E4

### Layout Deflection Controller (Top Side)

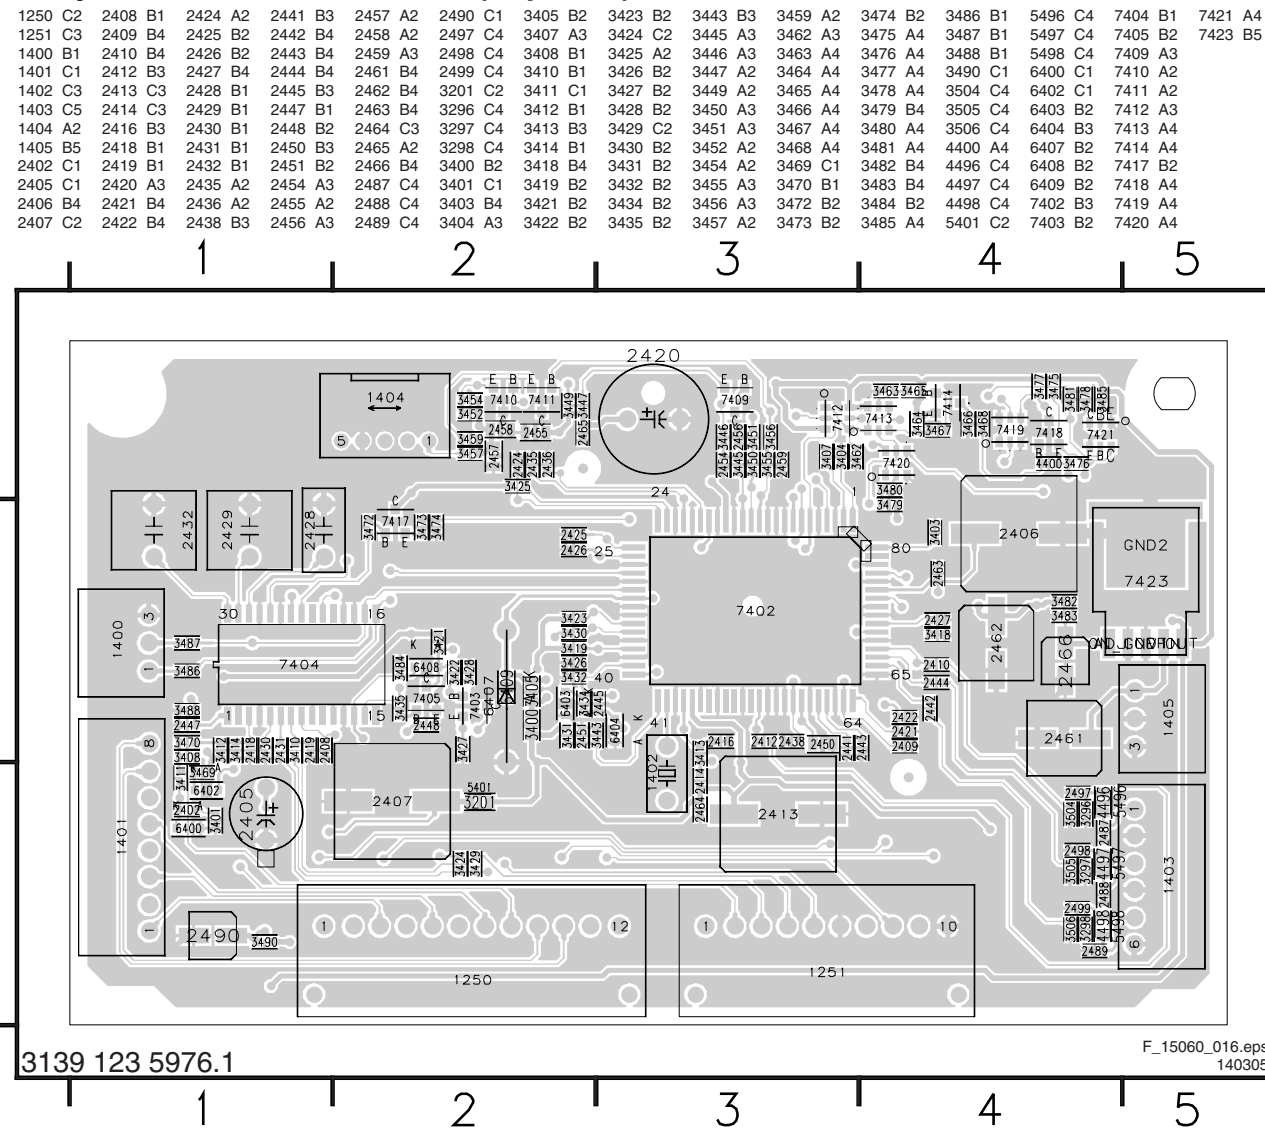

### Layout Deflection Controller (Bottom Side)

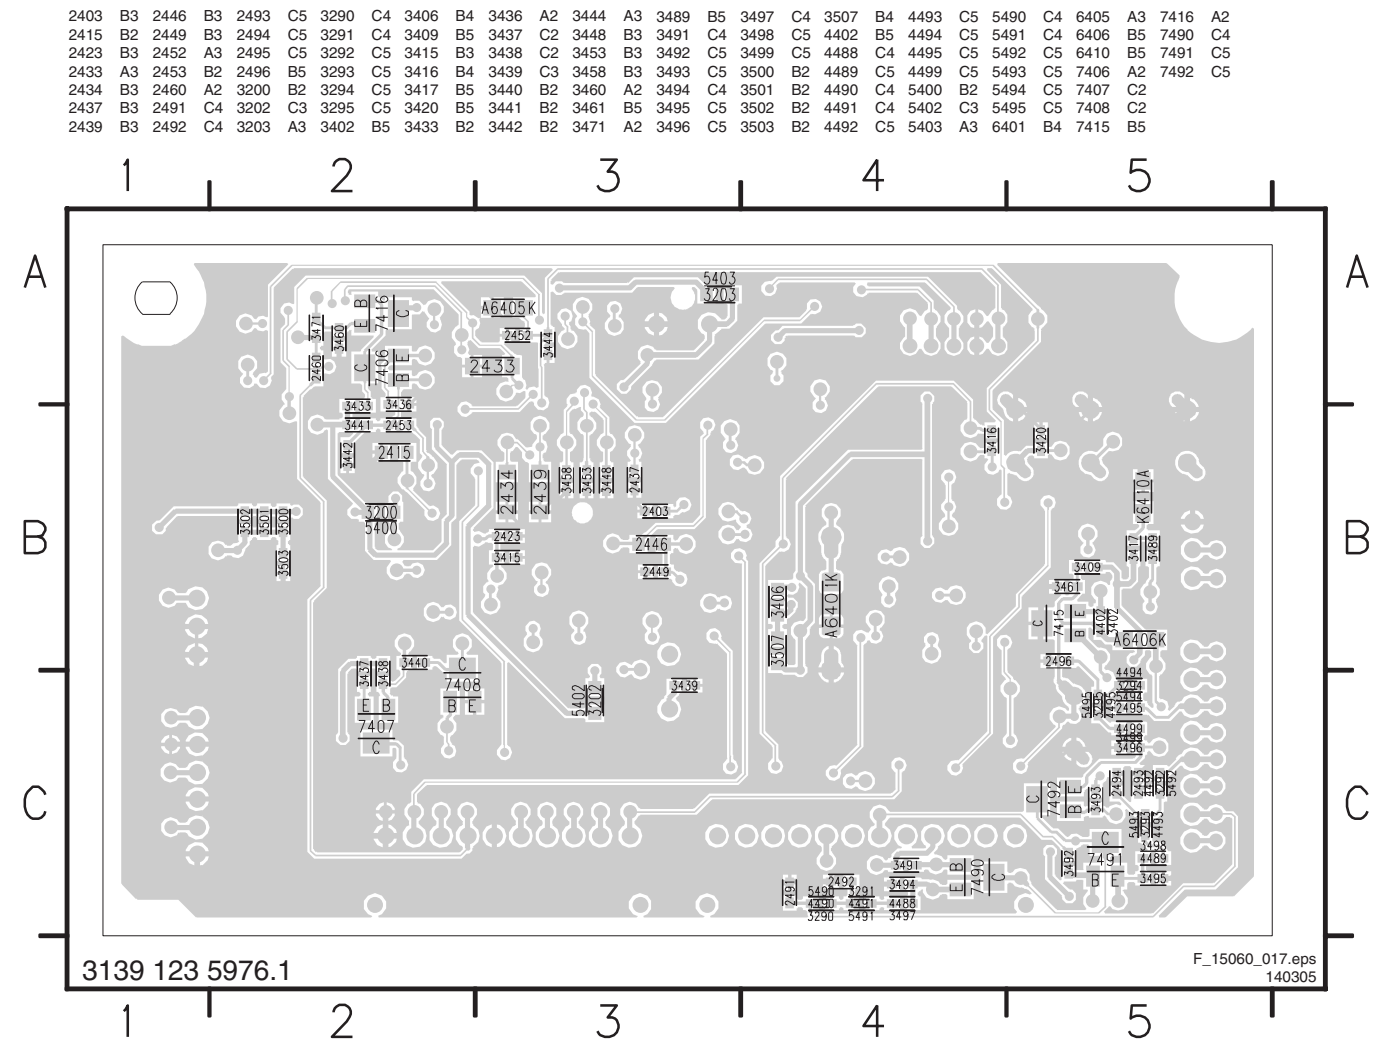

## 8. Alignments

### Index of this chapter:

- 8.1 General Alignment Conditions
- 8.2 Hardware Alignments
- 8.3 Software Alignments and Settings

#### Note:

- The Service Default Mode (SDM) and Service Alignment Mode (SAM) are described in chapter 5 “Service Modes, ...”.
- Menu navigation is done with the CURSOR UP, DOWN, LEFT, or RIGHT keys of the remote control transmitter.

### 8.1 General Alignment Conditions

Perform all electrical adjustments under the following conditions:

- AC voltage and frequency (region dependent):
  - 120 V<sub>ac</sub> / 60 Hz, or
  - 240 V<sub>ac</sub> / 50 Hz.
- Connect the set to the AC power (a.k.a. Mains voltage) via an isolation transformer with a low internal resistance.
- Allow the set to warm up for approximately 20 minutes.
- Measure the voltages and waveforms in relation to chassis ground (with the exception of the voltages on the primary side of the power supply). Never use the cooling fins / plates as ground.
- Test probe:  $R_i > 10 \text{ Mohm}$ ;  $C_i < 2.5 \text{ pF}$ .
- Use an isolated trimmer / screwdriver to perform the alignments.

### 8.2 Hardware Alignments

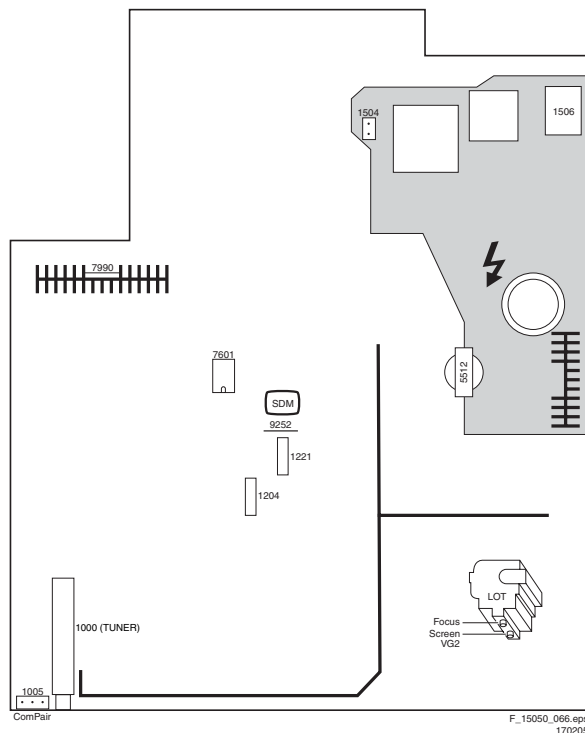


Figure 8-1 Top view family board

#### 8.2.1 Vg2 Adjustment

1. Activate the SAM.
2. Go to the WHITE TONE sub menu.
3. Set the values of NORMAL RED, GREEN and BLUE to “32”.

4. Go, via the MENU key, to the normal user menu and set
5. SATURATION/COLOR to “0”.
6. CONTRAST to “0”.
7. BRIGHTNESS to minimum (OSD just visible).
8. Return to the SAM via the MENU key.
9. Connect the RF output of a pattern generator to the antenna input. Test pattern is a 'black' picture (blank screen on CRT without any OSD info) with a signal strength of 1 V<sub>pp</sub>.
10. Set the channel of the oscilloscope to 50 V/div and the time base to 0.2 ms (external triggering on the vertical pulse). Ground the scope at the CRT panel and connect a 10:1 probe to one of the cathodes of the picture tube socket.
11. Measure the cut off pulse during first full line after the frame blanking (see figure “V<sub>cutoff</sub> waveform”). You will see two pulses, one being the “cut off” pulse and the other being the “white drive” pulse. Choose the one with the lowest value; this is the “cut off” pulse.
12. Select the cathode with the highest V<sub>dc</sub> value for the alignment. Adjust the V<sub>cutoff</sub> of this gun with the SCREEN potentiometer (see figure “Top view family board”) on the LOT to 160 V<sub>dc</sub>, except for the 25/28BLD picture tube (Black Line Display, for EU only); this tube must be aligned to 140 V<sub>dc</sub>.
13. Restore BRIGHTNESS and CONTRAST to normal (= 31).

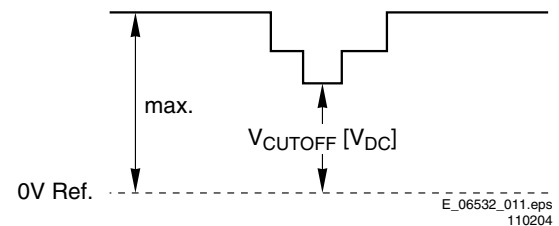


Figure 8-2 V<sub>cutoff</sub> waveform

#### 8.2.2 Focusing

1. Tune the set to a circle or crosshatch test pattern (use an external video pattern generator).
2. Choose picture mode NATURAL with the SMART PICTURE button on the remote control transmitter.
3. Adjust the FOCUS potentiometer (see figure “Top view family board”) until the vertical lines at 2/3 from east and west, at the height of the centerline, are of minimum width without visible haze.

## 8.3 Software Alignments and Settings

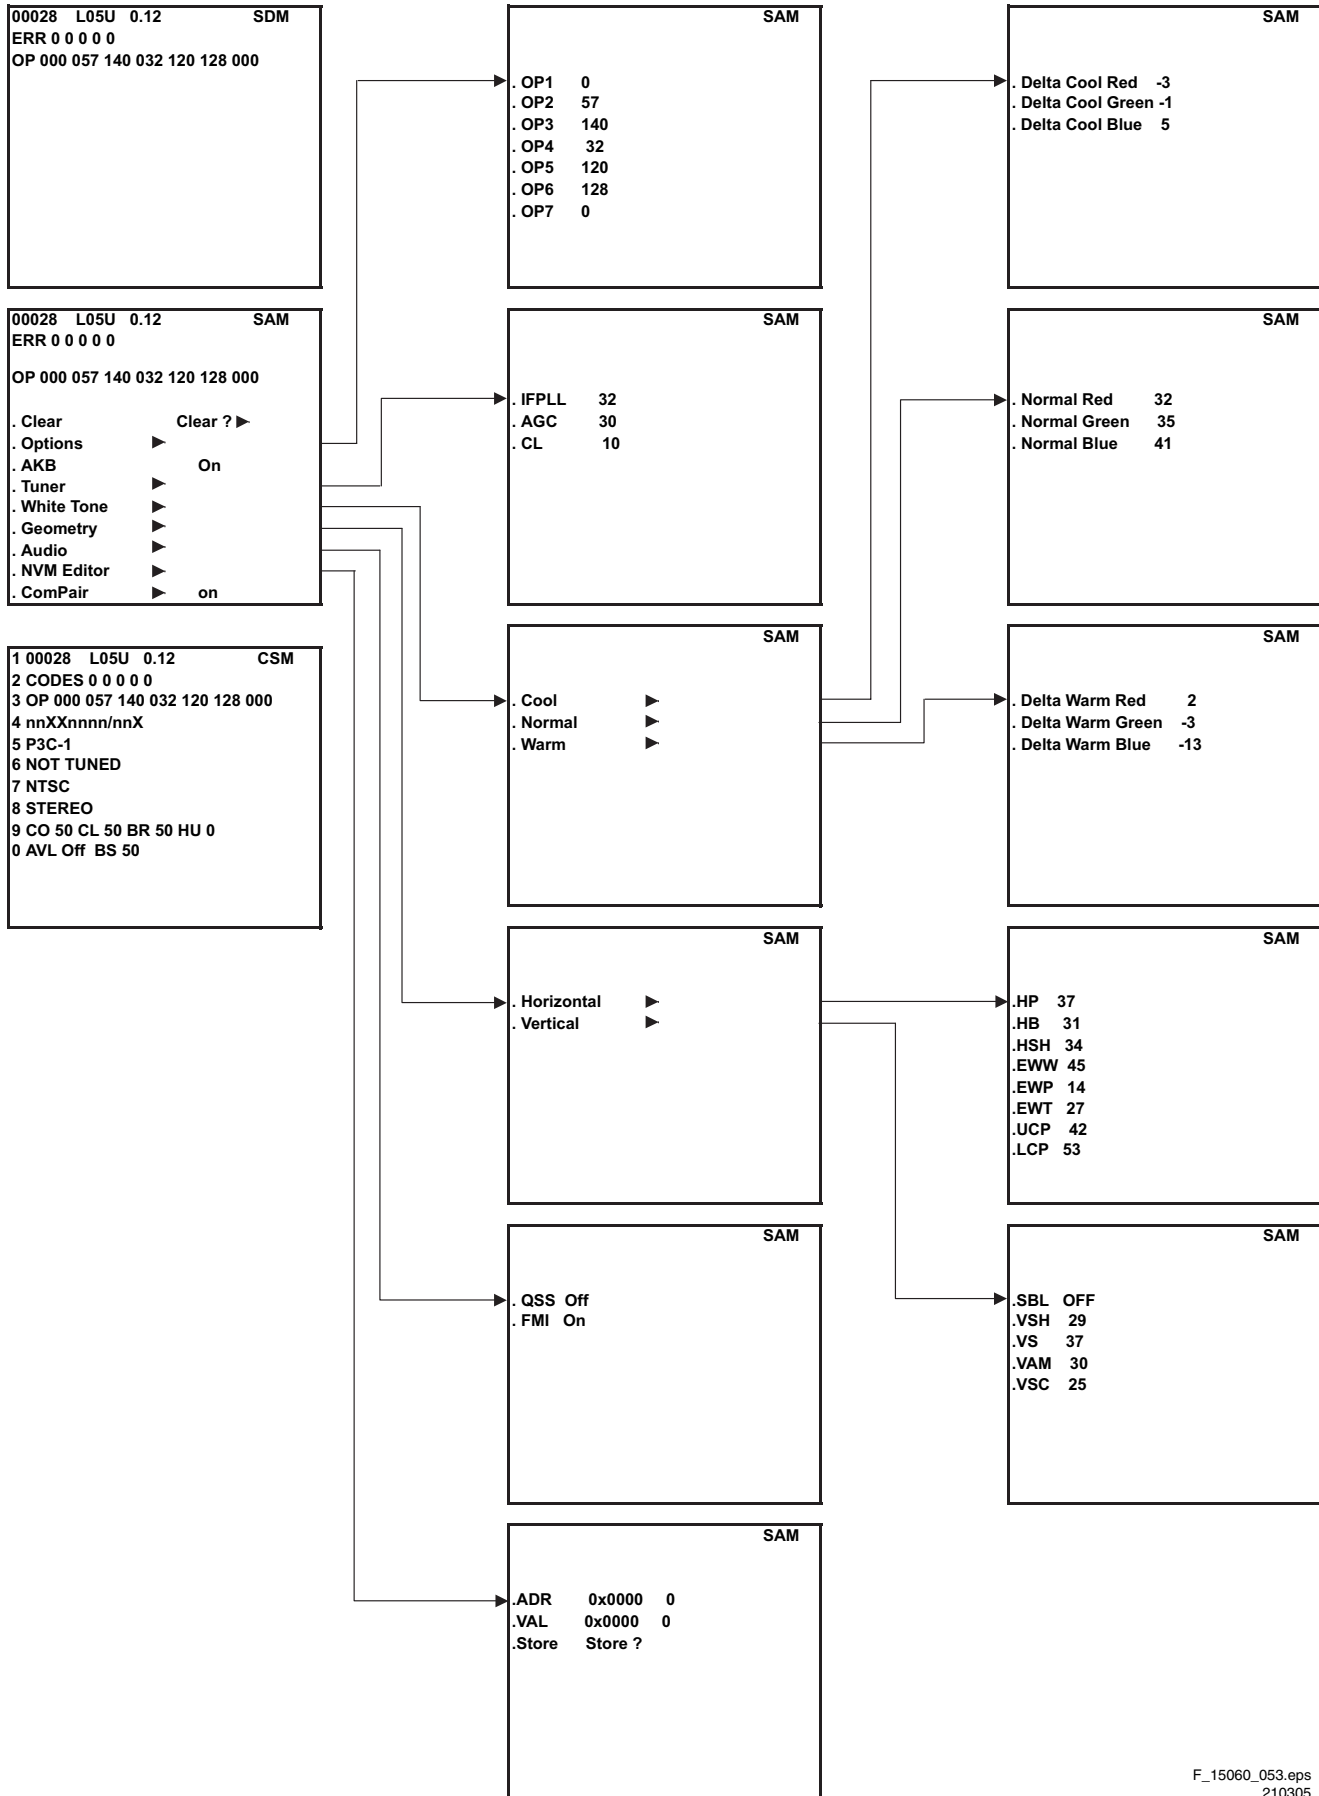


Figure 8-3 Service Mode overview

Enter the Service Alignment Mode (see also chapter 5 “Service Modes, ....”). The SAM menu will now appear on the screen.

Select one of the following alignments:

- Options
- Tuner
- White Tone
- Geometry
- Audio

### 8.3.1 Options

Options are used to control the presence/absence of certain features and hardware.

#### How to change an Option Byte

An Option Byte represents a number of different options. Changing these bytes directly, makes it possible to set all options very fast. All options are controlled via seven option bytes. Select the option byte (OP1.. OP7) with the MENU UP/DOWN keys, and enter the new value.

Leaving the OPTION submenu saves the changes in the Option Byte settings. Some changes will only take effect after the set has been switched “off” and “on” with the AC power switch (cold start).

#### How to calculate the value of an Option Byte

- Calculate an Option Byte value (OP1 .. OP7) in the following way:
- Check the status of the single option bits (OB): are they enabled (1) or disabled (0).
- When an option bit is enabled (1) it represents a certain value (see column “Bit value” in table below). When an option bit is disabled, its value is 0.
- The total value of an Option Byte (decimal) is formed by the sum of its eight option bits. The factory values are printed on a sticker on the CRT (depends on region).

**Table 8-1 Option Byte calculation**

Bit (value)	OP1	OP2	OP3	OP4	OP5	OP6	OP7
0 (1)	OB10	OB20	OB30	OB40	OB50	OB60	OB70
1 (2)	OB11	OB21	OB31	OB41	OB51	OB61	OB71
2 (4)	OB12	OB22	OB32	OB42	OB52	OB62	OB72
3 (8)	OB13	OB23	OB33	OB43	OB53	OB63	OB73
4 (16)	OB14	OB24	OB34	OB44	OB54	OB64	OB74
5 (32)	OB15	OB25	OB35	OB45	OB55	OB65	OB75
6 (64)	OB16	OB26	OB36	OB46	OB56	OB66	OB76
7 (128)	OB17	OB27	OB37	OB47	OB57	OB67	OB77
Total:	Sum	Sum	Sum	Sum	Sum	Sum	Sum

#### Option Bit Assignment

Following are the option bit assignments for all software clusters.

**Table 8-2 Option code overview per model (OP0 - OP5)**

Option Bit	Option Name	26PW21718	30PW21709	27PT21714	32PT21705
OP0					
7	Philips Tuner	1	1	1	1
6	Not Used	0	0	0	0
5	Not Used	0	0	0	0
4	Not Used	0	0	0	0
3	Not Used	0	0	0	0
2	Not Used	0	0	0	0
1	Not Used	0	0	0	0
0	Not Used	0	0	0	0
	OP1 value (dec)	128	128	128	128
	OP1 value (hex)	80	80	80	80
OP1					
7	Not Used	0	0	0	0
6	Green_UI	0	0	0	0
5	Not Used	0	0	0	0
4	Not Used	0	0	0	0
3	Tilt	1	1	0	1
2	Fine_Tuning	0	0	0	0
1	Not Used	0	0	0	0
0	Not Used	0	0	0	0
	OP2 value (dec)	8	8	0	8
	OP2 value (hex)	08	08	00	08
OP2					
7	Not Used	0	0	0	0
6	ATL_PIP	1	1	1	1
5	Not Used	0	0	0	0
4	Not Used	0	0	0	0
3	Virtual Dolby	1	1	1	1
2	Wide Screen	1	1	0	0
1	Not Used	0	0	0	0
0	Not Used	0	0	0	0
	OP3 value (dec)	76	76	72	72
	OP3 value (hex)	4C	4C	48	48
OP3	Not Used				
	OP4 value (dec)	0	0	0	0
	OP4 value (hex)	00	00	00	00
OP4					
7	AV1	1	1	1	1
6	AV2	1	1	1	1
5	AV3	1	1	1	1
4	CVI	1	1	1	1
3	SVHS2	1	1	1	1
2	SVHS3	1	1	1	1
1	HDMI	1	1	1	1
0	YPbPr	1	1	1	1
	OP5 value (dec)	255	255	255	255
	OP5 value (hex)	FF	FF	FF	FF
OP5					
7	QUADRA_SURF	0	0	0	0
6	SMART_SURF	0	0	0	0
5	Not Used	0	0	0	0
4	Comb filter	1	1	1	1
3	Active control	1	1	1	1
2	Not Used	0	0	0	0
1	Not Used	0	0	0	0
0	Not Used	0	0	0	0
	OP6 value (dec)	24	24	24	24
	OP6 value (hex)	18	18	18	18

Table 8-3 Option code overview per model (OP6)

Option Bit	Option Name	26PW21718	30PW21709	27PT21714	32PT21705
OP6					
7	Not Used	0	0	0	0
6	Not Used	0	0	0	0
5	Not Used	0	0	0	0
4	Not Used	0	0	0	0
3	Digital_Module_Reset_Control	1	1	1	1
2	Not Used	0	0	0	0
1	Not Used	0	0	0	0
0	Not Used	0	0	0	0
	OP7 value (dec)	0	0	0	0

**Option bit definition***Option Byte 1 (OP1)*

- **OB17:** PHILIPS TUNER
  - 0 : ALPS / MASCO compatible tuner is in use.
  - 1 : Philips compatible tuner is in use.

*Option Byte 2 (OP2)*

- **OB26:** GREEN UI
  - 0 : Green UI is disabled (for Philips brand).
  - 1 : Green UI is enabled (for Magnavox brand).
  - Note: only for NAFTA region.
- **OB23:** TILT
  - 0 : Rotate Picture is disabled or not applicable.
  - 1 : Rotate Picture is enabled.
- **OB22:** FINE TUNING
  - 0 : Fine Tuning for Channel Offset is disabled or not applicable.
  - 1 : Fine Tuning for Channel Offset is enabled.

*Option Byte 3 (OP3)*

- **OB36:** ATI\_PIP
  - 0 : PIP feature is disabled
  - 1 : PIP feature is enabled
- **OB33:** VIRTUAL DOLBY
  - 0 : Virtual Dolby is not applicable.
  - 1 : Virtual Dolby is applicable.
- **OB32:** WIDE SCREEN
  - 0 : Software is used for 4:3 sets or not applicable.
  - 1 : Software is used for 16:9 sets.

*Option Byte 4 (OP4)*

This option byte is not used.

*Option Byte 5 (OP5)*

- **OB57:** AV1
  - 0 : AV1 source is not present.
  - 1 : AV1 source is present.
- **OB56:** AV2
  - 0 : AV2 source is not present.
  - 1 : AV2 source is present.
  - Note : For EU, when AV2="1", both EXT2 and SVHS2 should be included in the OSD loop.
- **OB55:** AV3
  - 0 : Side/Front AV3 source is not present.
  - 1 : Side/Front AV3 source is present.
- **OB54:** CVI
  - 0 : CVI source is not available.
  - 1 : CVI source is available.
- **OB53:** SVHS2
  - 0 : SVHS2 source is not available.
  - 1 : SVHS2 source is available.
  - Note : This option bit is not applicable for EU.
- **OB52:** SVHS3
  - 0 : SVHS3 source is not available.
  - 1 : SVHS3 source is available.

– Note : This option bit is not applicable for EU.

- **OB51:** HDMI
  - 0 : HDMI source is not present.
  - 1 : HDMI source is present.
- **OB50:** YPbPr
  - 0 : YPbPr source is not present.
  - 1 : YPbPr source is present.

*Option Byte 6 (OP6)*

- **OB67:** QUADRA\_SURF
  - 0 : Quadra Surf feature is disabled or not applicable.
  - 1 : Quadra Surf feature is enabled.
- **OB66:** OP\_SMART\_SURF
  - 0 : Smart Surf key is not used on remote control.
  - 1 : Smart Surf key is used on remote control.
- **OB64:** COMBFILTER
  - 0 : 3D-combfilter is not present.
  - 1 : 3D-combfilter is present.
- **OB63:** ACTIVE CONTROL
  - 0 : Active Control feature is disabled or not applicable.
  - 1 : Active Control feature is enabled.

**Note:** Quadra Surf option is only applicable for Philips branded sets.

*Option Byte 7 (OP7)*

- **OB73:** Digital Module Reset Control
  - 0 : Reset control is not used.
  - 1 : Reset control is used.

**8.3.2 Tuner**

**Note:** Described alignments are only necessary when the NVM (item 7601) is replaced.

**IF PLL**

This adjustment is auto-aligned. Therefore, no action is required.

**AGC (AGC take over point)**

1. Set the external pattern generator to a color bar video signal and connect the RF output to aerial input. Set amplitude to 10 mV and set frequency to 61.25 MHz (channel 3).
2. Connect a DC multimeter to pin 1 of the tuner (item 1000 on the main panel).
3. Activate the SAM.
4. Go to the TUNER sub menu.
5. Select AGC with the UP/DOWN cursor keys.
6. Adjust the AGC-value with the LEFT/ RIGHT cursor keys until the voltage at pin 1 of the tuner lies between 3.8 and 2.3 V (default value is "20").
7. Switch the set to STANDBY, in order to store the alignments.

**CL (Cathode drive level)**

Always set to "5".

**8.3.3 White Tone**

In the WHITE TONE sub menu, the values of the black cut off level can be adjusted. Normally, no alignment is needed, and you can use the given default values.

The color temperature mode (NORMAL, COOL and WARM) and the color (R, G, and B) can be selected with the UP/DOWN RIGHT/LEFT cursor keys. The value can be changed with the LEFT/RIGHT cursor keys. First, select the values for the NORMAL color temperature. Then select the values for the COOL and WARM mode. After alignment, switch the set to STANDBY, in order to store the alignments.



### 8.3.4 Geometry

The geometry alignments menu contains several items to align the set, in order to obtain correct picture geometry.

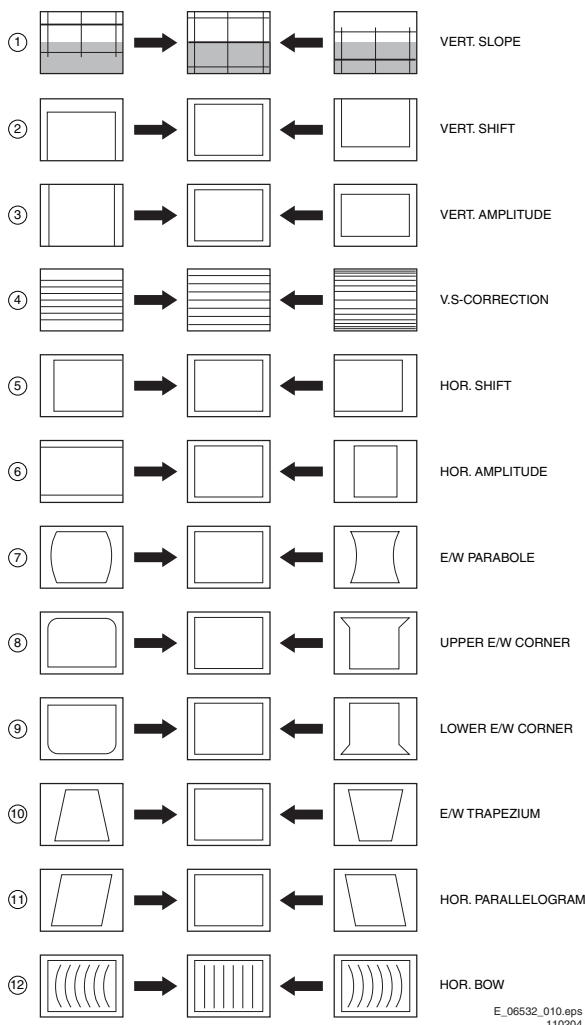


Figure 8-4 Geometry alignments

1. Connect an **external** video pattern generator to the aerial input of the TV-set and input a crosshatch test pattern. Set the generator amplitude to at least 1 mV and set frequency to 61.25 MHz (channel 3).
2. Set 'Smart Picture' to NATURAL (or MOVIES).
3. Activate the SAM menu (see chapter 5 "Service Modes, ...").
4. Go to the GEOMETRY sub menu.
5. Choose HORIZONTAL or VERTICAL alignment.

Now the following alignments can be performed:

#### Horizontal

- **Horizontal Parallelogram (HP)**. Align straight vertical lines in the top and the bottom; vertical rotation around the center.
- **Horizontal Bow (HB)**. Align straight horizontal lines in the top and the bottom; horizontal rotation around the center.
- **Horizontal Shift (HSH)**. Align the horizontal center of the picture to the horizontal center of the CRT.
- **East West Width (EWW)**. Align the picture width until the complete test pattern is visible.
- **East West Parabola (EWP)**. Align straight vertical lines at the sides of the screen.
- **East West Trapezium (EWT)**. Align straight vertical lines in the middle of the screen.
- **Upper Corner Parabola (UCP)**. Align straight vertical lines in the upper corners of the screen.

- **Lower Corner Parabola (LCP)**. Align straight vertical lines in the lower corners of the screen.
- **East West S correction (EWS)**. Default value is "16".
- **East West Corner (EWC)**. Align straight vertical lines at the top and bottom of the sides.

#### Vertical

- **Service blanking (SBL)**. Switch the blanking of the lower half of the screen "on" or "off" (to be used in combination with the vertical slope alignment).
- **Vertical Shift (VSH)**. Align the vertical centering so that the test pattern is located vertically in the middle. Repeat the 'vertical amplitude' alignment if necessary.
- **Vertical Amplitude (VAM)**. Align the vertical amplitude so that the complete test pattern is visible.
- **Vertical S-Correction (VSC)**. Align the vertical linearity, meaning that vertical intervals of a grid pattern must be equal over the entire screen height.
- **Vertical Zoom (VX, if present)**. The vertical zoom is added in for the purpose of development. It helps the designer to set proper values for the movie expand or movie(16x9) compress. Default value is "25".
- **Vertical Symmetry (VSL)**. Fine tune the vertical centering. Only perform this alignment if it is strictly necessary.
- **Vertical Linearity (VL)**. Align the top half and bottom half of the picture to be of equal height.

### 8.3.5 Audio

No alignments are needed for the audio sub menu. Use the given default values.

#### FMI (Freq. Modulation Intercarrier)

- For NICAM/2CS sound system (EU/AP, except for APNTSC): set to "On".
- For AV-Stereo sound system (sets without NICAM): set to "Off".
- For dBx/non-dBx sound systems: set to "On".

## 9. Circuit Descriptions, List of Abbreviations, and IC Data Sheets

### Index of this chapter:

- 9.1 Introduction
- 9.2 Power Supply
- 9.3 Video Processing
- 9.4 Audio Processing
- 9.5 Deflection Controller
- 9.6 Abbreviation List
- 9.7 IC Data Sheets

### Notes:

- Only **new** circuits compared to the L05U chassis are described in this chapter. For the other circuit descriptions, see the manual of the L05U chassis.
- Because the service offering for the ATSC part is "Repair by supplier" this part is not described in this chapter.
- Figures can deviate slightly from the actual situation, due to different set executions.
- For a good understanding of the following circuit descriptions, please use the diagrams in sections "Block Diagrams, ..." and/or "Electrical Diagrams". Where necessary, you will find a separate drawing for clarification.

### 9.1 Introduction

The L05 ATSC chassis is designed for the model year 2005. This set has a fully integrated ATSC as well as a NTSC tuning system. This set will come in a 26 and 30 inch screen sizes in a 16x9 format. There will be a 32 inch version using a 4x3 ratio screen.

The set consists of a Main panel, CRT board, Side I/O panel, ATSC module, and Deflection controller panel. The panels consists primarily of conventional components with some surface mounted devices.

The The functions for the 1fH video processing is performed in one IC (TDA1200xx, IC7200), the Hercules chip. This IC is located on the solder side of the Main panel. NTSC tuning and switching for AV1, AV2, and CVI inputs are performed on the Main panel. The CVI input located on the Main panel are for 1fH (480i) signals only.

The ATSC Tuner and 1fH to 2fH conversion is performed on the ATSC module. Component inputs for the CVI HD and HDMI are located on the ATSC module. This input can accept 480i, 480p, 1080i, or 720p signals. The ATSC module converts whatever signal is applied to a 1080i format. The ATSC tuning system can tune all channels in the VHF, UHF, and Cable bands.

The Microprocessor communicates with the memory IC located on the Main panel, Keyboard, Remote Receiver, NTSC Tuner, Deflection Controller panel, and ATSC module. The Memory IC retains the settings for favorite stations, customer-preferred setting, and circuit settings. The circuit settings can be accessed by the service technician via the Service Alignment Mode.

On-screen graphics and Closed Caption decoding are performed in IC 7200 for NTSC. IC7200 is located on the Main signal panel. On-screen graphics and Closed Caption for the ATSC channels are performed in the ATSC module..

### 9.2 Power Supply

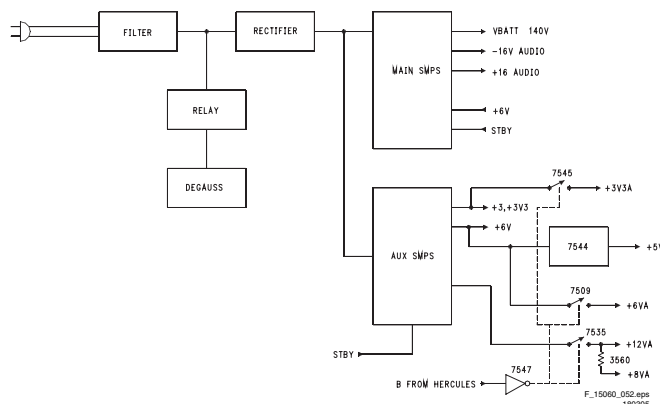


Figure 9-1 Power supply block diagram

The supply is divided into two sections, the Auxiliary and Main section, both located on the family board. A single filter and rectifier circuit supplies both sections. The Auxiliary supply operates in a low power mode when the load is reduced. In the standby mode, the 3.3 and 6 volt supplies are operating. The 3.3 volt supply provides power to the processor section of the Hercules. The 6 volt supply provides power to the IR receiver. The Main supply is switched Off via the Standby line.

When the set is turned On, the "B" line from the Hercules processor goes High switching 7547 which turns 7535, 7509, and 7545 On. The +3V3A, +6VA, +12VA, and +8VA supplies are then switched On. The load placed on the Aux Power supply will cause it to switch to the full power mode. At the same time, the STBY line switches Low turning the Main SMPS supply On. The supply produces a +6 volt, +140 volt, -16 volt, and +16 volt supplies.

The +Vaudio (+16 volt) supply switches on the degauss relay.

#### 9.2.1 Auxiliary Power Supply

IC 7510 is the heart of the Auxiliary Power supply. In the Standby mode, via the current sensing and Control circuits, a low power condition is detected by the IC. The IC then goes into a Burst Mode operation to reduce the power used by the circuit. In the Burst Mode, the supply will operate at approximately 25 kHz. In full power operation the frequency will be approximately 66 kHz.

When power is first applied to the set, Start up is supplied to the IC by the internal Start-Up current through Pin 14. Startup voltage is also applied to the IC to Pin 2 by the AC\_IN line which is tied to the neutral side of the AC line. During normal operation, power is supplied to the IC by the HOT windings, Pins 1 and 2, of transformer 5504. Output drive from Pin 11 is applied to the Gate of Transistor 7525. Voltage developed across the current sensing resistors in the Source of 7525 provides current sense information to the IC. When 7525 is switched Off, the voltage on Pin 1 of 5504 goes High. This winding supplies the operating voltage the power supply circuit. It also turns Transistor 7567 On causing the Gate of 7525 to stay Low as long as Pin 1 of 5504 is High. This prevents 7525 from turning On until the field of 5504 has collapsed.

Regulation is accomplished by monitoring the +3 volt supply. This voltage is fed to Shunt regulator 7542 which controls the current through opto-isolator 7516. Shunt Regulator 7542 begins conducting when Pin 3 of the IC reaches 2.5 volts. At

this point current flows through the opto-isolator, 7516. The transistor inside 7516 turns On applying a control voltage to Pin 6 of 7510. If a problem should develop in the feedback circuit causing an excessive voltage on Pin 6, Transistor 7549-2 will turn On, switching Transistor 7532 On. This will a voltage to the Demag circuit on Pin 7 causing the IC to latch Off. The IC will stay latched until power is removed and reapplied to the set.

In the Standby mode, the "B" control line from the Hercules Processor is Low. Only the +3, +3V3, and +6 volt supplies are present. When the set is turned On, the "B" line will go High, turning Transistors 7509, 7545, and 7535 On. This will switch On the +8VA, +12VA, +8V, +3V3A, +6VA, and +5V supplies.

In normal operation, voltage from Pin 12 of 5504 is rectified by 6540 to produce a negative voltage which prevents Transistor 7561 from turning On. If AC is removed from the set, this negative voltage will disappear. The voltage across the filter capacitors on the +3V line will turn 7561 On. The Power Down line will then go Low signaling the processor to shut the set down.

### 9.2.2 Main Power Supply

The Main Power supply provides the VBAT (141 volt), and Audio voltage supplies. This supply is switched Off during the Standby mode. During Standby the STBY\_Con line is High which turns Transistor 7573 On. This causes the opto-isolator 7513 to turn On hard. This places a higher voltage on the control Pin of IC 7511 causing the IC to shut down. The operating voltage from the Auxiliary supply keeps a small voltage on Pin 2 of 7511 to prevent it from cycling On and Off.

When the set is turned On, the STBY\_Con line goes Low switching 7573 Off. The VBAT supply is the reference voltage for regulation. Since this voltage is missing during startup, the Shunt Regulator 7571 is turned Off. The voltage on Pin 6 of 7511 goes Low, which turns the drive from the IC On. When the set is On during normal operation, the supply voltage on Pin 2 of the IC is supplied by Pin 2 of Transformer 5512. When the VBAT supply reaches the correct voltage, Pin 3 of the Shunt Regulator 7571 reaches 2.5 volts switching it On. This switches the opto-isolator On to provide a regulation feedback path.

Transistor 6551 provides a power on ramping of the VBAT supply.

## 9.3 Video Processing

The video processing section located on the Mono Carrier performs all of the 1fH processing. AV1, AV2, CVI, and Side inputs are fed to this board. The CVI input on this board will only accept 1fH signals. 1fH RGB signals from the Hercules are fed to the ATSC module via the deflection controller board. The ATSC module rescales the picture from the Hercules. It also has an HDMI and CVI connection. The HDMI and CVI connections can accept either 480i, 480p, 720p, or 1080i. The ATSC module also has a built in Digital Tuner. The ATSC module resizes the picture to 1080i regardless of the input.

## 9.4 Audio Processing

The audio decoding is done entirely via the Hercules, IC 7200. The analogue IF output from the Tuner is fed directly to either the Video-IF or the Sound-IF input depending on the type of concept chosen. There are mainly two types of decoder in the Hercules, an analog decoder that decodes only Mono, regardless of any standards, and a digital decoder (or DEMDEC) that can decode both Mono as well as Stereo, again regardless of any standards.

Audio from the ATSC board is fed to the Hercules.

## 9.5 Deflection Controller

The Deflection panel performs the signal processing and Deflection processing functions. YPbPr from the ATSC module is fed to 7402 signal processor. This circuit performs the Color, Tint, Brightness, and Contrast control functions. The Y signal is fed to a Sync Separator to separate the Horizontal and Vertical Sync which is output on Pins 37 and 35. RGB is output on Pins 12, 13, and 14. These signals are sent to the CRT panel.

Horizontal drive is output on Pin 37 where it is fed to the deflection circuits on the Family board. Vertical Sync is output on Pin 35 of 7402 to IC 7404. IC 7404 develops the Vertical and EW drive for the deflection circuits.

DC monitor signals are output on Pins 4, 6, and 7 of 7402 and fed to an Undervoltage detection circuit. If a positive or negative voltage develops on any of these lines, this circuit will force Pin 21 of 7404 Low, causing the set to shut down. The shutdown is activated when Pin 21 goes below 5 volts.

9.6 Abbreviation List

2CS	2 Carrier (or Channel) Stereo	I	Monochrome TV system. Sound carrier distance is 6.0 MHz
ACI	Automatic Channel Installation: algorithm that installs TV sets directly from cable network by means of a predefined TXT page	I2C	Integrated IC bus
		IF	Intermediate Frequency
ADC	Analogue to Digital Converter	IIC	Integrated IC bus
AFC	Automatic Frequency Control: control signal used to tune to the correct frequency	ITV	Institutional TV
AFT	Automatic Fine Tuning	LATAM	Latin American countries like Brazil, Argentina, etc.
AGC	Automatic Gain Control: algorithm that controls the video input of the feature box	LED	Light Emitting Diode
		L/L'	Monochrome TV system. Sound carrier distance is 6.5 MHz. L' is Band I, L is all bands except for Band I
AM	Amplitude Modulation	LS	Large Screen or Loudspeaker
AP	Asia Pacific region	M/N	Monochrome TV system. Sound carrier distance is 4.5 MHz
AR	Aspect Ratio: 4 by 3 or 16 by 9	NC	Not Connected
ATS	Automatic Tuning System	NICAM	Near Instantaneous Compounded Audio Multiplexing. This is a digital sound system, mainly used in Europe.
ATSC	Advanced Television Systems Committee; HDTV standard for the USA, using MPEG2 for video and Dolby Digital for audio	NTSC	National Television Standard Committee. Color system mainly used in North America and Japan. Color carrier NTSC M/N = 3.579545 MHz, NTSC 4.43 = 4.433619 MHz (this is a VCR norm, it is not transmitted off-air)
AV	External Audio Video		Non Volatile Memory: IC containing TV related data e.g. alignments
AVL	Automatic Volume Leveler	NVM	
BCL	Beam Current Limitation	OB	Option Bit
B/G	Monochrome TV system. Sound carrier distance is 5.5 MHz	OC	Open Circuit
BTSC	Broadcast Television Standard Committee. Multiplex FM stereo sound system, originating from the USA and used e.g. in LATAM and AP-NTSC countries	OP	Option Byte
		OSD	On Screen Display
CC	Closed Caption	PAL	Phase Alternating Line. Color system mainly used in West Europe (color carrier = 4.433619 MHz) and South America (color carrier PAL M = 3.575612 MHz and PAL N = 3.582056 MHz)
CCC	Continuous Cathode Calibration		
ComPair	Computer aided rePair	PCB	Printed Circuit board
CRT	Cathode Ray Tube or picture tube	PLL	Phase Locked Loop. Used for e.g. FST tuning systems. The customer can give directly the desired frequency
CSM	Customer Service Mode		
CTI	Color Transient Improvement: manipulates steepness of chroma transients	POR	Power-On Reset
CVBS	Composite Video Blanking and Synchronization	PTP	Picture Tube Panel (or CRT-panel)
		RAM	Random Access Memory
CVI	Component Video Input	RC	Remote Control handset
DAC	Digital to Analogue Converter	RGB	Red, Green, and Blue video signals
DBX	Dynamic Bass Expander or noise reduction system in BTSC	ROM	Read Only Memory
D/K	Monochrome TV system. Sound carrier distance is 6.5 MHz	SDAM	Service Default / Alignment Mode
DFU	Direction For Use: description for the end user	SAP	Second Audio Program
		SC	Sandcastle: pulse derived from sync signals
DNR	Dynamic Noise Reduction	S/C	Short Circuit
DSP	Digital Signal Processing	SCL	Serial Clock
DST	Dealer Service Tool: special remote control designed for dealers to enter e.g. service mode	SDA	Serial Data
		SECAM	SEquence Couleur Avec Memoire. Color system mainly used in France and East Europe. Color carriers = 4.406250 MHz and 4.250000 MHz
DVD	Digital Versatile Disc		
EEPROM	Electrically Erasable and Programmable Read Only Memory	SIF	Sound Intermediate Frequency
EHT	Extra High Tension	SS	Small Screen
EHT-INFO	Extra High Tension information	STBY	Standby
EPG	Electronic Programming Guide	SVHS	Super Video Home System
EU	Europe	SW	Software
EW	East West, related to horizontal deflection of the set	THD	Total Harmonic Distortion
EXT	External (source), entering the set via SCART or Cinch	TXT	Teletext
		uP	Microprocessor
FBL	Fast Blanking: DC signal accompanying RGB signals	UOC	Ultimate One Chip
		UVSH	UHF, VHF, S-, and Hyper- band
FILAMENT	Filament of CRT	V	Vertical sync signal
FM	Field Memory or Frequency Modulation	V_BAT	Main supply voltage for the deflection stage (mostly 141 V)
H	Horizontal sync signal	V-chip	Violence Chip
HP	Headphone	VCR	Video Cassette Recorder


WYSIWYR	What You See Is What You Record: record selection that follows main picture and sound
XTAL	Quartz crystal
YC	Luminance (Y) and Chrominance (C) signal

9.7 IC Data Sheets

This section shows the internal block diagrams and pin layouts of ICs that are drawn as "black boxes" in the electrical diagrams (with the exception of "memory" and "logic" ICs).

9.7.1 Diagram H, TDA9178 (IC7610)

BLOCK DIAGRAM

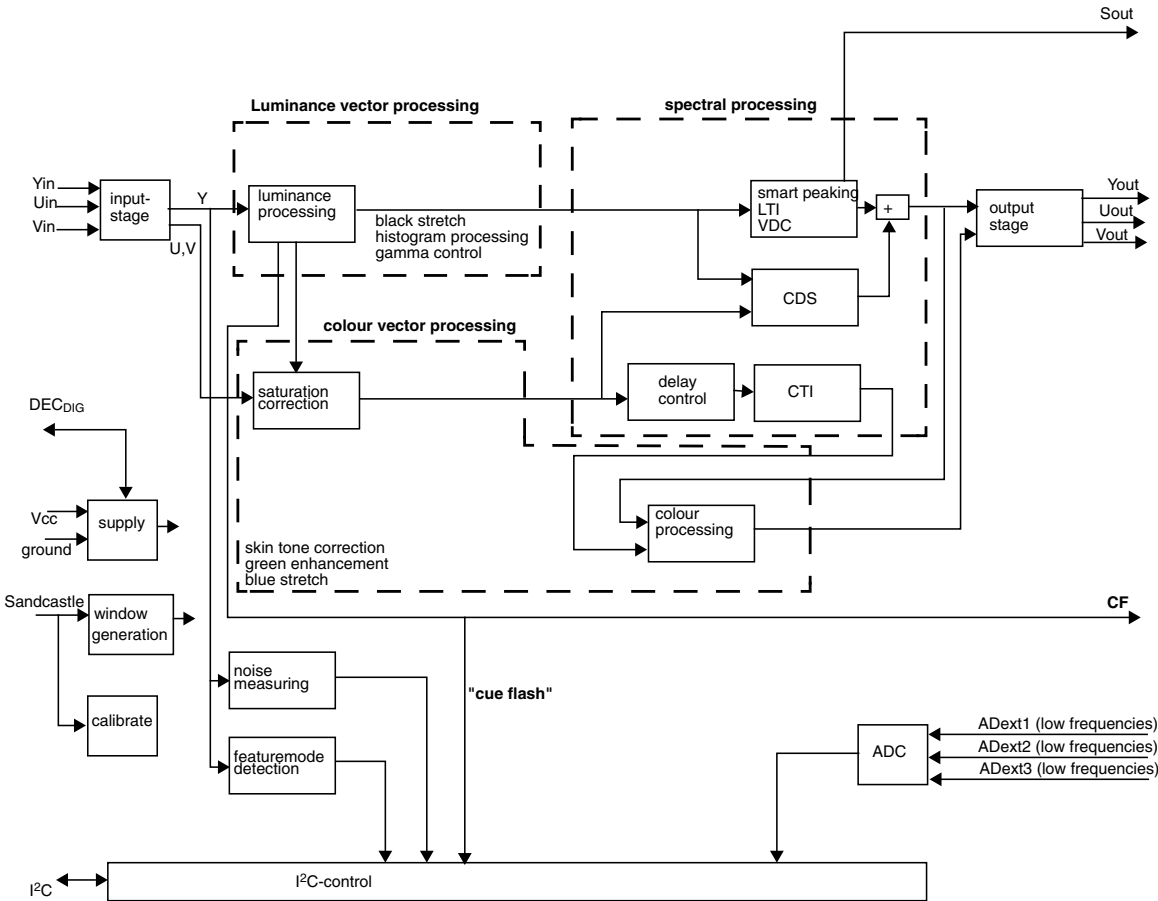

PIN CONFIGURATION

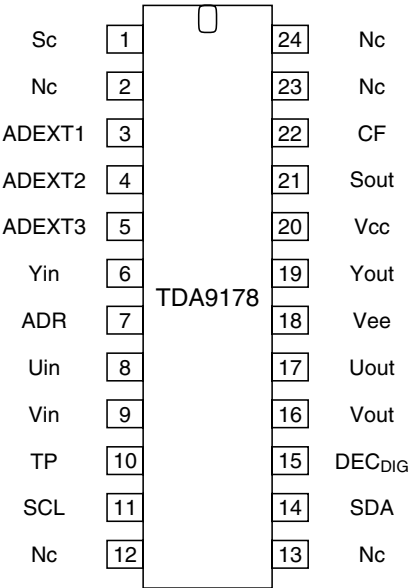


Figure 9-2 Internal Block Diagram and Pin Configuration



../SPMSgraphs/2004/E\_06532\_007.eps 4  
../SPMSgraphs/2004/E\_06532\_010.eps 65  
../SPMSgraphs/2004/E\_06532\_011.eps 61  
../SPMSgraphs/2004/E\_06532\_012.eps 20, 25  
../SPMSgraphs/2004/E\_06532\_014.eps 5  
../SPMSgraphs/2004/E\_06532\_021.eps 12  
../SPMSgraphs/2004/E\_06532\_024.eps 5  
../SPMSgraphs/2004/E\_14480\_037.eps 48  
../SPMSgraphs/2004/E\_14480\_038.eps 49  
../SPMSgraphs/2004/E\_14480\_039.eps 49  
../SPMSgraphs/2004/E\_14480\_059.eps 15  
../SPMSgraphs/2004/E\_14480\_060.eps 15  
../SPMSgraphs/2004/E\_14480\_062.eps 16  
../SPMSgraphs/2004/E\_14480\_063.eps 16  
../SPMSgraphs/2004/E\_14480\_064.eps 16  
../SPMSgraphs/2004/E\_14480\_065.eps 17  
../SPMSgraphs/2004/E\_14480\_075.eps 70  
../SPMSgraphs/2005/F\_15050\_001.eps 15  
../SPMSgraphs/2005/F\_15050\_003.eps 14  
../SPMSgraphs/2005/F\_15050\_004.eps 14  
../SPMSgraphs/2005/F\_15050\_005.eps 2  
../SPMSgraphs/2005/F\_15050\_032.eps 47  
../SPMSgraphs/2005/F\_15050\_033.eps 47  
../SPMSgraphs/2005/F\_15050\_034.eps 52  
../SPMSgraphs/2005/F\_15050\_035.eps 54  
../SPMSgraphs/2005/F\_15050\_036.eps 54  
../SPMSgraphs/2005/F\_15050\_040.eps 52  
../SPMSgraphs/2005/F\_15050\_041.eps 53  
../SPMSgraphs/2005/F\_15050\_042.eps 53  
../SPMSgraphs/2005/F\_15050\_043.eps 55  
../SPMSgraphs/2005/F\_15050\_044.eps 56  
../SPMSgraphs/2005/F\_15050\_045.eps 56  
../SPMSgraphs/2005/F\_15050\_046.eps 55  
../SPMSgraphs/2005/F\_15050\_047.eps 57  
../SPMSgraphs/2005/F\_15050\_048.eps 57  
../SPMSgraphs/2005/F\_15050\_056.eps 50  
../SPMSgraphs/2005/F\_15050\_057.eps 51  
../SPMSgraphs/2005/F\_15050\_058.eps 51  
../SPMSgraphs/2005/F\_15050\_066.eps 61  
../SPMSgraphs/2005/F\_15060\_000.eps 1  
../SPMSgraphs/2005/F\_15060\_001.eps 29  
../SPMSgraphs/2005/F\_15060\_002.eps 30  
../SPMSgraphs/2005/F\_15060\_003.eps 31  
../SPMSgraphs/2005/F\_15060\_004.eps 32  
../SPMSgraphs/2005/F\_15060\_005.eps 33  
../SPMSgraphs/2005/F\_15060\_006.eps 3  
../SPMSgraphs/2005/F\_15060\_007.eps 34  
../SPMSgraphs/2005/F\_15060\_008.eps 35  
../SPMSgraphs/2005/F\_15060\_009.eps 36  
../SPMSgraphs/2005/F\_15060\_010.eps 37  
../SPMSgraphs/2005/F\_15060\_011.eps 38  
../SPMSgraphs/2005/F\_15060\_012.eps 39  
../SPMSgraphs/2005/F\_15060\_012a.eps 40  
../SPMSgraphs/2005/F\_15060\_012b.eps 41  
../SPMSgraphs/2005/F\_15060\_012c.eps 42  
../SPMSgraphs/2005/F\_15060\_012d.eps 43  
../SPMSgraphs/2005/F\_15060\_013.eps 23  
../SPMSgraphs/2005/F\_15060\_014.eps 58  
../SPMSgraphs/2005/F\_15060\_015.eps 59  
../SPMSgraphs/2005/F\_15060\_016.eps 60  
../SPMSgraphs/2005/F\_15060\_017.eps 60  
../SPMSgraphs/2005/F\_15060\_031.eps 36  
../SPMSgraphs/2005/F\_15060\_032.eps 44  
../SPMSgraphs/2005/F\_15060\_033.eps 45  
../SPMSgraphs/2005/F\_15060\_034.eps 46  
../SPMSgraphs/2005/F\_15060\_035.eps 21  
../SPMSgraphs/2005/F\_15060\_036.eps 22  
../SPMSgraphs/2005/F\_15060\_037.eps 24  
../SPMSgraphs/2005/F\_15060\_038.eps 26  
../SPMSgraphs/2005/F\_15060\_039.eps 27  
../SPMSgraphs/2005/F\_15060\_040.eps 28  
../SPMSgraphs/2005/F\_15060\_041.eps 7  
../SPMSgraphs/2005/F\_15060\_042.eps 7  
../SPMSgraphs/2005/F\_15060\_043.eps 7  
../SPMSgraphs/2005/F\_15060\_044.eps 8

../SPMSgraphs/2005/F\_15060\_045.eps 9  
../SPMSgraphs/2005/F\_15060\_046.eps 10  
../SPMSgraphs/2005/F\_15060\_047.eps 10  
../SPMSgraphs/2005/F\_15060\_048.eps 18  
../SPMSgraphs/2005/F\_15060\_049.eps 19  
../SPMSgraphs/2005/F\_15060\_051.eps 25  
../SPMSgraphs/2005/F\_15060\_052.eps 66  
../SPMSgraphs/2005/F\_15060\_053.eps 62

## SPARE PARTS LIST

MODEL "A" = 26PW9100D

MODEL "B" = 30PW9100D

MODEL "C" = 30PW9110D

MODEL "D" = 32PT9100D

**PRODUCT SAFETY NOTE:** Products marked with a

▲ have special characteristics important to safety.

Before replacing any of these components, read carefully the product safety notice in this service manual.

Don't degrade the safety of the product through improper servicing.

REF.	▲	MODEL	DESCRIPTION	PART NO.
<b>CABINET PARTS</b>				
8		D	BC 34WDPV22 ATSC QAM/NA	313912462421
16		D	AS MAINSKNOB PV2/11027/NA	313917771181
16		ABC	AS MAINSKNOB FL13B/10942/NA	313917788861
41		D	PV2 LENS (USA)	313912439701
50		C	Nameplate	313912001301
50		BD	Nameplate	314105000281
50		A	Nameplate	314105000291
106		BC	Yoke Wedge	312123320091
125			Instruction Book	313912533641
145			Quick Use Guide	313912533631
164			Quick Connection Guide (FR)	313912534951
166			Quick Connection Guide (SP)	313912534961
167			Quick Connection Guide (ENG)	313912534971
1081			Battery, Zinc, 1.5V (2-Pack)	929900065263
1085			Remote Transmitter	312814717131
1099		D	CRT A80ERF182X45N	930194880539
1099		A	CRT W66QDS770XV2N	930198420522
1099		BC	CRT W76QEN691X100	932221772682
1127		A	Defl - Control Assy	313918887411
1127		D	Defl - Control Assy	313926712921
1128		D	MOD-DIGITAL-ATSC-HDMI-4:3	313926710201
1128		ABC	MOD-DIGITAL-ATSC-HDMI-16:9	313926714311
5203		A	Degauss Coil	313912823931
5203		BC	Degauss Coil	313912823941
5203		D	Degauss Coil	313912824021
5205			Coil	242254945605
5213		D	Speaker 8 ohm 15W Full-range	242226400484

5213	ABC	Speaker 8 ohm 10W Full-range	242226400491
5214	D	Speaker 8 ohm 15W Full-range	242226400484
5214	ABC	Speaker 8 ohm 10W Full-range	242226400491
8190		AC Cord	242207000066
9950	BC	Back cover Sub-Assy	312123755801
9950	A	Back cover Sub-Assy	312123755821
9960	A	Front cover Sub-Assy	312123755831

#### **MAIN CHASSIS**

CBA	A	Main Chassis Assy	313918887221
CBA	BC	Main Chassis Assy	313918885131
CBA	D	Main Chassis Assy	313918887231
1000		Tuner	313914723541
1002		SAW Filter, 45MHz75, OFWM1971M	242254944518
1005		Connector, 3 Pin	241202000725
1050	BC	MC-30PW9100D.9200D/37-NA ATSC	313918885151
1050	A	MC-26PW9100D.9200D/37-NA-ATSC	313918887241
1050	D	MC-32PT9100D/37-NA-ATSC	313918887251
1137		4 Pin Cinch Socket	242202605659
1205		Crystal Resonator 24MHZ576	242254301421
1206		Connector, 6 Pin	242202508149
1207		Connector, 7 Pin	242202511244
1208		Connector, 3 Pin	242202510768
1219		Connector, 4 Pin	242202509406
1250		Connector, 12 Pin	242202516052
1251		Connector, 10 Pin	242202516051
1257		Connector, 3 Pin	241202000725
1280		Connector, 5 Pin	242202512481
1401		Connector, 7 Pin	242202511244
1404		Connector, 2 Pin	242202516269
1451		Connector, 3 Pin	241202000725
1500		FUSE 5X20 HT 6A3 250V IEC B	242208600194
1503		RELAY 1P 12V 5A	242213207467
1504		Connector, 2 Pin	242202516375
1505		Connector, 2 Pin	242202516269
1533		Connector, 12 Pin	242202510772
1534		8 Pin Board Connector	242202508151
1535		Connector, 3 Pin	241202000725
1546		WIRE SIN 680 POSI 18ST BK	313913105261
1682		Connector, 3 Pin	241202000725
1693		Connector, 6 Pin	242202512482
2001		Cap, 22p, 5%, 50V, Ceramic	319801632290
2004		Cap, 47n, +80/-20%, 50V, Ceramic	319802444730
2005		Cap, 4u7, 20%, 50V, Electrolytic	319802554780
2006		Cap, 470u, 20%, 16V, Electrolytic	319802524710
2007		Cap, 100n, 10%, 16V, Ceramic	319801731040

2008	Cap, 100u, 20%, 25V, Electrolytic	319802531010
2011	Cap, 100n, 10%, 16V, Ceramic	319801731040
2012	Cap, 100n, 10%, 16V, Ceramic	319801731040
2122	Cap, 330p, 10%, 50V, Ceramic	319801733310
2123	Cap, 2u2, 20%, 50V, Electrolytic	319802552280
2124	Cap, 330p, 10%, 50V, Ceramic	319801733310
2125	Cap, 2u2, 20%, 50V, Electrolytic	319802552280
2131	Cap, 330p, 10%, 50V, Ceramic	319801733310
2132	Cap, 2u2, 20%, 50V, Electrolytic	319802552280
2133	Cap, 330p, 10%, 50V, Ceramic	319801733310
2134	Cap, 2u2, 20%, 50V, Electrolytic	319802552280
2203	Cap, 100u, 20%, 10V, Electrolytic	319802511010
2204	Cap, 22n, 10%, 25V, Ceramic	319801732230
2205	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2206	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2207	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2208	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2209	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2210	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2211	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2212	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2213	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2214	Cap, 100n, 10%, 16V, Ceramic	319801731040
2215	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2216	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2217	Cap, 470u, 20%, 10V, Electrolytic	319802514710
2218	Cap, 47u, 20%, 25V, Electrolytic	319802534790
2223	Cap, 100n, 10%, 16V, Ceramic	319801731040
2224	Cap, 100u, 20%, 25V, Electrolytic	319802531010
2225	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2226	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2229	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2231	Cap, 100n, 10%, 16V, Ceramic	319801731040
2232	Cap, 100n, 10%, 16V, Ceramic	319801731040
2233	Cap, 100n, 10%, 16V, Ceramic	319801731040
2234	Cap, 100u, 20%, 25V, Electrolytic	319802531010
2235	Cap, 6n8, 10%, 50V, Ceramic	319801736820
2237	Cap, 100n, 10%, 16V, Ceramic	319801731040
2238	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2239	Cap, 220n, +80/-20%, 16V, Ceramic	319801742240
2240	Cap. 1u5, 20%, 50V, Electrolytic	202002190137
2241	Cap, 22n, 10%, 25V, Ceramic	319801732230
2242	Cap, 100n, 10%, 16V, Ceramic	319801731040
2244	Cap, 2u2, +80/-20%, 10V, Ceramic	319801722250
2249	Cap, 100n, 10%, 16V, Ceramic	319801731040
2250	Cap, 100u, 20%, 25V, Electrolytic	319802531010

2251		Cap, 10n, +80/-20%, 50V, Ceramic	319801921030
2253		Cap, 10n, 10%, 50V, Ceramic	319801731030
2255		Cap, 10n, 10%, 50V, Ceramic	319801731030
2256		Cap, 100n, 10%, 16V, Ceramic	319801731040
2257		Cap, 3n3, 10%, 50V, Ceramic	319801733320
2260		Cap, 100n, 10%, 16V, Ceramic	319801731040
2261		Cap, 100n, 10%, 16V, Ceramic	319801731040
2262		Cap, 10n, 10%, 50V, Ceramic	319801731030
2263		Cap, 100n, 10%, 16V, Ceramic	319801731040
2264		Cap, 560p, 5%, 25V, Ceramic	319801635610
2265		Cap, 100u, 20%, 25V, Electrolytic	319802531010
2266		Cap, 2u2, +80/-20%, 10V, Ceramic	319801722250
2267		Cap, 2u2, +80/-20%, 10V, Ceramic	319801722250
2272		Cap, 100n, 10%, 16V, Ceramic	319801731040
2273		Cap, 100u, 20%, 25V, Electrolytic	319802531010
2274		Cap, 100n, 10%, 16V, Ceramic	319801731040
2275		Cap, 10u, 20%, 50V, Electrolytic	319802551090
2276		Cap, 100n, +80/-20%, 25V, Ceramic	319802321040
2279		Cap, 100p, 5%, 50V, Ceramic	319801631010
2280		Cap, 1u, +80/-20%, 10V, Ceramic	319801741050
2282		Cap, 1n, 10%, 50V, Ceramic	319801731020
2291		Cap, 10u, 20%, 50V, Electrolytic	319802551090
2292		Cap, 10u, 10%, 6.3V, Ceramic	202055296637
2293		Cap, 470p, 5%, 50V, Ceramic	319801634710
2404		Cap, 47u, 20%, 160v, Electrolytic	202203100103
2407		Cap, 330p, 5%, 50V, Ceramic	319801633310
2409		Cap, 33n, 10%, 50V, Ceramic	319801703330
2410		Cap, 100n, 10%, 16V, Ceramic	319801701040
2411	A	Cap, 1n, 10%, 2KV, Ceramic	319801971020
2411	BC	Cap, 220p, 10%, 2KV, Ceramic	319801972210
2411	D	Cap, 330p, 10%, 2KV, Ceramic	319801973310
2412	ABC	Cap, 12n, 1600V, 5%, Metalized Polypropylene	202233300254
2412	▲ D	Cap, 10n, 5%, 1600V, Polypropylene	222237590154
2413	BC	Cap, 33n, 10%, 400V, POL PEN	202232000014
2413	AD	Cap, 27n, 5%, 630V, Polypropylene	222237590223
2418		Cap, 330n, 250V, 5%, Metalized Polypropylene	202233300259
2419	AD	Cap, 560n, 5%, 250V, Metalized Polypropylene	202233300088
2419	BC	Cap, 1u2, 5%, 250V, Metalized Polypropylene	222247990034
2421	BC	Cap, 220p, 10%, 2KV, Ceramic	319801972210
2422	BC	Cap, 220p, 10%, 2KV, Ceramic	319801972210
2426		Cap, 470p, 10%, 200V, Ceramic	223893055618
2431		Cap, 680p, 10%, 500V, Ceramic	319801946810
2436		Cap, 1u, 20%, 250V, Electrolytic	202001293279
2448		Cap, 470p, 10%, 200V, Ceramic	223893055618
2449		Cap, 470u, 20%, 16V, Electrolytic	319802524710
2451	▲	Cap, 68n, 10%, 250V, Metalized Polyester	222236545683

2454	Cap, 470u, 20%, 16V, Electrolytic	319802524710
2459	Cap, 470p, 10%, 200V, Ceramic	223893055618
2460	Cap, 470u, 20%, 16V, Electrolytic	319802524710
2461	Cap, 22u, 20%, 100V, Electrolytic	319802572290
2462	Cap, 2n2, 10%, 50V, Ceramic	319801732220
2463	Cap, 2n2, 10%, 50V, Ceramic	319801732220
2464	Cap, 100n, +80/-20%, 25V, Ceramic	319802321040
2465	Cap, 220n, +80/-20%, 50V, Ceramic	223858019814
2466	Cap, 2u2, +80/-20%, 10V, Ceramic	319801722250
2467	Cap, 220n, +80/-20%, 50V, Ceramic	223858019814
2468	Cap, 470n, 10%, 100V, Metalized Polyester	222236525474
2469	Cap, 22u, 20%, 100V, Electrolytic	319802572290
2470	Cap, 100n, 10%, 100v, Ceramic	222260155649
2477	Cap, 8n2, 10%, 50V, Ceramic	223858015635
2478	Cap, 15n, 10%, 50V, Ceramic	319801701530
2488	Cap, 1u, 10%, 50V, Polyester	319801401050
2491	Cap, 4u7, +80/-20%, 10V, Ceramic	202055296305
2492	Cap, 470p, 10%, 200V, Ceramic	223893055618
2493	Cap, 470p, 10%, 200V, Ceramic	223893055618
2494	Cap, 470p, 10%, 200V, Ceramic	223893055618
2496	Cap, 10n, 10%, 50V, Ceramic	319801731030
2497	Cap, 220p, 5%, 50V, Ceramic	319801632210
2499	Cap, 2u2, +80/-20%, 16V, Ceramic	202055295447
2500	Cap, 470n, 20%, 275V, Metalized Polypropylene	222233822474
2501	Cap, 2n2, 10%, 1KV, Ceramic	319801952220
2503	Cap, 2n2, 10%, 1KV, Ceramic	319801952220
2504	Cap, 2n2, 10%, 1KV, Ceramic	319801952220
2505	Cap. 680u, 20%, 200V, Electrolytic	202002490723
2508	Cap, 100n, 20%, 275V, Metalized Polypropylene	222233822104
2510	Cap, 47u, 20%, 50V, Electrolytic	319802554790
2511	Cap, 22u, 20%, 50V, Electrolytic	319802552290
2512	Cap, 100n, 10%, 16V, Ceramic	319801731040
2513	Cap, 470p, 5%, 50V, Ceramic	319801634710
2514	Cap, 1n5, 10%, 2KV, Ceramic	319801971520
2515	Cap, 1n, 10%, 50V, Ceramic	319801731020
2516	Cap, 100n, 10%, 16V, Ceramic	319801731040
2517	Cap, 1n, 10%, 50V, Ceramic	319801731020
2519	Cap, 470p, 5%, 50V, Ceramic	319801634710
2520	Cap, 100n, 10%, 16V, Ceramic	319801731040
2521	Cap, 47n, 10%, 16V, Ceramic	319801734730
2522	Cap, 470p, 5%, 50V, Ceramic	319801634710
2523	Cap, 330p, 10%, 1KV, Ceramic	319801963310
2524	Cap, 1n, 10%, 100V, Ceramic	223860056623
2525	Cap, 470p, 5%, 50V, Ceramic	319801634710
2526	Cap, 100n, 10%, 50V, Ceramic	222258015649
2528	Cap, 470n, 10%, 50V, Polyester	319801404740



2534	Cap, 470u, 20%, 16V, Electrolytic	319802524710
2535	Cap, 4700u, 20%, 6.3V, Electrolytic	202002100092
2536	Cap, 2u2, 20%, 16V, Electrolytic	319802622220
2538	Cap, 1n, 10%, 50V, Ceramic	319801731020
2539	Cap, 470p, 10%, 500V, Ceramic	319801944710
2541	Cap, 47u, 20%, 25V, Electrolytic	319802534790
2542	Cap, 1n5, 20%, 250v, Ceramic	202055490199
2543	Cap, 100n, 10%, 16V, Ceramic	319801731040
2544	Cap, 2n2, 10%, 500V, Ceramic	319801942220
2551	Cap, 1n, 10%, 1KV, Ceramic	319801961020
2552	Cap. 150u, 20%, 160V, Electrolytic	202002100112
2561	Cap, 1n, 10%, 50V, Ceramic	319801911020
2562	Cap, 2u2, 20%, 25V, Electrolytic	202001293402
2563	Cap, 2u2, 20%, 25V, Electrolytic	202001293402
2564	Cap, 100n, 10%, 50V, Ceramic	222258015649
2565	Cap, 1n, 10%, 100V, Ceramic	223860056623
2570	Cap, 470p, 10%, 250V, Ceramic	202055490169
2571	Cap, 15n, 10%, 50V, Ceramic	319801731530
2572	Cap, 10n, 10%, 50V, Ceramic	319801731030
2575	Cap, 10n, 10%, 50V, Ceramic	319801731030
2576	Cap, 100n, 10%, 16V, Ceramic	319801731040
2577	Cap, 100u, 20%, 16V, Electrolytic	319802821010
2578	Cap, 2n2, 10%, 50V, Ceramic	319801732220
2579	Cap, 100n, 10%, 16V, Ceramic	319801731040
2580	Cap, 15n, 10%, 400V, Polyester	222234790219
2582	Cap, 1u, +80/-20%, 25V, Ceramic	202055296723
2583	Cap, 10u, 10%, 6.3V, Ceramic	202055296637
2584	Cap, 470u, 20%, 6.3V, Electrolytic	319802504710
2585	Cap, 1u, +80/-20%, 25V, Ceramic	202055296723
2587	Cap, 470u, 20%, 10V, Electrolytic	319802514710
2590	Cap, 4700u, 20%, 10V, Electrolytic	202002100101
2591	Cap, 1n, 10%, 50V, Ceramic	319801731020
2592	Cap, 68p, 5%, 50V, Ceramic	319801636890
2601	Cap, 1n, 5%, 25V, Ceramic	319801631020
2611	Cap, 470u, 20%, 16V, Electrolytic	319802524710
2615	Cap, 4u7, +80/-20%, 10V, Ceramic	202055296305
2617	Cap, 100n, 10%, 16V, Ceramic	319801731040
2620	Cap, 100n, 10%, 16V, Ceramic	319801731040
2621	Cap, 100u, 20%, 25V, Electrolytic	319802531010
2623	Cap, 100n, 10%, 16V, Ceramic	319801731040
2624	Cap, 100u, 20%, 25V, Electrolytic	319802531010
2625	Cap, 2u2, 10%, 6v3, Ceramic	202255205615
2632	Cap, 6n8, 10%, 50V, Ceramic	319801736820
2633	Res, Zero ohm, 'Chip' Jumper	319802190030
2634	Res, Zero ohm, 'Chip' Jumper	319802190030
2986	Cap, 100n, 10%, 16V, Ceramic	319801731040

2987	Cap, 100n, 10%, 16V, Ceramic	319801731040
2988	Cap, 100n, 10%, 16V, Ceramic	319801731040
2989	Cap, 2u2, 10%, 6.3V, Ceramic	202055200183
2990	Cap, 1n, 5%, 25V, Ceramic	319801631020
2992	Cap, 2u2, 10%, 6.3V, Ceramic	202055200183
2993	Cap, 1n, 5%, 25V, Ceramic	319801631020
2994	Cap, 22n, 10%, 25V, Ceramic	319801732230
2995	Cap, 22n, 10%, 25V, Ceramic	319801732230
2996	Cap, 47n, +80/-20%, 50V, Ceramic	319802444730
2997	Cap, 47n, +80/-20%, 50V, Ceramic	319802444730
2998	Cap, 2u2, +80/-20%, 10V, Ceramic	319801722250
3003	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3004	Res, 68K, 5%, 1/16W, Metalized Glass	319802136830
3005	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3121	Res, 75 ohm, 5%, 1/16W, Metalized Glass	319802137590
3123	Res, 22K, 5%, 1/6W, Carbon Film	319801102230
3124	Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3125	Res, 22K, 5%, 1/6W, Carbon Film	319801102230
3126	Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3129	Res, 75 ohm, 5%, 1/16W, Metalized Glass	319802137590
3130	Res, 75 ohm, 5%, 1/16W, Metalized Glass	319802137590
3131	Res, 22K, 5%, 1/6W, Carbon Film	319801102230
3132	Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3133	Res, 22K, 5%, 1/6W, Carbon Film	319801102230
3134	Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3135	Res, 75 ohm, 5%, 1/16W, Metalized Glass	319802137590
3167	Res, 75 ohm, 5%, 1/16W, Metalized Glass	319802137590
3168	Res, 75 ohm, 5%, 1/16W, Metalized Glass	319802137590
3169	Res, 75 ohm, 5%, 1/16W, Metalized Glass	319802137590
3201	Res, 1K, 5%, 1/6W, Carbon Film	319801101020
3202	Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3203	Res, 150K, 5%, 1/16W, Metalized Glass	319802131540
3204	Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3205	Res, 12K, 5%, 1/16W, Metalized Glass	319802131230
3206	Res, 5K6, 5%, 1/16W, Metalized Glass	319802135620
3207	Res, 10 ohm, 5%, 1/16W, Metalized Glass	319802131090
3208	Res, 27K, 5%, 1/16W, Metalized Glass	319802132730
3209	Res, 1 ohm, 5%, 1/16W, Metalized Glass	319802131080
3210	Res, 1 ohm, 5%, 1/16W, Metalized Glass	319802131080
3211	Res, 27K, 5%, 1/16W, Metalized Glass	319802132730
3212	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3214	Res, 10 ohm, 5%, 1/16W, Metalized Glass	319802131090
3215	Res, 4K7, 5%, 1/6W, Carbon Film	319801104720
3216	Res, 10 ohm, 5%, 1/16W, Metalized Glass	319802131090
3218	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3219	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030

3220	Res, 150 ohm, 5%, 1/16W, Metalized Glass	319802131510
3221	Res, 270 ohm, 5%, 1/16W, Metalized Glass	319802132710
3222	Res, 330 ohm, 5%, 1/16W, Metalized Glass	319802133310
3226	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3227	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3228	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3229	Res, 1K5, 5%, 1/16W, Metalized Glass	319802131520
3231	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3232	Res, 12K, 5%, 1/16W, Metalized Glass	319802131230
3238	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3241	Res, 39K, 5%, 1/6W, Carbon Film	319801103930
3242	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3246	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3247	Res, 390 ohm, 5%, 1/16W, Metalized Glass	319802133910
3248	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3249	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3252	Res, 10K, 5%, 1/6W, Carbon Film	319801101030
3253	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3257	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3258	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3260	Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
3261	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3262	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3263	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3264	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3265	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3266	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3269	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3270	Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
3272	Res, 820 ohm, 5%, 1/16W, Metalized Glass	319802138210
3273	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3274	Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
3275	Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
3276	Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
3277	Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
3278	Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
3279	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3280	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3281	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3283	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3284	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3285	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3287	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3291	Res, 4K7, 5%, 1/6W, Carbon Film	319801104720
3292	Res, 4K7, 5%, 1/10W, Metalized Glass	319802154720
3293	Res, 10 ohm, 5%, 1/6W, Carbon Film	319801101090

3296		Res, 5K6, 5%, 1/16W, Metalized Glass	319802135620
3298		Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3401		Res, 47k ohm, 1%, 1/16W, Metal Film	319803947030
3402		Res, 330 ohm, 5%, 1/6W, Carbon Film	319801103310
3408		Res, 100K, 5%, 1/16W, Metalized Glass	319802131040
3413		Res, 1K, 5%, 1/6W, Carbon Film	319801101020
3414	ABC	Res, 4.7 ohm, 1%, 1/16W, Metal Film	319803947080
3414	D	Res, 6.8 ohm, 1%, 1/16W, Metal Film	319803968080
3415	ABC	Res, 4.7 ohm, 1%, 1/16W, Metal Film	319803947080
3415	D	Res, 6.8 ohm, 1%, 1/16W, Metal Film	319803968080
3416		Res, 47 ohm, 5%, 1/16W, Metalized Glass	319802134790
3419	ABC	Res, 4.7 ohm, 1%, 1/16W, Metal Film	319803947080
3419	D	Res, 6.8 ohm, 1%, 1/16W, Metal Film	319803968080
3421		Res, 4.7 ohm, 1%, 1/16W, Metal Film	319803947080
3424	▲ BC	VDR DC 1MA/612V S MAX 1100V A	232259214217
3425	▲ BC	VDR DC 1MA/612V S MAX 1100V A	232259214217
3431		Res, 82k ohm, 1%, 1/16W, Metal Film	319803982030
3433	D	Res, 10 ohm, 1%, Metal Film	319803910090
3433	ABC	Res, 4.7 ohm, 1%, 1/16W, Metal Film	319803947080
3439		Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3440		Res, 2.2 ohm, 1%, 1/16W, Metal Film	319803922080
3441		Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3450	▲	Res, 1 ohm, 5%, 1/3W, Metal Film	230620403108
3451	D	Res, 10 ohm, 1%, Metal Film	319803910090
3451	ABC	Res, 4.7 ohm, 1%, 1/16W, Metal Film	319803947080
3453		Res, 56K, 5%, 1/16W, Metalized Glass	319802135630
3455	▲	Res, Fuse, 0.27 ohm, 5%	230620703277
3456	▲	Res, Fuse, 0.27 ohm, 5%	230620703277
3458		Res, 4R7, 5%, 1/2W, Metal Film	230620703478
3459	A	Res, 820K, 5%, 1/16W, Metalized Glass	232270260824
3459	BC	Res, 470K, 5%, 1/16W, Metalized Glass	319802134740
3459	D	Res, 680K, 5%, 1/16W, Metalized Glass	319802136840
3460		Res, 56K, 1%, 1/16W, Metalized Glass	232270465603
3461		Res, 27K, 5%, 1/16W, Metalized Glass	319802132730
3462		Res, 18K, 1%, 1/16W, Metalized Glass	232270461803
3463		Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3466		Res, 1R5, 5%, 1/3W, Metal Film	230620403158
3467		Res, 100 ohm, 1%, Metal Film	319803910010
3468		Res, 100 ohm, 1%, Metal Film	319803910010
3469		Res, 22K, 5%, 1/6W, Carbon Film	319801102230
3471		Res, 2.2 ohm, 1%, 1/16W, Metal Film	319803922080
3472	AD	Res, 1.2 ohm, 1%, Metal Film	319803912080
3472	BC	Res, 2.2 ohm, 1%, 1/16W, Metal Film	319803922080
3473		Res, 15 ohm, 5%, 1 1/3W, Metal Film	319801221590
3477		Res, 1K5, 5%, 1/6W, Carbon Film	319801101520
3478		Res, 33K, 5%, 1/6W, Carbon Film	319801103330

3481		Res, 1K, 5%, 1/6W, Carbon Film	319801101020
3485	▲ D	Res, 1 ohm, 5%, 1/3W, Metal Film	230620403108
3485	▲ ABC	Res, Fuse, 0.47 ohm, 5%	230620703477
3486	▲	Res, 1 ohm, 5%, 1/3W, Metal Film	230620403108
3489		Res, 10K, 5%, 1/6W, Carbon Film	319801101030
3490		Res, 150 ohm, 1%, 1/16W, Metal Film	319803915010
3491	A	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3491	BCD	Res, 8K2, 5%, 1/16W, Metalized Glass	319802138220
3492	A	Res, 22K, 5%, 1/16W, Metalized Glass	319802132230
3492	BCD	Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3493		Res, 2R2, 5%, 1/2W, Metal Film	230620703228
3496		Res, 100K, 5%, 1/16W, Metalized Glass	319802131040
3497		Res, 56K, 5%, 1/16W, Metalized Glass	319802135630
3499		Res, 470K, 5%, 1/6W, Carbon Film	319801104740
3500		Res, 3M3, 5%, 1/2W, Metalized Glass	232224213335
3501		Res, 3M3, 5%, 1/2W, Metalized Glass	232224213335
3502		Res, 220 ohm, 20%, 1/2W, Carbon Film	319801302210
3503	▲	Surge Protector	242254943073
3504		Res, 1M5, 5%, 1/2W, Metalized Glass	232224213155
3505		VDR, 1mA/612V	212255000158
3510		NTC DC B57364 5W1 S 2R0 PM20 B	212261200077
3511		Res, 4R7, 5%, 1/6W, Carbon Film	319801104780
3512		Res, 1K2, 5%, 1/16W, Metalized Glass	319802131220
3513		Res, 2K2, 5%, 1/3W, Metal Film	230620403222
3514		Res, 100 ohm, 5%, 1/3W, Metal Film	230620403101
3515		Res, 1K, 5%, 1/6W, Carbon Film	319801101020
3516		Res, 0.1 ohm, 5%, 3/5W, Metal Film	319801211070
3517		Res, 300k, 1%, Metalized Glass	232270463004
3518		Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3519		Res, 15K, 5%, 1/6W, Carbon Film	319801101530
3520		Res, 0.12ohm, 5%, 1W	212010500036
3521		Res, 3K3, 5%, 1/6W, Carbon Film	319801103320
3522		Res, 56K, 5%, 1/16W, Metalized Glass	319802135630
3523		PTC, 1R5, 20%, 145v, DBL-MONO	232266296753
3524		Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3525		Res, 330K, 1%, Metal Film	319803933040
3526		Res, 150 ohm, 5%, 1/8W, Metalized Glass	232275061501
3527		Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3528		Res, 1M, 5%, 1/16W, Metalized Glass	319802131050
3529		Res, 2M2, 5%, 1/16W, Metalized Glass	319802132250
3530		Res, 56K, 5%, 1/16W, Metalized Glass	319802135630
3531		Res, 1K, 5%, 1/6W, Carbon Film	319801101020
3532		Res, 1 ohm, 5%, 1/10W, Metalized Glass	319802151080
3533		Res, 1 ohm, 5%, 1/10W, Metalized Glass	319802151080
3534		Res, 33 ohm, 5%, 1/6W, Carbon Film	319801103390
3535		Res, 1 ohm, 5%, 1/2W, Metal Film	230620703108

3536	Res, 220 ohm, 5%, 1/3W, Metal Film	230620403221
3538	Res, 1 ohm, 5%, 1/10W, Metalized Glass	319802151080
3539	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3541	Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3542	Res, 680 ohm, 5%, 1/16W, Metalized Glass	319802136810
3543	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3544	Res, 2K4, 1%, 1/16W, Metalized Glass	232270462402
3545	Res, 820 ohm, 1%, 1/16W, Metalized Glass	232270468201
3546	Res, 68K, 5%, 1/16W, Metalized Glass	319802136830
3549	Res, 3K3, 5%, 1/6W, Carbon Film	319801103320
3550	Res, 220K, 5%, 1/16W, Metalized Glass	319802132240
3551	Res, 4R7, 5%, 1/16W, Metalized Glass	319802134780
3553	Res, 39K, 5%, 1/16W, Metalized Glass	319802133930
3560	Res, 33 ohm, 5%, 1W, Metal Film	319801213390
3563	Res, 220 ohm, 5%, 1/6W, Carbon Film	319801102210
3565	Res, 27K, 5%, 1/16W, Metalized Glass	319802132730
3567	Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3568	Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3571	Res, 470 ohm, 5%, 1/10W, Metalized Glass	319802154710
3573	Res, 15K, 5%, 1/16W, Metalized Glass	319802131530
3574	Res, 82K, 5%, 1/10W, Metalized Glass	319802158230
3575	Res, 82k ohm, 1%, 1/16W, Metal Film	319803982030
3576	Res, 1K5, 1%, 1/16W, Metalized Glass	232270461502
3579	Res, 2K2, 5%, 1/16W, Metalized Glass	319802132220
3581	Res, 22K, 5%, 1/16W, Metalized Glass	319802132230
3583	Res, 5K6, 5%, 1/16W, Metalized Glass	319802135620
3585	Res, 56K, 5%, 1/16W, Metalized Glass	319802135630
3586	Res, 5K6, 5%, 1/16W, Metalized Glass	319802135620
3587	Res, 2K2, 5%, 1/16W, Metalized Glass	319802132220
3588	Res, 330K, 5%, 1/16W, Metalized Glass	319802133340
3589	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3590	Res, 82K, 5%, 1/16W, Metalized Glass	319802138230
3591	Res, 18K, 5%, 1/16W, Metalized Glass	319802131830
3592	Res, 68K, 5%, 2W	319801226830
3593	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3594	Res, 22K, 5%, 1/16W, Metalized Glass	319802132230
3595	Res, 100K, 5%, 1/16W, Metalized Glass	319802131040
3596	Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3597	Res, 220K, 5%, 1/16W, Metalized Glass	319802132240
3598	Res, 100K, 5%, 1/4W, Metalized Glass	232224153104
3599	Res, 1M5, 5%, 1/4W, Metalized Glass	232224153155
3601	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3604	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3605	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3606	Res, 56K, 5%, 1/6W, Carbon Film	319801105630
3607	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030



3608	Res, 27K, 5%, 1/16W, Metalized Glass	319802132730
3609	Res, 330 ohm, 5%, 1/16W, Metalized Glass	319802133310
3634	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3635	Res, 39K, 5%, 1/16W, Metalized Glass	319802133930
3637	Res, 47 ohm, 5%, 1/16W, Metalized Glass	319802134790
3647	Res, 33K, 5%, 1/16W, Metalized Glass	319802133330
3648	Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3649	Res, 470 ohm, 5%, 1/16W, Metalized Glass	319802134710
3650	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3690	Res, 220 ohm, 5%, 1/16W, Metalized Glass	319802132210
3984	Res, 56K, 5%, 1/6W, Carbon Film	319801105630
3985	Res, 22K, 5%, 1/16W, Metalized Glass	319802132230
3986	Res, 27K, 5%, 1/16W, Metalized Glass	319802132730
3988	Res, 5K6, 5%, 1/16W, Metalized Glass	319802135620
3989	Res, 10 ohm, 5%, 1/16W, Metalized Glass	319802131090
3991	Res, 22K, 5%, 1/16W, Metalized Glass	319802132230
3992	Res, 5K6, 5%, 1/16W, Metalized Glass	319802135620
3993	Res, 10 ohm, 5%, 1/16W, Metalized Glass	319802131090
3994	Res, 68K, 5%, 1/16W, Metalized Glass	319802136830
3995	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
4000	Res, Zero ohm, 'Chip' Jumper	319802190030
4001	Res, Zero ohm, 'Chip' Jumper	319802190030
4002	Res, Zero ohm, 'Chip' Jumper	319802190030
4003	Res, Zero ohm, 'Chip' Jumper	319802190030
4006	Res, Zero ohm, 'Chip' Jumper	319802190030
4013	Res, Zero ohm, 'Chip' Jumper	319802190030
4015	Res, Zero ohm, 'Chip' Jumper	319802190030
4116	Res, Zero ohm, 'Chip' Jumper	319802190030
4145	Res, Zero ohm, 'Chip' Jumper	319802190030
4160	Res, Zero ohm, 'Chip' Jumper	319802190030
4201	Res, Zero ohm, 'Chip' Jumper	319802190020
4209	Res, Zero ohm, 'Chip' Jumper	319802190030
4221	Res, Zero ohm, 'Chip' Jumper	319802190030
4222	Res, Zero ohm, 'Chip' Jumper	319802190030
4223	Res, Zero ohm, 'Chip' Jumper	319802190020
4226	Res, Zero ohm, 'Chip' Jumper	319802190030
4227	Res, Zero ohm, 'Chip' Jumper	319802190030
4251	Res, Zero ohm, 'Chip' Jumper	319802190030
4253	Res, Zero ohm, 'Chip' Jumper	319802190020
4254	Res, Zero ohm, 'Chip' Jumper	319802190030
4297	Res, Zero ohm, 'Chip' Jumper	319802190020
4299	Res, Zero ohm, 'Chip' Jumper	319802190030
4401	Res, Zero ohm, 'Chip' Jumper	319802190030
4418	Res, Zero ohm, 'Chip' Jumper	319802190020
4470	Res, Zero ohm, 'Chip' Jumper	319802190020
4527	Res, Zero ohm, 'Chip' Jumper	319802190030

4533		Res, Zero ohm, 'Chip' Jumper	319802190020
4540		Res, Zero ohm, 'Chip' Jumper	319802190030
4567		Res, Zero ohm, 'Chip' Jumper	319802190030
4604		Res, Zero ohm, 'Chip' Jumper	319802190030
4612		Res, Zero ohm, 'Chip' Jumper	319802190020
4614		Res, Zero ohm, 'Chip' Jumper	319802190030
4617		Res, Zero ohm, 'Chip' Jumper	319802190030
4642		Res, Zero ohm, 'Chip' Jumper	319802190030
4644		Res, Zero ohm, 'Chip' Jumper	319802190030
4646		Res, Zero ohm, 'Chip' Jumper	319802190030
4649		Res, Zero ohm, 'Chip' Jumper	319802190030
4653		Res, Zero ohm, 'Chip' Jumper	319802190030
4691		Res, Zero ohm, 'Chip' Jumper	319802190030
4692		Res, Zero ohm, 'Chip' Jumper	319802190030
4694		Res, Zero ohm, 'Chip' Jumper	319802190030
4992		Res, Zero ohm, 'Chip' Jumper	319802190020
4993		Res, Zero ohm, 'Chip' Jumper	319802190030
5001		Fixed Inductor, 100MHz, 120R	319801890030
5002		Coil, 560n	319801835670
5201		Fixed, Inductor, 100MHz, 50R	319801890010
5202		Fixed Inductor, 100MHz, 120R	319801890030
5203		Fixed Inductor, 100MHz, 120R	319801890030
5205		Fixed Inductor, 100MHz, 120R	319801890030
5206		Fixed Inductor, 100MHz, 120R	319801890030
5207		Fixed Inductor, 100MHz, 120R	319801890030
5208		Fixed, Inductor, 100MHz, 50R	319801890010
5209		Fixed Inductor, 100MHz, 120R	319801890030
5210		Fixed Inductor, 100MHz, 120R	319801890030
5211		Fixed Inductor, 100MHz, 120R	319801890030
5212		Fixed Inductor, 100MHz, 120R	319801890030
5213		Fixed Inductor, 100MHz, 120R	319801890030
5215		Fixed Inductor, 100MHz, 120R	319801890030
5216		Fixed, Inductor, 100MHz, 50R	319801890010
5401	BC	Line Choke	242253601067
5401	AD	Coil, 50uH.	310430820471
5402		TFM SIG DRIVER SD12404-02 Y	242253100057
5408	BC	COI BRIDGE W7131-003 B	242253102334
5408	AD	COI BRIDGE W7132-004 Y	242253102357
5450	BC	TFM LOT, JF0101-85038 B	242253100067
5450	A	TFM LOT JF0101-85039 B	242253100068
5450	D	TFM LOT JF0101-85040 B	242253100069
5452		Coil, 10u	319801821090
5456	BC	TFM SIG DYN FOC SD20417-07 Y	242253100078
5457		IND FXD 0805 EMI 100MHZ 60R R	242254945186
5458		IND FXD 0805 EMI 100MHZ 60R R	242254945186
5459		Coil, 560n	242253595339

5504	TFM SMT LAYER SS28411-00 B	242253100065
5506	FIL MAINS 30MH 3A DMF3530 Y	242254945783
5511	Fixed, Inductor, 100MHz, 50R	319801890010
5512	TFM SMT LAYER SS42408-00 B	242253100064
5521	Fixed, Inductor, 100MHz, 50R	319801890010
5523	Inductor, Fixed, 100Mhz, 120R	319801890070
5524	Coil, 4u7	319801874780
5526	Coil, 4u7	319801874780
5527	Coil, 4u7	319801874780
5551	Fixed, Inductor, 100MHz, 50R	319801890010
5552	Coil, 27u	242253595366
5561	Fixed, Inductor, 100MHz, 50R	319801890010
5562	Fixed, Inductor, 100MHz, 50R	319801890010
5564	FIL MAINS 4MH 2A8 DMF2404 Y	242254900408
5601	Res, Zero ohm, 'Chip' Jumper	319802190030
6001	Zener Diode, 33 volt	319801023390
6006	Zener Diode, 8.2 volt	319801058280
6106	Zener Diode, 15V	319802051590
6132	Zener Diode, 15V	319802051590
6203	Diode, Signal, BAS316	319801010630
6204	Diode, Rect, SS14	319801010710
6207	Diode, Signal, BAS316	319801010630
6209	Diode, Signal, BAT54	319801010660
6403	Diode, Rect, RGP10D	933751660673
6404	Diode, Rect, DMV1500M	932216961687
6442	Zener Diode, 10 volt	933500650133
6449	Zener Diode, 12V	319802051290
6452	Diode, Rect, RGP10D	933751660673
6453	Diode, Rect, RGP10G	933493960673
6456	Diode, Rect, BYV27-200	932212672673
6457	Diode, Rect, BYV27-200	932212672673
6458	Diode, Signal, BAS316	319801010630
6461	Diode, Rect, RGP10D	933751660673
6464	Zener Diode, 15V	319802051590
6466	Diode, Rect, RGP10D	933751660673
6467	Diode, Rect., BYV29X-500	934055559127
6471	Diode, Rect, RGP10D	933751660673
6476	Zener Diode, 6.8 volt	933500610133
6480	Zener Diode, 15 volt	934054863115
6481	Diode, Signal, BAS316	319801010630
6484	Diode, Signal, BAS316	319801010630
6487	Diode, Signal, BAS316	319801010630
6489	Diode, Signal, BAS316	319801010630
6490	Diode, Signal, BAS316	319801010630
6491	Zener Diode, 3.3V	319802053380
6500	Diode, Bridge Rect, GBU6JL-7002	932213808667

6511	Diode, Rect, RGP10D	933751660673
6512	Zener Diode, 18V	319802051890
6514	Diode, Signal, BAS316	319801010630
6531	Diode, Signal, BAS316	319801010630
6532	Diode, BAV21WS	932219745703
6533	Diode, Rect, RGP10D	933751660673
6534	Diode, Signal, BAS316	319801010630
6536	Diode, Signal, BAS316	319801010630
6537	Diode, BAV21WS	932219745703
6538	Diode, BAV21WS	932219745703
6539	Diode, Rect, SB360	319801010700
6540	Diode, Signal, BAS316	319801010630
6541	Zener Diode, 12V	319802051290
6542	Zener Diode, 6.2 volt	932212911685
6543	Diode, Signal, BAS316	319801010630
6546	DIO REC STPS10L25D	932220957687
6547	Zener Diode, 6.8V	319802056880
6548	Double Diode, High Speed, BAW56W	934026020115
6549	DIO REG SM UDZS13B	932221282685
6550	IC SARS03(LF4)	932218509682
6551	Diode, Rect, BYT28-500	933744380127
6552	DIO REC STPS10L25D	932220957687
6562	Diode, Rect, SB360	319801010700
6563	Diode, Rect, SB360	319801010700
6575	Diode, Rect, 1N5392	932200516683
6602	Diode, Signal, BAV99	319801010620
6603	Zener Diode, 2.7V	319802052780
6694	Zener Diode, 5.1V	319802055180
7200	IC SM TDA12001H1/N1B501AS	935275761557
7201	Transistor, NPN, IMX1	932205428685
7203	Transistor, PNP, BC327-25	319802043430
7204	Transistor, PNP, BC327-25	319802043430
7207	Transistor, NPN, BC847B	319801042030
7209	Transistor, FET Signal, BSH103	934054713215
7210	Transistor, FET Signal, BSH103	934054713215
7404	Transistor, FET Signal, BSH103	934054713215
7405	Transistor, NPN, BU2527DX	934049680127
7406	FET POW FQPF3N60	932216034687
7407	Transistor, NPN, PDTC144ET	319801044130
7408	Transistor, PNP, BC856B	933589730215
7451	IC E-TDA8177F	932214436687
7510	IC SM TEA1506T/N1	935272043518
7511	IC SM TEA1506T/N1	935272043518
7512	FET POW FQPF13N50C	932221806687
7513	Optic Coupler, TCET1103(G)	932214014667
7514	Transistor, NPN, BC847B	319801042030

7516		Optic Coupler, TCET1103(G)	932214014667
7525		FET POW STP6NK60ZFP	932219177687
7532		Transistor, PNP, BC857B	319801042150
7535		FET POW SM SI2307DS-E3	932219077685
7541		Transistor, PNP, BC857B	319801042150
7542		IC TL431ACZ	319801070500
7547		Transistor, NPN, PDTC143ZT	934054700215
7549		Transistor, NPN, IMX1	932205428685
7561		Transistor, NPN, PDTC143ZT	934054700215
7567		Transistor, NPN, BC847B	319801042030
7571		IC TL431ACZ	319801070500
7573		Transistor, NPN, PDTC114ET	319801044110
7575		Transistor, NPN, PDTC143ZT	934054700215
7576		Transistor, NPN, BC847BW	319801042310
7577		Transistor, NPN, BC847BW	319801042310
7583		Transistor, NPN, BC847BW	319801042310
7584		Transistor, NPN, BC847BW	319801042310
7585		Transistor, PNP, BC857B	319801042150
7601		IC, M24C16-WBN6	932214725682
7604		Transistor, NPN, BC847B	319801042030
7605		Transistor, PNP, BC327-25	319802043430
7606		Transistor, NPN, BC847B	319801042030
7608		Transistor, NPN, PMBT2369	319801043360
7990		IC, TDA2616Q/N1	935040440112
7991		Transistor, NPN, BC847B	319801042030
7992		Transistor, NPN, BC847B	319801042030
8280		Cable, 5 Pin, 680mm	313911038861

#### **CRT PANEL**

CBA	A	CRT Board Assy	313918885321
CBA	BC	CRT Board Assy	313918885661
CBA	D	CRT Board Assy	313926714581
1054	A	PNL-CRT-N.DAF-16MHZ-26WR ATSC	313918885331
1054	BC	PNL-CRT-DAF-16MHZ ATSC	313918885671
1054	D	PNL-CRT-N.DAF-16MHZ-32RF ATSC	313926714591
1335	AD	Ground Terminal Assembly 340mm	313912108883
1340		Connector, 5 Pin	242202510428
1351		Connector, 7 Pin	242202511244
1362		Connector, 3 Pin	242202516601
1381		Connector, 3 Pin	241202000725
2313		Cap, 47u, 20%, 250V, Electrolytic	202001293786
2317	▲	Cap, 4n7, 5%, 1600V, Polypropylene	222237590145
2319		Cap, 10n, +80/-20%, 50V, Ceramic	319801921030
2330		Cap, 100n, 10%, 16V, Ceramic	319801731040
2331		Cap, 100n, 10%, 16V, Ceramic	319801731040
2332		Cap, 4n7, 10%, 50V, Ceramic	319801734720

2333	Cap, 680p, 5%, 25V, Ceramic	319801636810
2334	Cap, 100n, 10%, 16V, Ceramic	319801731040
2335	Cap, 12p, 5%, 50V, Ceramic	319801631290
2336	Cap, 33n, 10%, 16V, Ceramic	319801733330
2337	Cap, 12p, 5%, 50V, Ceramic	319801631290
2338	Cap, 100n, 10%, 250V, Metalized Polyester	202231800109
2339	Cap, 100n, 10%, 250V, Metalized Polyester	202231800109
2340	Cap, 100n, 10%, 250V, Metalized Polyester	202231800109
2341	Cap, 12p, 5%, 50V, Ceramic	319801631290
2343	Cap, 680p, 5%, 25V, Ceramic	319801636810
2344	Cap, 4n7, 10%, 50V, Ceramic	319801734720
2346	Cap, 33n, 10%, 16V, Ceramic	319801733330
2347	Cap, 470u, 20%, 16V, Electrolytic	319802524710
2352	Cap, 4n7, 10%, 50V, Ceramic	319801734720
2353	Cap, 680p, 5%, 25V, Ceramic	319801636810
2355	Cap, 22p, 5%, 50V, Ceramic	319801632290
2356	Cap, 33n, 10%, 16V, Ceramic	319801733330
2357	Cap, 10n, 10%, 50V, Ceramic	319801731030
2358	Cap, 22p, 5%, 50V, Ceramic	319801632290
2360	Cap, 22p, 5%, 50V, Ceramic	319801632290
2361	Cap, 1n, 10%, 50V, Ceramic	319801731020
2363	Cap, 47u, 20%, 200V, Electrolytic	202001293486
2364	Cap, 4n7, 10%, 250V, Ceramic	202055790732
2365	Cap, 4n7, 10%, 50V, Ceramic	319801734720
2367	Cap, 100n, 10%, 16V, Ceramic	319801731040
2368	Cap, 100n, 10%, 100V, Metalized Polyester	222236585104
2370	Cap, 100n, 10%, 16V, Ceramic	319801731040
2381	Cap, 47n, 10%, 50V, Polyester	319801404730
2382	Cap, 100n, 10%, 16V, Ceramic	319801731040
2383	Cap, 680p, 5%, 50V, Ceramic	319801606810
2384	Cap, 100n, 10%, 16V, Ceramic	319801731040
2385	Cap, 100n, 10%, 16V, Ceramic	319801731040
2387	Cap, 10n, 10%, 50V, Ceramic	319801731030
2389	Cap, 100n, 10%, 16V, Ceramic	319801731040
2390	Cap, 10u, 20%, 16V, Electrolytic	319802821090
2391	Cap, 100n, 10%, 16V, Ceramic	319801731040
2392	Cap, 4n7, 10%, 50V, Ceramic	319801734720
2393	Cap, 220p, 10%, 50V, Ceramic	319801732210
3305	Res, 1 ohm, 5%, 1/3W, Metal Film	230620403108
3309	Res, 220 ohm, 5%, 1/16W, Metalized Glass	319802132210
3310	Res, 22 ohm, 5%, 1/16W, Metalized Glass	319802132290
3311	Res, 22 ohm, 5%, 1/16W, Metalized Glass	319802132290
3317	Res, 1K, 5%, 1/6W, Carbon Film	319801101020
3320	Res, 470 ohm, 5%, 1/16W, Metalized Glass	319802134710
3321	Res, 220 ohm, 5%, 1/16W, Metalized Glass	319802132210
3322	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010



BC



3323		Res, 470 ohm, 5%, 1/16W, Metalized Glass	319802134710
3324		Res, 220 ohm, 5%, 1/16W, Metalized Glass	319802132210
3325		Res, 1K8, 5%, 1/16W, Metalized Glass	319802131820
3326		Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3327		Res, 220 ohm, 5%, 1/16W, Metalized Glass	319802132210
3328		Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3329		Res, 470 ohm, 5%, 1/16W, Metalized Glass	319802134710
3331		Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
3332		Res, 1K, 20%, 1/2W, Carbon Film	319801301020
3333		Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
3334		Res, 1K, 20%, 1/2W, Carbon Film	319801301020
3335		Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
3336		Res, 1K, 20%, 1/2W, Carbon Film	319801301020
3337		Res, 120K, 5%, 1/4W, Carbon Film	212210102074
3338		Res, 2K7, 5%, 1/16W, Metalized Glass	319802132720
3339		Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3340		Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3341		Res, 120K, 5%, 1/4W, Carbon Film	212210102074
3342		Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3343		Res, 2K7, 5%, 1/16W, Metalized Glass	319802132720
3344		Res, 1K, 5%, 1/6W, Carbon Film	319801101020
3345		Res, 33 ohm, 1%, 1/16W, Metal Film	319803933090
3347		Res, 1K5, 20%, 1/2W, Carbon Film	319801301520
3350		Res, 6.8K, 5%, 1/6W, Carbon Film	319801106820
3351		Res, 150 ohm, 5%, 1/2W, Metal Film	230620703151
3352		Res, 120K, 5%, 1/4W, Carbon Film	212210102074
3353		Res, 2K7, 5%, 1/16W, Metalized Glass	319802132720
3354		Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3355		Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3357		VDR 1mA/18V, 35V Max	212255200004
3361	AD	Res, 680 ohm, 5%, 1/16W, Metalized Glass	319802136810
3361	BC	Res, 680 ohm, 5%, 1/10W, Metalized Glass	319802156810
3362		Res, 10 ohm, 5%, 1/3W, Metal Film	230620403109
3363		Res, 560 ohm, 5%, 1/16W, Metalized Glass	319802135610
3364		Res, 1R5, 5%, 1/8W, Metalized Glass	232273061158
3365		Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3366		Res, 68K, 5%, 1/16W, Metalized Glass	319802136830
3367		Res, 68K, 5%, 1/6W, Carbon Film	319801106830
3368		Res, 560 ohm, 5%, 1/16W, Metalized Glass	319802135610
3369		Res, 150K, 5%, 1/16W, Metalized Glass	319802131540
3370		Res, 1R5, 5%, 1/8W, Metalized Glass	232273061158
3371		Res, 2K2, 5%, 1/6W, Carbon Film	319801102220
3372		Res, 150K, 5%, 1/16W, Metalized Glass	319802131540
3373		Res, 4K7, 5%, 5W, Metal Film	232225741472
3374		Res, 10 ohm, 5%, 1/3W, Metal Film	232220533109
3377		Res, 1K8, 5%, 1/16W, Metalized Glass	319802131820

3378		Res, 330 ohm, 5%, 1/16W, Metalized Glass	319802133310
3379		Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3380		Res, 22K, 5%, 1/16W, Metalized Glass	319802132230
3381		Res, 33K, 5%, 1/16W, Metalized Glass	319802133330
3382		Res, 8K2, 5%, 1/16W, Metalized Glass	319802138220
3383		Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3390	BC	VDR 1mA/18V, 35V Max	212255200004
3394		Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3395		Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3396		Res, 1K8, 5%, 1/16W, Metalized Glass	319802131820
3398		Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3399		Res, 270 ohm, 5%, 1/3W, Metal Film	230620403271
3999	A	Res, 2K2, 5%, 1/16W, Metalized Glass	319802132220
3999	D	Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3999	BC	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
4321		Res, Zero ohm, 'Chip' Jumper	319802190030
5303		Coil, 5u6	319801815680
5304		Fixed, Inductor, 100MHz, 50R	319801890010
5308		Coil, 5u6	319801815680
5324		Fixed, Inductor, 100MHz, 50R	319801890010
5361		Fixed, Inductor, 100MHz, 80 ohm	319801890020
5362		Coil, 1u	319801831080
6307		Zener Diode, 6.8V	319802056880
6325		Zener Diode, 3.3 volt	319801023380
6331		Diode, BAV21WS	932219745703
6332		Diode, BAV21WS	932219745703
6333		Diode, BAV21WS	932219745703
6334		Zener Diode, 3.3V	319802053380
6361		Diode, Signal, BAV99	319801010620
6362		Diode, Signal, BAS316	319801010630
6363		Diode, Signal, BAV99	319801010620
7330		IC TDA6111Q/N4	935173950112
7331		Transistor, NPN, BC847B	319801042030
7332		TRA SIG TBC328-40	319801040190
7333		TRA SIG TBC338-40	319801040180
7340		IC TDA6111Q/N4	935173950112
7350		IC TDA6111Q/N4	935173950112
7351		Transistor, NPN, BC847B	319801042030
7352		Transistor, NPN, BC847B	319801042030
7353		Transistor, NPN, BC847B	319801042030
7361		Transistor, NPN, BF840	933792670215
7362		Transistor, PNP, BF824	933722350215
7363		Transistor, KTB631KY	932219505687
7364		Transistor, KTD600KY	932219514687
7365		Transistor, NPN, BF840	933792670215
7366		IC TDA8941P/N1	935262851112

**ASSY-DEFL-CTRL-NA**

CBA	BC	Defl - Control Assy	313926712641
1250	BC	Connector, 12 Pin	242202516219
1251	BC	Connector, 10 Pin	242202518582
1400	BC	Connector, 3 Pin	242202509191
1401	BC	Connector, 8 Pin	242202512492
1402	BC	Ceramic Resonator 503KHZ5	242254098458
1403	BC	Connector, 6 Pin	242202510738
1404	BC	Connector, 5 Pin	242202509364
1405	BC	Connector, 3 Pin	242202509191
2402	BC	Cap, 1u, +80/-20%, 10V, Ceramic	319801741050
2403	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2405	BC	Cap, 22u, 20%, 16V, Electrolytic	319802822290
2406	BC	Cap, 470u, 20%, 16V, Electrolytic	202001200003
2407	BC	Cap, 470u, 20%, 16V, Electrolytic	202001200003
2408	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2409	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2410	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2412	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2413	BC	Cap, 470u, 20%, 16V, Electrolytic	202001200003
2414	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2415	BC	Cap, 2u2, +80/-20%, 10V, Ceramic	319801722250
2416	BC	Cap, 1n, 5%, 25V, Ceramic	319801631020
2418	BC	Cap, 47n, 10%, 16V, Ceramic	319801734730
2419	BC	Cap, 2n2, 10%, 50V, Ceramic	319801732220
2420	▲ BC	Cap, 1000uF, 20%, 16V, Electrolytic	319803821020
2421	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2422	BC	Cap, 470n, +80/-20%, 10V, Ceramic	319801744740
2423	BC	Cap, 4u7, 10%, 6v3, Ceramic	202255205731
2424	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2425	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2426	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2427	BC	Cap, 470n, +80/-20%, 10V, Ceramic	319801744740
2428	BC	Cap, 22n, 10%, 50V, Polyester	319801402230
2429	BC	Cap, 1u, 10%, 50V, Polyester	319801401050
2431	BC	Cap, 1n, 5%, 25V, Ceramic	319801631020
2432	BC	Cap, 1u, 10%, 50V, Polyester	319801401050
2433	BC	Cap, 2u2, 10%, 10V, Ceramic	202055296702
2434	BC	Cap, 2u2, 10%, 10V, Ceramic	202055296702
2435	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2436	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2437	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2438	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2439	BC	Cap, 2u2, 10%, 10V, Ceramic	202055296702
2441	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040

2442	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2443	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2444	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2446	BC	Cap, 1u, +80/-20%, 16V, Ceramic	319801721050
2447	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2448	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2449	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2450	BC	Cap, 1u, +80/-20%, 16V, Ceramic	319801721050
2451	BC	Cap, 100n, 10%, 16V, Ceramic	319801731040
2452	BC	Cap, 330p, 5%, 50V, Ceramic	319801633310
2453	BC	Cap, 10n, 10%, 50V, Ceramic	319801731030
2454	BC	Cap, 10p, 5%, 50V, Ceramic	319801631090
2455	BC	Cap, 1u, +80/-20%, 16V, Ceramic	319801721050
2456	BC	Cap, 10p, 5%, 50V, Ceramic	319801631090
2457	BC	Cap, 1u, +80/-20%, 16V, Ceramic	319801721050
2458	BC	Cap, 1u, +80/-20%, 16V, Ceramic	319801721050
2459	BC	Cap, 10p, 5%, 50V, Ceramic	319801631090
2460	BC	Cap, 10n, 10%, 50V, Ceramic	319801731030
2461	BC	Cap, 100u, 20%, 16V, Electrolytic	319803041010
2462	BC	Cap, 100u, 20%, 16V, Electrolytic	319803041010
2463	BC	Cap, 10n, 10%, 50V, Ceramic	319801731030
2464	BC	Cap, 10n, 10%, 50V, Ceramic	319801731030
2465	BC	Cap, 10n, 10%, 50V, Ceramic	319801731030
2466	BC	Cap, 10u, 20%, 16V, Electrolytic	319803041090
2487	BC	Cap, 47p, 5%, 50V, Ceramic	319801634790
2488	BC	Cap, 47p, 5%, 50V, Ceramic	319801634790
2489	BC	Cap, 47p, 5%, 50V, Ceramic	319801634790
2490	BC	Cap, 10u, 20%, 16V, Electrolytic	319803041090
2497	BC	Cap, 47p, 5%, 50V, Ceramic	319801634790
2498	BC	Cap, 47p, 5%, 50V, Ceramic	319801634790
2499	BC	Cap, 47p, 5%, 50V, Ceramic	319801634790
3400	BC	Res, 240 ohm, 1%, 1/8W, Metalized Glass	232273462401
3401	BC	Res, 2K2, 5%, 1/16W, Metalized Glass	319802132220
3403	BC	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3404	BC	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3405	BC	Res, 240 ohm, 1%, 1/8W, Metalized Glass	232273462401
3406	BC	Res, 240 ohm, 1%, 1/8W, Metalized Glass	232273462401
3407	BC	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3408	BC	Res, 390K, 5%, 1/16W, Metalized Glass	232270260394
3409	BC	Res, 120K, 5%, 1/16W, Metalized Glass	232270260124
3410	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3411	BC	Res, 82K, 5%, 1/16W, Metalized Glass	319802138230
3412	BC	Res, 120K, 5%, 1/16W, Metalized Glass	232270260124
3413	BC	Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3414	BC	Res, 150K, 5%, 1/16W, Metalized Glass	319802131540
3415	BC	Res, 220K, 5%, 1/16W, Metalized Glass	319802132240

3416	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3417	BC	Res, 270 ohm, 5%, 1/16W, Metalized Glass	319802132710
3418	BC	Res, 100K, 5%, 1/16W, Metalized Glass	319802131040
3419	BC	Res, 2K7, 5%, 1/16W, Metalized Glass	319802132720
3420	BC	Res, 20K, 5%, 1/16W, Metalized Glass	232270260203
3421	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3422	BC	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3423	BC	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3424	BC	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3425	BC	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3426	BC	Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3427	BC	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3428	BC	Res, 4K7, 5%, 1/16W, Metalized Glass	319802134720
3429	BC	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3430	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3431	BC	Res, 2K, 1%, 1/16W, Metalized Glass	232270462002
3433	BC	Res, 1K2, 5%, 1/16W, Metalized Glass	319802131220
3434	BC	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3435	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3436	BC	Res, 180 ohm, 5%, 1/16W, Metalized Glass	319802131810
3437	BC	Res, 2K7, 5%, 1/16W, Metalized Glass	319802132720
3438	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3439	BC	Res, 470 ohm, 5%, 1/16W, Metalized Glass	319802134710
3440	BC	Res, 2K, 1%, 1/16W, Metalized Glass	232270462002
3441	BC	Res, 150K, 5%, 1/16W, Metalized Glass	319802131540
3442	BC	Res, 33K, 5%, 1/16W, Metalized Glass	319802133330
3443	BC	Res, 1K, 1%, 1/16W, Metalized Glass	232270461002
3444	BC	Res, 56K, 5%, 1/16W, Metalized Glass	319802135630
3445	BC	Res, 220 ohm, 5%, 1/16W, Metalized Glass	319802132210
3446	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3447	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3448	BC	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3449	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3450	BC	Res, 220 ohm, 5%, 1/16W, Metalized Glass	319802132210
3451	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3452	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3453	BC	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3454	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3455	BC	Res, 220 ohm, 5%, 1/16W, Metalized Glass	319802132210
3456	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3457	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3458	BC	Res, 10K, 5%, 1/16W, Metalized Glass	319802131030
3459	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3460	BC	Res, 220 ohm, 5%, 1/16W, Metalized Glass	319802132210
3461	BC	Res, 330K, 5%, 1/16W, Metalized Glass	319802133340
3462	BC	Res, 68K, 5%, 1/16W, Metalized Glass	319802136830

3463	BC	Res, 68K, 5%, 1/16W, Metalized Glass	319802136830
3464	BC	Res, 100K, 5%, 1/16W, Metalized Glass	319802131040
3465	BC	Res, 20K, 5%, 1/16W, Metalized Glass	232270260203
3466	BC	Res, 100K, 5%, 1/16W, Metalized Glass	319802131040
3467	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3468	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3469	BC	Res, 220K, 5%, 1/16W, Metalized Glass	319802132240
3470	BC	Res, 220K, 5%, 1/16W, Metalized Glass	319802132240
3471	BC	Res, 75 ohm, 5%, 1/16W, Metalized Glass	319802137590
3472	BC	Res, 3K9, 5%, 1/16W, Metalized Glass	319802133920
3473	BC	Res, 33K, 5%, 1/16W, Metalized Glass	319802133330
3474	BC	Res, 6K8, 5%, 1/16W, Metalized Glass	319802136820
3482	BC	Res, 24K, 1%, 1/16W, Metalized Glass	232270462403
3483	BC	Res, 2K, 1%, 1/16W, Metalized Glass	232270462002
3484	BC	Res, 47K, 5%, 1/16W, Metalized Glass	319802134730
3486	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3487	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3488	BC	Res, 3K3, 5%, 1/16W, Metalized Glass	319802133320
3489	BC	Res, 2K2, 5%, 1/16W, Metalized Glass	319802132220
3490	BC	Res, 47 ohm, 5%, 1/16W, Metalized Glass	319802134790
3491	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3492	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3493	BC	Res, 100 ohm, 5%, 1/16W, Metalized Glass	319802131010
3494	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3495	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3496	BC	Res, 1K, 5%, 1/16W, Metalized Glass	319802131020
3500	BC	Res, 24K, 1%, 1/16W, Metalized Glass	232270462403
3501	BC	Res, 24K, 1%, 1/16W, Metalized Glass	232270462403
3502	BC	Res, 24K, 1%, 1/16W, Metalized Glass	232270462403
3503	BC	Res, 2K, 1%, 1/16W, Metalized Glass	232270462002
3504	BC	Res, 75 ohm, 5%, 1/16W, Metalized Glass	319802137590
3505	BC	Res, 75 ohm, 5%, 1/16W, Metalized Glass	319802137590
3506	BC	Res, 75 ohm, 5%, 1/16W, Metalized Glass	319802137590
3507	BC	Res, 240 ohm, 1%, 1/8W, Metalized Glass	232273462401
4400	BC	Res, Zero ohm, 'Chip' Jumper	319802190030
4402	BC	Res, Zero ohm, 'Chip' Jumper	319802190030
4488	BC	Res, Zero ohm, 'Chip' Jumper	319802190030
4489	BC	Res, Zero ohm, 'Chip' Jumper	319802190030
4490	BC	Res, Zero ohm, 'Chip' Jumper	319802190030
4491	BC	Res, Zero ohm, 'Chip' Jumper	319802190030
4492	BC	Res, Zero ohm, 'Chip' Jumper	319802190030
4493	BC	Res, Zero ohm, 'Chip' Jumper	319802190030
4494	BC	Res, Zero ohm, 'Chip' Jumper	319802190030
4495	BC	Res, Zero ohm, 'Chip' Jumper	319802190030
4499	BC	Res, Zero ohm, 'Chip' Jumper	319802190030
5400	BC	Fixed Inductor 100MHZ 220R	242254944197

5401	BC	Fixed Inductor 100MHZ 220R	242254944197
5402	BC	Fixed Inductor 100MHZ 220R	242254944197
5403	BC	Fixed Inductor 100MHZ 220R	242254944197
5496	BC	Coil, 470n	319801834770
5497	BC	Coil, 470n	319801834770
5498	BC	Coil, 470n	319801834770
6400	BC	Zener Diode, 8.2V	319802058280
6402	BC	Diode, Signal, BAS316	319801010630
6404	BC	Zener Diode, 9.1V	932215008685
6405	BC	Zener Diode, 6.8V	319802056880
6406	BC	Diode, Signal, BAS316	319801010630
6408	BC	Diode, Signal, BAS316	319801010630
6409	BC	DIO REG SM UDZS2.0B	932221993685
6410	BC	Zener Diode, 8.2V	319802058280
7402	BC	IC SM TA1360AFG	932221351668
7403	BC	Transistor, NPN, BC847B	319801042030
7404	BC	IC SM TA1317AFG	932221353668
7405	BC	Transistor, NPN, BC847B	319801042030
7406	BC	Transistor, NPN, BC847B	319801042030
7407	BC	Transistor, PNP, BC857B	319801042150
7408	BC	Transistor, NPN, BC847B	319801042030
7409	BC	Transistor, PNP, BC857B	319801042150
7410	BC	Transistor, PNP, BC857B	319801042150
7411	BC	Transistor, PNP, BC857B	319801042150
7412	BC	Transistor, NPN, IMX1	932205428685
7413	BC	Transistor, NPN, IMX1	932205428685
7414	BC	Transistor, PNP, BC857B	319801042150
7415	BC	Transistor, PNP, BC857B	319801042150
7416	BC	Transistor, NPN, BC847B	319801042030
7417	BC	Transistor, NPN, BC847B	319801042030
7423	BC	IC SM LM2941S-NOPB	932222110668
7490	BC	Transistor, NPN, BC847B	319801042030
7491	BC	Transistor, NPN, BC847B	319801042030
7492	BC	Transistor, NPN, BC847B	319801042030

#### **FRONT INTERFACE PANEL**

CBA	D	Front Interface Panel Assy	313918806011
CBA	ABC	Front Interface Panel Assy	313918887291
1060	D	FRNT.INTERF-LS.PNL-NA	313918804761
1109	ABC	SWI SIGN 2P 0.1A 30V SPUN19 B	242212802909
1606	D	Switch, Tactile	242212802742
1693		Connector, 6 Pin	242202510738
2101	ABC	Cap, 220u, 20%, 25V, Electrolytic	319802532210
2102	ABC	Cap, 1u, 10%, 50V, Polyester	319801401050
2103	ABC	Cap, 100n, 10%, 50V, Polyester	319801401040
2691	D	Cap, 220u, 20%, 25V, Electrolytic	319802532210



2692	D	Cap, 1u, +80/-20%, 10V, Ceramic	319801741050
2698	D	Cap, 100n, 10%, 50V, Polyester	319801401040
3111	ABC	Res, 1K2, 5%, 1/6W, Carbon Film	319801101220
3112	ABC	Res, 220 ohm, 5%, 1/6W, Carbon Film	319801102210
3113	ABC	Res, 4K7, 5%, 1/6W, Carbon Film	319801104720
3114	ABC	Res, 150K, 5%, 1/6W, Carbon Film	319801101540
3691	D	Res, 1K2, 5%, 1/6W, Carbon Film	319801101220
3693	D	Res, 220 ohm, 5%, 1/6W, Carbon Film	319801102210
3694	D	Res, 4K7, 5%, 1/6W, Carbon Film	319801104720
3696	D	Res, 150K, 5%, 1/16W, Metalized Glass	319802131540
4601	D	Res, Zero ohm, 'Chip' Jumper	319802190030
6101	ABC	LED	932218569682
6102	ABC	IR Receiver, TSOP34836UH1B	932220678667
6103	ABC	OPT SEN LTR-301	932219736682
6691	D	LED	932218569682
6692	D	IR Receiver, TSOP34836UH1B	932220678667
6693	D	OPT SEN LTR-301	932219736682

#### **SIDE A/V PANEL**

CBA	ABC	Side A/V Panel Assy	313926715631
CBA	D	Side A/V Panel Assy	313926715661
1251	D	4 Pin Cinch Socket	242202605659
1252		Connector, 7 Pin	242202511244
1254		Connector, 5 Pin	242202512481
1278	D	Connector, 4 Pin	242202512479
1278	ABC	Connector, 4 Pin	242202515847
1280	ABC	Connector, 3 Pin	241202000725
1281	ABC	Connector, 3 Pin	242202516382
2171		Cap, 330p, 10%, 50V, Ceramic	319801913310
2172		Cap, 330p, 10%, 50V, Ceramic	319801913310
2173		Cap, 330p, 10%, 50V, Ceramic	319801913310
2174		Cap, 330p, 10%, 50V, Ceramic	319801913310
2175		Cap, 2u2, 20%, 50V, Electrolytic	319802952280
2176		Cap, 100n, 10%, 16V, Ceramic	319801731040
2178		Cap, 470p, 10%, 50V, Ceramic	319801734710
2180		Cap, 2u2, 20%, 50V, Electrolytic	319802952280
2181		Res, Zero ohm, 'Chip' Jumper	319802190030
3150		Res, 47K, 5%, 1/6W, Carbon Film	319801104730
3151		Res, 22K, 5%, 1/6W, Carbon Film	319801102230
3152		Res, 47K, 5%, 1/6W, Carbon Film	319801104730
3153		Res, 22K, 5%, 1/6W, Carbon Film	319801102230
3154		Res, 75 ohm, 5%, 1/6W, Carbon Film	319801107590
3155	D	Res, 75 ohm, 5%, 1/6W, Carbon Film	319801107590
3156		Res, 820 ohm, 5%, 1/6W, Carbon Film	319801108210
3157		Res, 820 ohm, 5%, 1/6W, Carbon Film	319801108210
3158		Res, 75 ohm, 5%, 1/6W, Carbon Film	319801107590

3159		Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
3160		Res, 100 ohm, 5%, 1/6W, Carbon Film	319801101010
4180	D	Res, Zero ohm, 'Chip' Jumper	319802190020

#### TOP CONTROL PANEL

CBA	ABC	Top Control Panel Assy	313918887281
CBA	D	Top Control Panel Assy	313926710901
1010	D	Connector, 3 Pin	242202516601
1011	D	Switch, Tactile	242212802742
1012	D	Switch, Tactile	242212802742
1013	D	Switch, Tactile	242212802742
1014	D	Switch, Tactile	242212802742
1701	ABC	Switch, Tactile	242212802742
1702	ABC	Switch, Tactile	242212802742
1703	ABC	Switch, Tactile	242212802742
1704	ABC	Switch, Tactile	242212802742
1705	ABC	Switch, Tactile	242212802742
3008	ABC	Res, 150 ohm, 5%, 1/10W, Metalized Glass	319802151510
3010	ABC	Res, 390 ohm, 5%, 1/10W, Metalized Glass	319802153910
3011	D	Res, 150 ohm, 5%, 1/16W, Metalized Glass	319802131510
3011	ABC	Res, 560 ohm, 5%, 1/10W, Metalized Glass	319802155610
3012	D	Res, 390 ohm, 5%, 1/16W, Metalized Glass	319802133910
3013	D	Res, 1K8, 1%, 1/16W, Metalized Glass	232270461802
3013	ABC	Res, 1K8, 5%, 1/10W, Metalized Glass	319802151820
3014	ABC	Res, 820 ohm, 5%, 1/10W, Metalized Glass	319802158210
3014	D	Res, Zero ohm, 'Chip' Jumper	319802190030
3015	D	Res, 820 ohm, 1%, 1/16W, Metalized Glass	232270468201
3016	D	Res, Zero ohm, 'Chip' Jumper	319802190030
9000	ABC	Res, Zero ohm, 'Chip' Jumper	319802190020
9001	ABC	Res, Zero ohm, 'Chip' Jumper	319802190020
9002	ABC	Res, Zero ohm, 'Chip' Jumper	319802190020